

PPC-V106

**Fanless Vehicle Mounted
Terminal with 10.4" TFT LCD**

User's Manual

Copyright

This document is copyrighted, © 2004. All rights are reserved. The original manufacturer reserves the right to make improvements to the products described in this manual at any time without notice.

No part of this manual may be reproduced, copied, translated or transmitted in any form or by any means without the prior written permission of the original manufacturer. Information provided in this manual is intended to be accurate and reliable. However, the original manufacturer assumes no responsibility for its use, nor for any infringements upon the rights of third parties that may result from such use.

Acknowledgements

Award is a trademark of Award Software International, Inc.

VIA is a trademark of VIA Technologies, Inc.

IBM, PC/AT, PS/2 and VGA are trademarks of International Business Machines Corporation.

Intel and Pentium are trademarks of Intel Corporation.

Microsoft Windows® is a registered trademark of Microsoft Corp.

RTL is a trademark of Realtek Semi-Conductor Co., Ltd.

ESS is a trademark of ESS Technology, Inc.

UMC is a trademark of United Microelectronics Corporation.

SMI is a trademark of Silicon Motion, Inc.

Creative is a trademark of Creative Technology LTD.

All other product names or trademarks are properties of their respective owners.

For more information on this and other Advantech products, please visit our websites at: **<http://www.advantech.com>**

<http://www.advantech.com.tw>

For technical support and service, please visit our support website at:

<http://service.advantech.com.tw/eservice>

This manual is for the PPC-V106.

Part No. 2006V10630

2nd. Edition

Printed in Taiwan

April 2005

FCC Class B

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential environment. This equipment generates, uses and can radiate radio frequency energy. If not installed and used in accordance with this user's manual, it may cause harmful interference to radio communications. Note that even when this equipment is installed and used in accordance with this user's manual, there is still no guarantee that interference will not occur. If this equipment is believed to be causing harmful interference to radio or television reception, this can be determined by turning the equipment on and off. If interference is occurring, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver
- Connect the equipment to a power outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Warning! *Any changes or modifications made to the equipment which are not expressly approved by the relevant standards authority could void your authority to operate the equipment.*



Packing List

Before you begin installing your card, please make sure that the following materials have been shipped:

- PPC-V106 series panel PC
- Accessories for PPC-V106
 - Warranty card
 - Power cord:
 - For AC Model: US type AC power cord.
 - For DC Model: DC power inlet cable (180cm)
 - "Drivers, Utilities and User Manual" CD-ROM
 - Packet of screws

If any of these items are missing or damaged, contact your distributor or sales representative immediately.

Additional Information and Assistance

- Step 1. Visit the Advantech web site at **www.advantech.com** or **www.advantech.com.tw** where you can find the latest information about the product.
- Step 2. Contact your distributor, sales representative, or Advantech's customer service center for technical support if you need additional assistance. Please have the following information ready before you call:
- Product name and serial number
 - Description of your peripheral attachments
 - Description of your software (operating system, version, application software, etc.)
 - A complete description of the problem
 - The exact wording of any error messages

Warning!



1. Input voltage rated: Input voltage rated :

AC model: 100-240 Vac, 50/60Hz, 2-1.5A.

DC model

a. 19-36 Vdc

b. 11.2-18 Vdc

c. 40-58 Vdc

2. Use a 3 V @ 195 mA lithium battery

3. Packing: please carry the unit with both hands, handle with care

4. Maintenance: to properly maintain and clean the surfaces, use only approved products or clean with a dry applicator

5. CompactFlash: Turn off power before inserting or removing CompactFlash storage card.

Contact information:

Our European representative:

Advantech Europe GmbH

Kolberger Straße 7

D-40599 Düsseldorf, Germany

Tel: 49-211-97477350

Fax: 49-211-97477300

Safety Instructions

1. Read these safety instructions carefully.
2. Keep this User's Manual for later reference.
3. Disconnect this equipment from any AC outlet before cleaning. Use a damp cloth. Do not use liquid or spray detergents for cleaning.
4. For plug-in equipment, the power outlet socket must be located near the equipment and must be easily accessible.
5. Keep this equipment away from humidity.
6. Put this equipment on a reliable surface during installation. Dropping it or letting it fall may cause damage.
7. The openings on the enclosure are for air convection. Protect the equipment from overheating. **DO NOT COVER THE OPENINGS.**
8. Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
9. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
10. All cautions and warnings on the equipment should be noted.
11. If the equipment is not used for a long time, disconnect it from the power source to avoid damage by transient overvoltage.
12. Never pour any liquid into an opening. This may cause fire or electrical shock.
13. Never open the equipment. For safety reasons, the equipment should be opened only by qualified service personnel.
14. If one of the following situations arises, get the equipment checked by service personnel:
 - a. The power cord or plug is damaged.
 - b. Liquid has penetrated into the equipment.
 - c. The equipment has been exposed to moisture.
 - d. The equipment does not work well, or you cannot get it to work according to the user's manual.
 - e. The equipment has been dropped and damaged.
 - f. The equipment has obvious signs of breakage.
15. **DO NOT LEAVE THIS EQUIPMENT IN AN ENVIRONMENT WHERE THE STORAGE TEMPERATURE MAY GO BELOW -20° C (-4° F) OR ABOVE 60° C (140° F). THIS COULD DAMAGE THE EQUIPMENT. THE EQUIPMENT SHOULD BE IN A CONTROLLED ENVIRONMENT.**
16. **CAUTION: DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE RECOMMENDED BY THE MANUFACTURER, DISCARD USED BATTERIES ACCORDING TO THE MANUFACTURER'S INSTRUCTIONS.**

The sound pressure level at the operator's position according to IEC 704-1:1982 is no more than 70 dB (A).

DISCLAIMER: This set of instructions is given according to IEC 704-1. Advantech disclaims all responsibility for the accuracy of any statements contained herein.

Wichtige Sicherheitshinweise

1. Bitte lesen sie Sich diese Hinweise sorgfältig durch.
2. Heben Sie diese Anleitung für den späteren Gebrauch auf.
3. Vor jedem Reinigen ist das Gerät vom Stromnetz zu trennen. Verwenden Sie Keine Flüssig-oder Aerosolreiniger. Am besten dient ein angefeuchtetes Tuch zur Reinigung.
4. Die NetzanschlusSteckdose soll nahe dem Gerät angebracht und leicht zugänglich sein.
5. Das Gerät ist vor Feuchtigkeit zu schützen.
6. Bei der Aufstellung des Gerätes ist auf sicheren Stand zu achten. Ein Kippen oder Fallen könnte Verletzungen hervorrufen.
7. Die Belüftungsöffnungen dienen zur Luftzirkulation die das Gerät vor überhit-zung schützt. Sorgen Sie dafür, daB diese Öffnungen nicht abgedeckt werden.
8. Beachten Sie beim. AnschluB an das Stromnetz die AnschluBwerte.
9. Verlegen Sie die Netzanschlubleitung so, daB niemand darüber fallen kann. Es sollte auch nichts auf der Leitung abgestellt werden.
10. Alle Hinweise und Warnungen die sich am Geräten befinden sind zu beachten.
11. Wird das Gerät über einen längeren Zeitraum nicht benutzt, sollten Sie es vom Stromnetz trennen. Somit wird im Falle einer Überspannung eine Beschädi-gung vermieden.
12. Durch die Lüftungsöffnungen dürfen niemals Gegenstände oder Flüssigkeiten in das Gerät gelangen. Dies könnte einen Brand bzw. elektrischen Schlag aus-lösen.
13. Öffnen Sie niemals das Gerät. Das Gerät darf aus Gründen der elektrischen Sicherheit nur von autorisiertem Servicepersonal geöffnet werden.
14. Wenn folgende Situationen auftreten ist das Gerät vom Stromnetz zu trennen und von einer qualifizierten Servicestelle zu überprüfen:
 - a - Netzkabel oder Netzstecker sind beschädigt.
 - b - Flüssigkeit ist in das Gerät eingedrungen.
 - c - Das Gerät war Feuchtigkeit ausgesetzt.
 - d - Wenn das Gerät nicht der Bedienungsanleitung entsprechend funktioniert oder Sie mit Hilfe dieser Anleitung keine Verbesserung erzielen.
 - e - Das Gerät ist gefallen und/oder das Gehäuse ist beschädigt.
 - f - Wenn das Gerät deutliche Anzeichen eines Defektes aufweist.
15. VOSICHT: Explisionsgefahr bei unsachgemaben Austausch der Batte-rie.Ersatz nur durch denselben oder einem vom Hersteller empfohlene-mahnlichen Typ. Entsorgung gebrauchter Batterien navh Angaben des Herstellers.

Der arbeitsplatzbezogene Schalldruckpegel nach DIN 45 635 Teil 1000 beträgt 70dB(A) oder weiger.

DISCLAIMER: This set of instructions is given according to IEC704-1. Advantech disclaims all responsibility for the accuracy of any statements contained herein.

ADVARSEL!
Lithiumbatteri - Eksplosionsfare ved fejlagtig
håndtering.
Udskiftning må kun ske med batteri af samme
fabrikat og type.
Levér det brugte batteri tilbage
tilleverandøren.

Contents

Chapter	1	General Information	2
	1.1	Introduction	2
	1.2	General Specifications	2
	1.3	LCD Specifications	5
	1.4	Dimensions	6
Chapter	2	System Setup.....	8
	2.1	A Quick Tour of the Panel PC	8
		Figure 2.1:Front View of the Panel PC.....	8
		Figure 2.2:Right Side of Panel PC.....	8
		Figure 2.3:Rear Side View of the Panel PC.....	9
		Figure 2.4:Panel PC I/O (DC model).....	9
	2.2	Installation Procedures	10
		2.2.1 Connecting the Power Cord	10
		2.2.2 Connecting the Keyboard or Mouse	10
		2.2.3 Switching On the Power	10
	2.3	Running the BIOS Setup Program	11
	2.4	Installing System Software.....	12
	2.5	Installing the Drivers	13
Chapter	3	Hardware and Peripheral Installation	16
	3.1	Overview of Hardware Installation and Upgrading	16
	3.2	Installing the 2.5" Hard Disk Drive (HDD)	16
	3.3	Placing the Rubber Seal	17
		Figure 3.1:Placing the Rubber Seal	17
	3.4	Installing the Universal Arm	18
		Figure 3.2:Universal Arm	18
Chapter	4	Jumper Settings and Connectors	20
	4.1	Setting Jumpers	20
		4.1.1 Jumpers and Switches.....	21
		Table 4.1:Jumpers and their functions	21
		4.1.2 Locating Jumpers and Switches.....	21
		Figure 4.1:Locating Jumpers on the PPC-V106 Mother- board	21
		4.1.3 Connectors	22
		Table 4.2:Panel PC connectors	22
		4.1.4 Locating Connectors	23
		Figure 4.2:Locating Connectors on the PPC-V106 Moth- erboard	23
	4.2	CPU Installation	23
	4.3	CMOS Clear for External RTC (JP1)	24

	Table 4.3:Clear CMOS / External RTC (JP1)	24
4.4	COM-port Interface	24
4.4.1	COM2 RS-232/422/485 Setting (JP5)	24
	Table 4.4:COM2 RS-232/422/485 setting (JP5).....	24
	Table 4.5:Serial port default settings	25
4.4.2	COM1/COM2/COM3/ Pin 9 Output Setting (JP4).....	26
	Table 4.6:COM1/2/3 Pin 9 Output Setting(JP4).....	26
	Table 4.7:JP3 Setting	27
4.5	VGA Interface	28
4.5.1	LCD Panel Power Setting	28
Chapter 5	VIA Chipset	30
5.1	Introduction	30
5.1.1	Installation 4-in-1 Driver for Windows 98/2000/XP ...	30
5.2	Further Information	30
Chapter 6	AGP SVGA Setup	32
6.1	Introduction	32
6.1.1	Chipset	32
6.1.2	Display memory.....	32
6.2	Installation of SVGA Driver	32
6.2.1	Installation for Windows 98/ME	33
6.2.2	Installation for Windows 2000/XP	33
6.3	Further Information	33
Chapter 7	PCI Bus Ethernet Interface.....	36
7.1	Introduction	36
7.2	Installation of Ethernet Driver.....	36
7.2.1	Installation for Windows 98/ME	37
7.2.2	Installation for Windows 2000/XP	37
7.3	Further Information	38
Chapter 8	Audio	40
8.1	Introduction	40
8.2	Installation of Audio Driver	40
Chapter 9	USB 2.0	42
9.1	Installation of USB 2.0 Driver	42
9.2	Driver Installation for Windows XP	42
9.3	Driver Installation for Windows 2000	43
9.4	Driver Installation for Windows ME / 98 / 98SE.....	44
9.5	Further Information	44
Chapter 10	Touchscreen	46
10.1	Introduction	46
10.1.1	General information	46
10.1.2	General specifications.....	46

10.1.3	Environmental Specifications	47
10.2	Installation of Touchscreen Drivers	47
10.2.1	Inst. of Resistive T/S driver for Windows 98/ME	48
10.2.2	Inst. of Resistive T/S driver for Windows 2000/XP	49
10.2.3	Inst. of Infrared T/S driver for Windows 2000/XP	49
10.3	Further Information	49
Appendix A	Programming the Watchdog Timer	52
A.1	Programming the Watchdog Timer	52
Appendix B	Pin Assignments	56
B.1	Inverter Power Connector (CN10)	56
	Table B.1:Inverter power connector (CN10).....	56
B.2	Internal Speaker Connector (CN14).....	56
	Table B.2:Internal speaker connector (CN14).....	56
B.3	Floppy Drive Connector (CN16) Reserved.....	57
	Table B.3:Floppy drive connector (CN16).....	57
B.4	IDE Hard Disk Drive Connector (CN15).....	58
B.5	IR Connector (CN8) Reserved	59
B.6	LVDS Connector (CN4).....	59
B.7	Flat Panel Display Connector (CN2) (Reserved).....	60
B.8	COM1	61
B.9	COM2.....	61
B.10	COM3	62
B.11	COM3 Connector (CN 26).....	62
B.12	COM 4 Connector (CN 23).....	63
B.13	USB Port	63
B.14	Parallel Port Connector (CN11)	64
	Table B.4:Parallel Port Connector (CN8).....	64
B.15	VGA Connector.....	65

General Information

This chapter gives background information on the PPC-V106 panel PC.

Sections include:

- Introduction
- General Specifications
- LCD Specifications
- Dimensions

Chapter 1 General Information

1.1 Introduction

PPC-V106 is fanless and comes with a VIA Eden low-power CPU for higher reliability and performance. The ruggedized aluminum enclosure without ventilation holes makes PPC-V106 waterproof and dust proof.

A variable power source suits vehicles such as forklifts and trucks, which typically operate anywhere from 12 to 48 VDC.

PPC-V106 provides 10/100Base-T Ethernet, and expansion ability for wireless transmissions, ex : 802.11g/b, GPS, GPRS and CDMA..etc..

Embedded OS support (WinCE.NET 4.2, WinXP Embedded), using OS images can greatly shorten system development and troubleshooting.

1.2 General Specifications

General

- **Dimensions (W x H x D):** 310 x 255 x 80 mm
- **Weight:** 3.5 kg
- **Power supply:**
 - AC model:** 60 watts
 - Input voltage:** 100-240 Vac, 50/60Hz, 2-1.5A
 - Output voltage:** +5V@5A, +12V@3A

DC model: 75 watts

Input voltage: 19-36 Vdc , typical 24V DC.

Output voltage: +5V@8A, +12V@2.5A

Optional DC model: 65 watts

Input voltage: 11.2-18 Vdc , typical 12 V DC.

Output voltage: +5V@7A, +12V@2A

Optional model: 75 watts

Input voltage: 40-58 Vdc , typical 48 V DC.

Output voltage: +5V@8A, +12V@2.5A

- **Disk drive housing:** Space for one 2.5" HDD
- **Front panel:** IP65/NEMA4 compliant
- **Enclosure:** Ruggedized aluminum without ventilation holes

Standard PC functions

- **CPU:** Embedded VIA Eden 800 MHz CPU
- **BIOS:** Award 256 KB Flash BIOS, supports Plug & Play, APM
- **System Chipset:** VIA CLE266 and VT8235 CD
- **Front side bus:** 133 MHz
- **System Memory:** Two 184-pin DIMM sockets, accepts up to 2 GB DDR 266 SDRAM
- **PCI bus master IDE interface:** Supports two connectors. Each connector has one channel and supports two IDE devices. Each channel supports PIO modes 0 ~ 4, DMA mode 0 ~ 2, and Ultra DMA 33/66/100 simultaneously. The secondary connector is designated for the CD-ROM drive or CompactFlash card. BIOS supports IDE CDROM boot-up
- **Keyboard/mouse connector:** Supports 1 standard AT Keyboard and a PS/2 Mouse
- **Serial ports:** Three serial ports with two RS-232 ports (COM 1, COM 3), and one RS-232/422/485 port (COM2). All ports are compatible with 16C550. UARTs, +5V/+12V power supply selectable
- **Universal serial bus (USB) port:** Supports up to two V2.0 USB ports, Intel UHCI v1.1 compatible
- **Mini PCI bus expansion slot:** Accepts one type III mini PCI bus card
- **Solid State Disk:** Supports one 50-pin socket for CompactFlash type I/II (True IDE mode) or IBM MicroDrive HDD
- **Watchdog timer:** 63-level timer intervals automatically generates system reset or IRQ11 when the system stops due to a program error or EMI. Jumperless selection and software enabled/disabled
- **Battery:** 3.0 V @ 195 mA lithium battery
- **Power management:** Supports power saving modes including Normal/Standby/Suspend modes. APM 1.2 compliant

VGA/Flat panel interface

- **Chipset:** Integrated in VIA CLE266
- **Frame Buffer:** Supports 8 / 16 / 32 / 64MB frame buffer using system memory
- **Display type:** Simultaneously supports CRT and flat panel displays (EL, LCD and gas plasma)

Audio function

- **Chipset:** Integrated in VT8235CD South Bridge
- **Audio controller:** AC97 Ver. 2.0 compliant interface, Multi stream Direct sound and Direct Sound 3D acceleration
- **Stereo sound:** 18-bit full-duplex codec
- **Audio interface:** Line out

PCI bus Ethernet interface

- **Chipset:** Realtek RTL8100C PCI local bus Ethernet controller
- **Ethernet interface:** Full compliance with IEEE 802.3u 100Base-T and 10 Base-T specifications. Includes software drivers and boot ROM.(Support both RPL and PXE).
- **100/10Base-T auto-sensing capability**

PCMCIA interface

- **Chipset:** R5C554
- **Cardbus Controller:** A PC card controller offers a single chip solution as a bridge between the PCI bus and the Cardbus
- **PCI bus interface:** Complies with PCI Local Bus Specification 2.1, and supports the 32-bit Cardbus (Card-32) and the 16-bit PC card (Card-16) without external buffers
- **Hot insertion and removal**

Touchscreen (Optional)

Type	Analog Resistive	Infrared
Light Transmission	75%	91%
Controller	RS-232 interface (uses COM4)	RS-232 interface (Use COM4)
Power Consumption	<5 V@ 100 mA	+5 V @ 150 mA
Durability	above 10 million	100,000 hrs
Software Driver	Supports Windows 98/2000/ME/XP	Supports Windows and DOS

Environment

- **Operating Temperature:** 0 ~ 45° C (32 ~ 122° F)
- **Storage Temperature:** -20 ~ 60° C
- **Relative Humidity:** 10 ~ 95% @ 40° C (non-condensing)
- **Shock:** 10 G peak acceleration (11 msec duration)
- **Certifications:** EMC: CE, FCC. Safety: UL1950.
- **Vibration:** 5 ~ 500 Hz 1 G RMS Random vibration n (operating with HDD)


1.3 LCD Specifications

- **Display type:** 10.4" TFT LCD
- **Max. resolution:** 800 x 600
- **Colors:** 256 K
- **Dot size (mm):** 0.264 x 0.264
- **Luminance:** 230 cd/m²
- **Temperature:** 0 ~ 50° C
- ***VR control:** Brightness
- **LCD MTBF:** 50,000 hours
- **Backlight lifetime:** 20,000 hours

* The VR control is defined by hot key in DOS or BIOS mode as below: Ctrl-Alt-F3, Ctrl-Alt-F4.

Note: The color LCD display installed in the panel PC is high-quality and reliable. However, it may contain a few defective pixels which do not always illuminate. With current technology, it is impossible to completely eliminate defective pixels. Advantech is actively working to improve this technology.

1.4 Dimensions

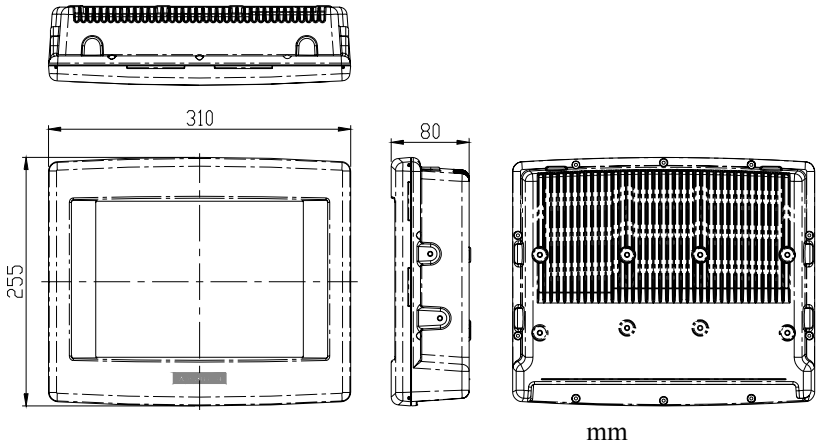

System Setup

This chapter details system setup on the PPC-V106 Panel PC.

Sections include:

- A Quick Tour of the Panel PC
- Installation procedures
- Running the BIOS Setup Program

Chapter 2 System Setup

2.1 A Quick Tour of the Panel PC

Before you start to set up the panel PC, take a moment to become familiar with the locations and purposes of the controls, drives, connectors and ports, which are illustrated in the figures below.

When you place the panel PC upright on the desktop, its front panel appears as shown in Figure 2-1



Figure 2.1: Front View of the Panel PC

When you look at the right side of the panel PC, you will see the holes for mounting as shown in Fig. 2-2.

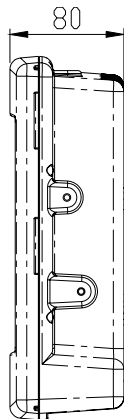


Figure 2.2: Right Side of Panel PC

When you turn the Panel PC around and look at its rear cover, you will find VESA standard holes and others for mounting. There are no ventilation holes, as shown in Figure 2-3.

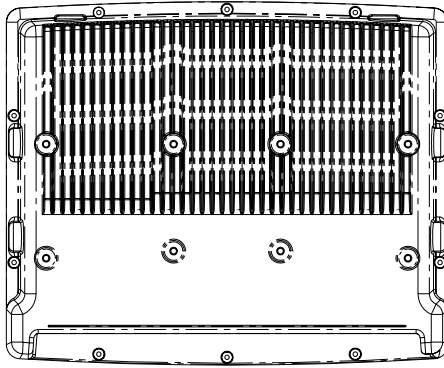


Figure 2.3: Rear Side View of the Panel PC

The I/O section is at the bottom of the panel PC, as shown in Fig. 2-4.

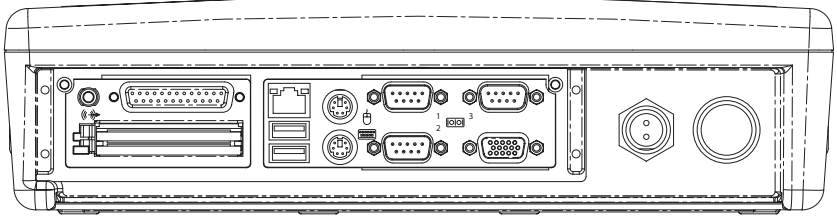


Figure 2.4: Panel PC I/O (DC model)

2.2 Installation Procedures

2.2.1 Connecting the Power Cord

There are two kinds of power supplies for the PPC-V106 series, AC and DC.

For AC model :

The Panel PC can only be powered by an AC electrical outlet (100 ~ 250 volts, 50 ~ 60 Hz). Be sure to always handle the power cords by holding plug ends only. Follow these procedures in order:

1. Connect the female end of the power cord to the AC inlet of the panel PC.
2. Connect the 3-pin male plug of the power cord to an electrical outlet.

For DC model :

Connect the 2 pin waterproof power cord to the DC inlet of the panel PC.

2.2.2 Connecting the Keyboard or Mouse

Before you start the computer, please connect the necessary mouse or keyboard to the PS/2 mouse, keyboard port or serial ports.

2.2.3 Switching On the Power

When you look at the bottom of the panel PC, you will see the power switch.

2.3 Running the BIOS Setup Program

Your panel PC is likely to have been properly set up and configured by your dealer prior to delivery. You may still find it necessary to use the panel PC's BIOS (Basic Input-Output System) setup program to change system configuration information, such as the current date and time or your type of hard drive. The setup program is stored in read-only memory (ROM). It can be accessed either when you turn on or reset the panel PC, by pressing the "Del" key on your keyboard immediately after powering on the computer.

The settings you specify with the setup program are recorded in a special area of memory called CMOS RAM. This memory is backed up by a battery so that it will not be erased when you turn off or reset the system. Whenever you turn on the power, the system reads the settings stored in CMOS RAM and compares them to the equipment check conducted during the power on self-test (POST). If an error occurs, an error message will be displayed on screen, and you will be prompted to run the setup program.

2.4 Installing System Software

Recent releases of operating systems from major vendors include setup programs which load automatically and guide you through hard disk preparation and operating system installation. The guidelines below will help you determine the steps necessary to install your operating system on the panel PC hard drive.

Note: Some distributors and system integrators may have already pre-installed system software prior to shipment of your panel PC.

If required, insert your operating system's installation or setup diskette into the diskette drive until the release button pops out.

The BIOS of the panel PC supports system boot-up directly from the CD-ROM drive. You may also insert your system installation CD-ROM into the CD-ROM drive.

Power on your panel PC or reset the system by pressing the "Ctrl"+"Alt"+"Del" keys simultaneously. The panel PC will automatically load the operating system from the diskette or CD-ROM.

If you are presented with the opening screen of a setup or installation program, follow the instructions on screen. The setup program will guide you through preparation of your hard drive, and installation of the operating system.

If you are presented with an operating system command prompt, such as A:\>, then you must partition and format your hard drive, and manually copy the operating system files to it. Refer to your operating system user's manual for instructions on partitioning and formatting a hard drive.

2.5 Installing the Drivers

After installing your system software, you will be able to set up the Ethernet, SVGA, audio, and touchscreen functions. All the drivers except the CD-ROM drive driver are stored in a CD-ROM disc entitled "Drivers and Utilities." The CD-ROM drive driver is stored in a floppy disk. Both the CD-ROM and the floppy disk can be found in your accessory box.

To set up the CD-ROM function, insert the floppy disk with the CD-ROM drive driver into the floppy disk drive and type "install" after the following prompt is displayed on screen:

A: > INSTALL

Press "Enter", and the installation process will be completed in a few seconds.

The standard procedures for installing the drivers are described in Chapters 5, 6, 7, 8 respectively.

The utility directory includes multimedia programs. Refer to the README.TXT file inside the VGA folders for more detailed information.

The various drivers and utilities in the CD-ROM disc have their own text files which help users install the drivers and understand their functions. These files are a very useful supplement to the information in this manual.

Note: The drivers and utilities used for the PPC-V106 panel PCs are subject to change without notice. If in doubt, check Advantech's website or contact our application engineers for the latest information regarding drivers and utilities.

Hardware and Peripheral Installation

This chapter details the installation of the PPC-V106 panel PC hardware.

Sections include:

- Overview of Hardware Installation and Upgrading
- Installing the 2.5" Hard Disk Drive
- Installing the Universal Arm
- Placing the Rubber Seal

Chapter 3 Hardware and Peripheral Installation

3.1 Overview of Hardware Installation and Upgrading

The panel PC consists of a PC-based computer that is housed in a ruggedized aluminum enclosure. Any maintenance or hardware upgrades can be completed after removing both panels..


Warning! *Do not remove the ruggedized aluminum covers until you have verified that no power is flowing within the panel PC. Power must be switched off and the power cord must be unplugged. Every time you service the panel PC, you should be aware of this.*



3.2 Installing the 2.5" Hard Disk Drive (HDD)

You can attach one enhanced Integrated Device Electronics (IDE) hard disk drive to the panel PC's internal controller which uses a PCI local-bus interface. The advanced IDE controller supports faster data transfer and allows the IDE hard drive to exceed 528 MB. The following are instructions for installation:

1. Detach the HDD bracket by unscrewing the four screws (#2) on the top of the HDD bracket.

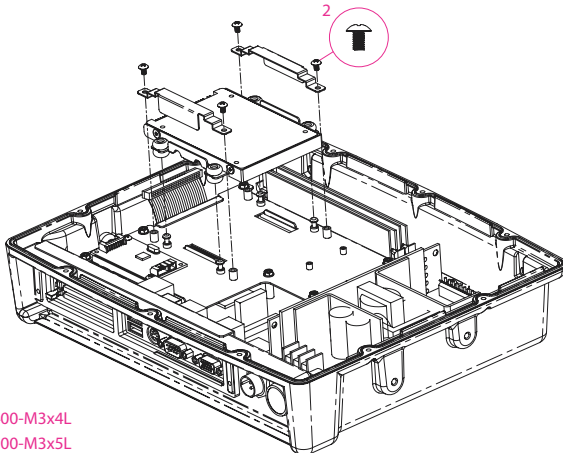


Screw

① 1930030400-M3x4L

② 1933030500-M3x5L

- Place the HDD inside the HDD bracket and tighten four screws (#1) from both sides of the HDD bracket.

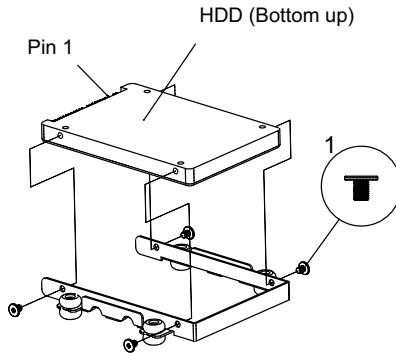

- The HDD cable (1 x 44-pin to 1 x 44-pin) is next to the HDD bracket. Connect the HDD cable to the HDD. Make sure that the red wire corresponds to Pin 1 on the connector, which is labelled on the board. Plug the other end of the cable into the HDD, with Pin 1 on the cable corresponding to Pin 1 on the HDD.

3.3 Placing the Rubber Seal

To ensure that your PPC-V106 stays dry, the supplied rubber seal must be placed correctly between the front bezel and back cover. Please note the direction of the seal. The mark should be up.

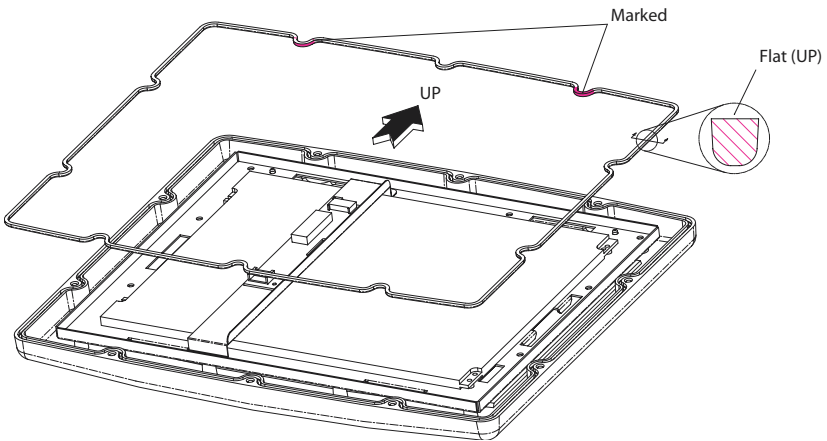


Figure 3.1: Placing the Rubber Seal

3.4 Installing the Universal Arm

1. Press latches at the same time and then rotate support-1 until you can see both of the screw holes.
2. Rotate support-2 until the angle is the same as support-1.
3. Use four M4x8L screws and attach the U-Arm with the PPC-V106. The 4 stainless screws can be found in the universal arm's box.
4. Use latches adjust the angle of PPC-V106 (every 14.4° on 360°).

Note: Support-1 can be on the right or left.

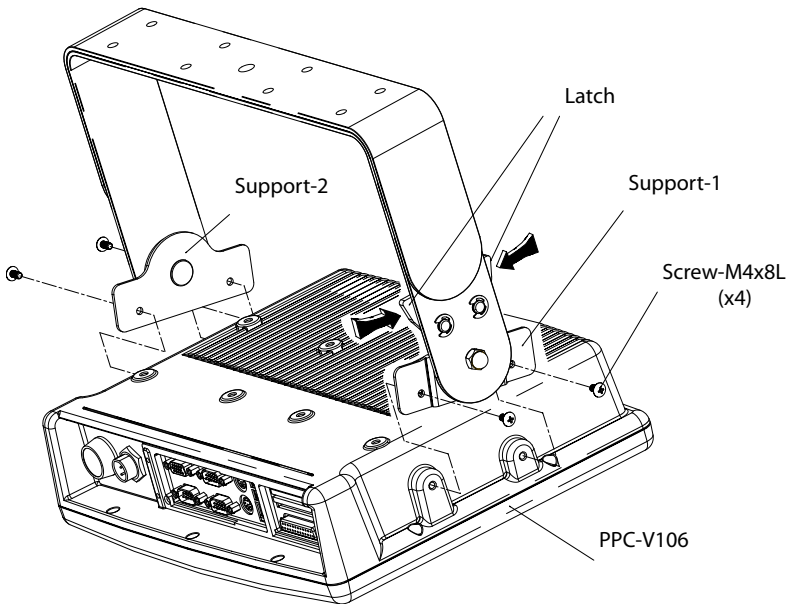


Figure 3.2: Universal Arm

Jumper Settings and Connectors

This chapter tells how to set up the panel PC hardware, including instructions on setting jumpers and connecting peripherals, switches and indicators. Be sure to read all the safety precautions before you begin the installation procedures.


Sections include:

- Setting Jumpers
- CPU Installation
- CMOS Clear for External RTC (JP1)
- COM-port Interface
- VGA Interface


Chapter 4 Jumper Settings and Connectors

4.1 Setting Jumpers


You can configure your panel PC to match the needs of your application by setting jumpers. A jumper is the simplest kind of electrical switch. It consists of two metal pins and a small metal clip (often protected by a plastic cover) that slides over the pins to connect them. To “close” a jumper, you connect the pins with the clip. To “open” a jumper you remove the clip. Sometimes a jumper will have three pins, labeled 1, 2, and 3. In this case, you would connect either pins 1 and 2 or pins 2 and 3.

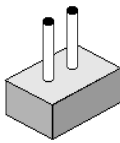


open

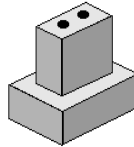

closed

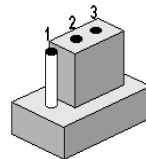


closed 2-3

 

open



 closed



closed 2-3

A pair of needle-nose pliers may be helpful when working with jumpers. If you have any doubts about the best hardware configuration for your application, contact your local distributor or sales representative before you make any changes.

An arrow is used on the motherboard to indicate the first pin of jumpers.

4.1.1 Jumpers and Switches

The motherboard of the panel PC has a number of jumpers that allow you to configure your system to suit your applications. The table below lists the function of each of the board's jumpers.

Table 4.1: Jumpers and their functions

Label	Function
JP1	CMOS clear for external RTC
JP2	LCD power connector
JP3	COM1 / COM2/ COM3 pin 9 output type setting
JP4	COM1 / COM2/ COM3 pin 9 output type setting
JP5	COM2 RS232/422/485 setting
SW1	Panel type setting (Reserved)

4.1.2 Locating Jumpers and Switches

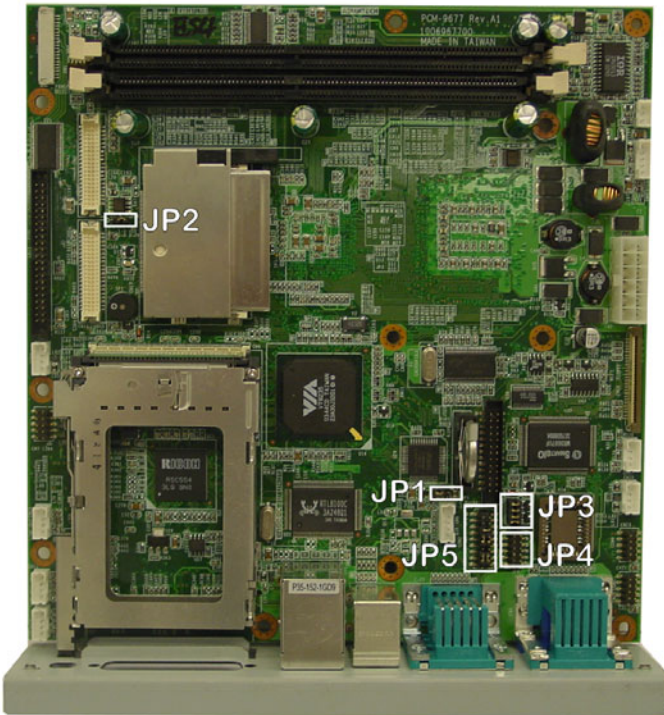


Figure 4.1: Locating Jumpers on the PPC-V106 Motherboard

4.1.3 Connectors

Onboard connectors link the panel PC to external devices such as hard disk drives or floppy drives. The table below lists the function of each of the board is connectors.

Table 4.2: Panel PC connectors

Label	Function
CN1	Power input connector
CN2	Flat panel display connector (Reserved)
CN4	LVDS connector
CN8	SIR connector (Reserved)
CN10	Inverter power connector
CN11	Print port connector
CN12	Line/Mic in connector (Reserved)
CN13	Line out connector
CN14	Internal Speaker connector (Reserved)
CN15	2.5 " IDE connector
CN16	Floppy drive connector (Reserved)
CN17	CFC connector
CN18	Slim type CD-ROM/IDE connector
CN20	USB 3
CN21	USB 4
CN23	COM4 connector
CN24	Mini PCI socket
CN26	COM 3 connector
CN27	Front panel connector

4.1.4 Locating Connectors

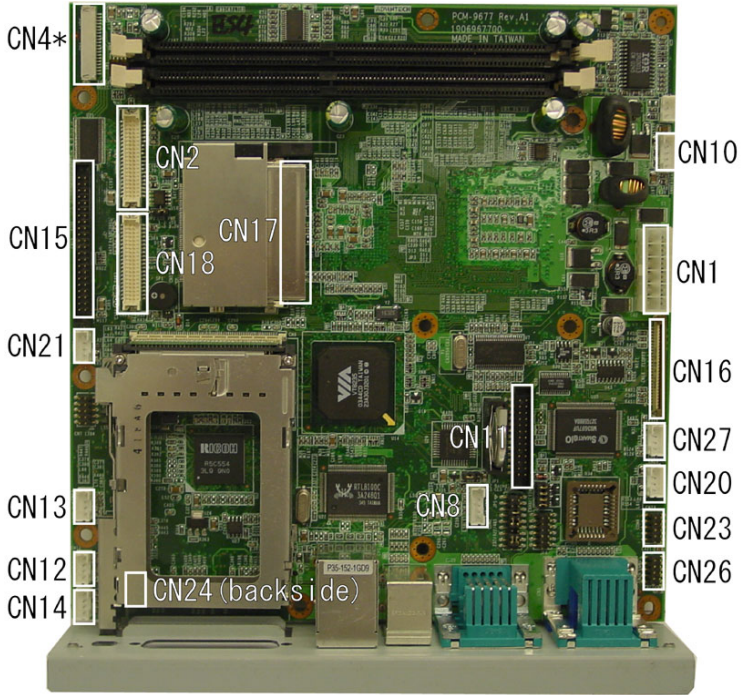


Figure 4.2: Locating Connectors on the PPC-V106 Motherboard

4.2 CPU Installation

The CPU is embedded on the motherboard, so there are no settings for frequency ratio or voltage.

4.3 CMOS Clear for External RTC (JP1)

Warning: To avoid damaging the computer, always turn off the power supply before setting “Clear CMOS”. Set the jumper back to “Normal operation” before turning on the power supply.

Table 4.3: Clear CMOS / External RTC (JP1)

*Normal operation (default)	Clear CMOS
-----------------------------	------------



4.4 COM-port Interface


The panel PC provides three serial ports: COM1, COM 3 : RS-232 and COM2: RS-232/422/485 (in one COM port connector).

4.4.1 COM2 RS-232/422/485 Setting (JP5)


COM2 can be configured to operate in RS-232, RS-422, or RS-485 mode. This is done via JP5 settings.

Table 4.4: COM2 RS-232/422/485 setting (JP5)

 
*RS-232



RS-422

 

RS-485

 

The IRQ and the address ranges for COM1, COM2, COM3 and COM4 are fixed.

However, if you wish to disable the port or change these parameters later you can do this in the system BIOS setup. The table overleaf shows the default settings for the panel PC's serial ports.

COM1 and COM2 are one set. You can exchange the address range and interrupt IRQ of COM1 for the address range and interrupt IRQ of COM2. After exchanging:

COM1's address range is 2F8 ~ 2FF and its request IRQ is IRQ3.

COM2's address range is 3F8 ~ 3FF and its interrupt IRQ is IRQ4.

COM3 and COM4 are another set. You can exchange the address range and interrupt IRQ of COM3 for the address range and interrupt IRQ of COM4.

COM3's address range is 3E8 ~ 3EF and its request IRQ is IRQ10.

COM4's address range is 2E8 ~ 2EF and its request IRQ is IRQ5.

Table 4.5: Serial port default settings

Port	Address Range	Interrupt
COM1	3F8 ~ 3FF	IRQ4
COM2	2F8 ~ 2FF	IRQ3
COM3	3E8~3EF	IRQ10
COM4	2E8~2EF	IRQ 5

4.4.2 COM1/COM2/COM3/ Pin 9 Output Setting (JP4)

Table 4.6: COM1/2/3 Pin 9 Output Setting(JP4)

Normal (default)	11	9	7	5	3	1
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	12	10	8	6	4	2
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

+5 V output	11	9	7	5	3	1
	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
	12	10	8	6	4	2
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>


+12 V output	11	9	7	5	3	1
	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
	12	10	8	6	4	2
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>

NOTE: *Pins 1, 3 and 5 are for COM1*
 Pins 2, 4 and 6 are for COM2
 Pins 7, 9 and 11 are for COM3


When enabling this function, you should remove a jumper from JP3 as shown in table 4.7.

Table 4.7: JP3 Setting


Normal (default)

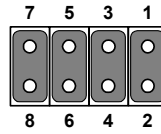


Remove jumper from pin 1 and 2 to make pin 9 on COM1 a power output.

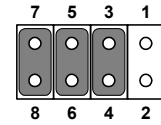

Remove jumper from pin 3 and 4 to make pin 9 on COM2 a power output.

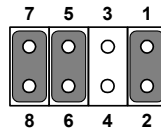

Remove jumper from pin 5 and 6 to make pin 9 on COM3 a power output.

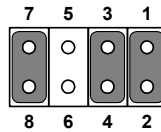

4.5 VGA Interface

The panel PC's AGP VGA interface can drive conventional CRT displays. It is also capable of driving a wide range of flat panel displays, including electroluminescent (EL), gas plasma, passive LCD and active LCD displays. The board has two connectors to support these displays simultaneously: one for standard CRT VGA monitors, and one for flat panel displays.

Pin assignments for the flat panel display connector, backlight connector and other related connectors are shown in Appendix C.

4.5.1 LCD Panel Power Setting

The panel PC's AGP SVGA interface supports 5 V and 3.3 V LCD displays. The default setting is 3.3 V (connecting pin 2 and 3), but you can use JP2 to change this to 5 V. (connecting pin 1 and 2).

VIA Chipset

This chapter provides information on Intel chipset configuration

- Introduction
- Further information

Chapter 5 VIA Chipset

5.1 Introduction

The PPC-V106 uses the combination of VIA CLE266 north bridge and VT8235 CD south bridge.

The VIA CLE266 chipset is an innovative integrated graphics chipset developed with DDR266 memory and optimized to support the VIA C3 and VIA Eden Series processors, adding intelligence to help manage and prioritize multiple threads received from the microprocessor. VIA CLE266 Combines a fully integrated video processing feature set, 2D/3D graphics engine and ultra efficient VIA DDR memory controller, the VIA CLE266 Chipset is designed to enable high quality digital video streaming and DVD playback in a new generation of fanless, small form factor PCs.

Important: *The following are examples only. You must follow the instructions and pay attention to the instructions which then appear on your screen.*

Note: *The CD-ROM drive is designated as "D" throughout this chapter.*

5.1.1 Installation 4-in-1 Driver for Windows 98/2000/XP

1. Path: D:\PPC-V106\4in1\4in1443v.exe
2. Press "Next" to proceed, then press "Finish".
3. Choose "Yes, I want to restart my computer", and press "Finish", the system will reboot automatically

5.2 Further Information

For further information about the AGP/VGA installation in PPC-V106, including driver updates, troubleshooting guides and FAQ lists, visit the following web sites:

VIA website: www.via.com.tw

Advantech websites: www.advantech.com

AGP SVGA Setup

- Introduction
- Installation of SVGA Driver
 - for Windows 98/ME
 - for Windows 2000/XP
- Further Information

Chapter 6 AGP SVGA Setup

6.1 Introduction

The PPC-V106 has an onboard integrated VGA chipset. The specifications and features are described as follows:

6.1.1 Chipset

The VIA CLE266 boasts a complete integrated VIA 128-bit 2D/3D graphics engine with a high quality video processing unit including MPEG-2 decoding, video scaling and Alpha Blending.

6.1.2 Display memory

The integrated VGA chipset can support 8 / 16 / 32 / and 64 MB frame buffer using system memory.

6.2 Installation of SVGA Driver

Important: *The following are examples only. You must follow the instructions and pay attention to the instructions which then appear on your screen.*

Note: *The CD-ROM drive is designated as "D" throughout this chapter.*

6.2.1 Installation for Windows 98/ME

1. Click the 'Start' button in the task bar, click 'Run' and then select 'Setup.exe' from D:\PPC-S154\845G Graphics Driver\WIN9X_ME\Setup.exe. The Install dialog will appear.
2. Click 'Next' to continue.
3. Read License Agreement and click "Yes" to proceed.
4. When the 'Setup COMPLETE' message appears click 'Finish' to restart PPC-V106.
5. After the system reboot, the screen show "Insert Disk", click "OK"
6. click "browse"

6.2.2 Installation for Windows 2000/XP

1. Click the 'Start' button in the task bar, click 'Run' and then select 'Setup.exe' from D:\PPC-V106\VGA\2k_xp\Setup.exe. The Install dialog will appear.
2. click 'Next' to continue.
3. Read License Agreement and click "Yes" to proceed.
4. When the 'Setup COMPLETE' message appears click 'Finish' to restart PPC-V106.

6.3 Further Information

For further information about the AGP/SVGA installation in your PPC-V106, including driver updates, troubleshooting guides and FAQ lists, visit the following web resources:

VIA website: www.via.com.tw

Advantech website: www.advantech.com

PCI Bus Ethernet Interface

This chapter provides information on Ethernet configuration.

- Introduction
- Installation of Ethernet Driver
 - for Windows 98/ME
 - for Windows 2000/XP
- Further Information

Chapter 7 PCI Bus Ethernet Interface

7.1 Introduction

The PPC-V106 is equipped with a high performance 32-bit Ethernet chipset which is fully compliant with IEEE 802.3 100 Mbps CSMA/CD standards. It is supported by major network operating systems. It is also both 100Base-T and 10Base-T compatible.

The Ethernet port provides a standard RJ-45 jack. The network boot feature can be utilized by incorporating the boot ROM image files for the appropriate network operating system. The boot ROM BIOS files are combined with system BIOS, which can be enabled/disabled in the BIOS setup.

7.2 Installation of Ethernet Driver

Before installing the Ethernet driver, note the procedures below. You must know which operating system you are using in your PPC-V106, and then refer to the corresponding installation flow chart. Then just follow the steps described in the flow chart. You will quickly and successfully complete the installation, even if you are not familiar with instructions for Windows.

Important: The following are examples only. You must follow the instructions and pay attention to the instructions which then appear on your screen.

Note: The CD-ROM drive is designated as "D" throughout this chapter.

7.2.1 Installation for Windows 98/ME

1. If the Operating System's New Hardware Wizard prompts you with "New Hardware Found" for the "PCI Ethernet Controller", you should click "Next" until "Finish" is clicked, without specifying location of the driver. You will see "PCI Ethernet Controller" in the Device Manager.
2. You can then install or update the NDIS driver with the "setup" or "setup -s" command:
 - a) setup: The InstallShield will prompt you with steps to install or upgrade the driver.
 - b) setup -s: The InstallShield will complete the installation or upgrade without prompting you for any instructions.You need to reboot the system immediately after the Install shield completes the installation/upgrade.
3. Do not click "Cancel" during New Hardware Wizard searches for the driver.
4. 4. You can remove RTLSetup utility from Add/Remove Program Palette in Control Panel, the InstallShield will prompt you the steps to remove the driver. After remove the driver, please restart the system immediately.

7.2.2 Installation for Windows 2000/XP

After finishing the Windows 2000/XP installation, the system will automatically detect the Ethernet hardware and install the Ethernet driver from the drivers database from Windows 2000, Windows XP when the system reboots.

It is recommended that you upgrade to the Intel driver provided with the CD. To upgrade to this driver, use this path : D:\PPC-V106\Lan\setup.exe

7.3 Further Information

Realtek website: www.realtek.com.tw

Advantech website: www.advantech.com

Audio

- Introduction
- Installation of Audio Driver

Chapter 8 Audio

8.1 Introduction

The ALC202 is an 18-bit, full duplex AC'97 2.2 compatible stereo audio CODEC designed for PC multimedia systems, including host/soft audio and AMR/CNR based designs. The ALC202 AC'97 CODEC supports multiple CODEC extensions with independent variable sampling rates and built-in 3D effects.

8.2 Installation of Audio Driver

Before installing the audio driver, please take note of the procedures detailed below. You must know which operating system you are using in your PPC-V106, and then refer to the corresponding installation procedure.

Important: *The following are examples only. You must follow the instructions and pay attention to the instructions which then appear on your screen.*

Note: *The CD-ROM drive is designated as "D" throughout this chapter.*

Run the setup.exe program to finish the installation.

Path : D:\PPC-V106\Audio\Setup.exe

CHAPTER 9

USB 2.0

This chapter describes how to install the USB 2.0 driver

Chapter 9 USB 2.0

9.1 Installation of USB 2.0 Driver

Before installing the audio driver, please take note of the procedures detailed below. You must know which operating system you are using in your PPC-V106, and then refer to the corresponding installation procedure

Important: The following Windows illustrations are examples only. You must follow the instructions and pay attention to the instructions that appear on your screen.

Note: The CD-ROM drive is designated as "D" throughout this chapter.

9.2 Driver Installation for Windows XP

1. Microsoft EHCI drivers for Windows XP are not included in this package due to legal issues. Please install Microsoft Windows XP Service Pack 1 before running the setup program. SETUP.exe will redirect you to Microsoft Windows Update to download the drivers, please make sure an internet connection is set up.
 - A. Select "Install USB 2.0 Host driver"
 - B. Click "Yes" and the setup program will connect to the Windows Update web site.
2. SETUP.exe launches Microsoft Internet Explorer and opens <http://windowsupdate.microsoft.com>. Click on the "Scan for updates" to get the latest updates.
3. Microsoft Windows Update lists all available updates on the website. It is recommended to download the Windows XP Service Pack 1 since Microsoft EHCI drivers will be included.

9.3 Driver Installation for Windows 2000

1. Install Service Pack 3 or above before running the setup program.
2. Open the Device Manager and check if there is a “Universal Serial Bus (USB) Controller” under “Other devices”.
3. Execute the setup program by double click on the “SETUP.exe” file in \PPC-V106\USB2.0
4. The screen shows the VIA Software License Agreement. Please read it FIRST and press “Yes” if wish to further proceed with the driver installation.
5. Press “Next”.
6. Select “Install USB Driver” and press “Next”.
7. The screen shows the Microsoft Software License Agreement. Please read it FIRST and press “Yes” if wish to further proceed with the driver installation.
8. Press “OK”.
9. Press “Print to File”.
10. Press “OK”.
11. Press “Finish” and the Microsoft EHCI drivers for Windows 2000 are now installed successfully.

Note: For driver uninstallation, you can remove the “Microsoft USB 2.0 Host Controller Driver” by selecting the “Uninstall” button. This will completely remove the driver from the system.

9.4 Driver Installation for Windows ME / 98 / 98SE

1. Open the Device Manager and check if there is a yellow exclamation mark on any one of the “VIA Tech 3038 PCI to USB Universal Host Controller” items.
2. Execute the setup program by double click on the “SETUP.exe” file in \PPC-V106\USB2.0
3. Press “Next”.
4. Select “Install USB Driver” and press “Next”.
5. Press “Finish” and this will RESTART the computer system. Please remember to SAVE all files before clicking the “Finish” button.

Note: For Driver Uninstallation, the user can remove the “Microsoft USB 2.0 Host Controller Driver” by selecting the “Uninstall” button. This will completely remove the driver from the system.

9.5 Further Information

VIA web site : <http://www.via.com.tw>

Advantech website: www.advantech.com

Touchscreen

- Introduction
- Installation of Touchscreen Drivers
 - for Windows 98/ME
 - for Windows 2000/XP

Chapter 10 Touchscreen

10.1 Introduction

10.1.1 General information

There are two kinds of touch screens for the PPC-V106 series, one is resistive touch screens, the other for infrared touch screens.

The resistive touch screen incorporates advanced second-generation resistive, impact-resistant technology, which allows 75% light transmission. There is also an antiglare surface for greatly enhanced visual resolution. It also has new and improved scratch-resistant features.

The resistive touch screen is manufactured from UL-recognized components. When properly installed, the touchscreen's ball impact resistance meets the UL 1950 standard. Its fire resistance meets the UL-746C, 19 mm (0.75") flame test standard. Systems incorporating the touchscreen, controllers, and cables have been approved to FCC Class A and Class B standards.

For more detailed information, please visit the following websites:

www.dynapro.com

www.3m.com/us/electronics_mfg/touch_systems

www.elotouch.com

Advantech Co.,Ltd. reserves the right to alter the touchscreen at any time without notice.

10.1.2 General specifications

Please refer to Chapter 1, Section 1.2 of this manual.

10.1.3 Environmental Specifications

	Resistive T/S	Infrared T/S
Operating Temperature	-10 ~ 50° C	-20 ~ 70° C
Storage Temperature	-40 ~ 71° C	-40 ~ 85° C

Relative humidity	Resistive T/S	Infrared T/S
Operating	90 RH at 35° C	0 ~ 95% noncondensing
Storage	90 RH at 35° C for 240 hours, non-condensing	0 ~ 95% noncondensing

Chemical resistance: The active area of the resistive touchscreen is resistant to the following chemicals when exposed for a period of one hour at a temperature of 21° C (71° F):

Acetone, Methylene chloride, Methyl ethyl ketone, Isopropyl alcohol, Hexane, Ammonia-based glass cleaners, Turpentine, Mineral spirits, Foods and beverages.

10.2 Installation of Touchscreen Drivers

The touchscreen driver for Windows contains a native, 32-bit driver and a 32-bit control panel program for the PPC-V106 system.

To facilitate installation of the touchscreen driver, you should read the instructions in this section carefully before you attempt installation.

Important: *The following are examples only. You must follow the instructions and pay attention to the instructions which then appear on your screen.*

Note 1: *The CD-ROM drive is designated as "D" throughout this chapter.*

10.2.1 Installation of Resistive T/S driver for Windows 98/ME

To install the software to PPC-V106, your PPC-V106 must have Windows 98/Me system running and installed PenMount Series Interface control board already. If you have an older version of PenMount Windows 98/Me driver installed in your PPC-V106, please remove it first.

1. You will find out "Unknown Device" when start the system, please choose "Cancel"
2. Select from "D:\PPC-V106\Resistive touchScreen\Windows 98-Me Driver V3.1\setup.exe" to install PenMount windows 98/ME driver to system
3. The screen display PenMount logo, copying "installation wizard" and "PenMount Utilities" screen plus "welcome" message appears. Selete "Next"
4. The next screens is "Software License Agreement", select "Yes"
5. The next screens is "Information", select "Next"
6. The next screen is "Choose Destination Location". It is for setup installing PenMount Utilities in the folder: C:\Program Files\PenMount\Win9x, select "Next" or modify the folder name you like to use
7. The next screen is "Select Program Folder", the default is set at "PenMount Utilities", select "Next" or change it
8. The next screen is "Start Copying Files", select "Next" for starting copy files to system
9. The next screen is "Setup Complete", select "Finish"
10. The next screen is " Restarting Windows", select "Yes I want to restart my computer now", and "OK"

10.2.2 Installation of Resistive T/S driver for Windows 2000/XP

To install the software to PPC-V106, your PPC-V106 must have Windows 2000/XP system running and installed PenMount Series Interface control board already. If you have an older version of PenMount Windows 2000/XP driver installed in your PPC-V106, please remove it first. Follow up the steps below to install the PenMount Window 2000/XP driver.

1. Select from "D:\PPC-V106\Resistive touchScreen\Windows 2000-XP Driver V4.01\setup.exe" to install PenMount windows 2000/XP driver to system
2. The screen displays copying "installation wizard" and "PenMount Utilities" screen plus "welcome" message appears. Selete "Next"
3. The next screens is "Software License Agreement", select "I accept the terms in the license" and "Next"
4. The next screens is " Ready to install the Program", select "Install"
5. The next screen is "Hardware Installation" , select " Continue Anyway"
6. The next screen is "InstallShield Wizard Completed", Select "Finish"

10.2.3 Installation of Infrared T/S driver for Windows 2000/XP

Select from " D\PPC-V106\Elo IR Touchscreen\Win2K_XP\EloS-etup.exe" to run the installation application.

10.3 Further Information

3M: www.3m.com/us/electronics_mfg/touch_systems

ELOtouch: www.elotouch.com

Advantech : www.advantech.com

www.advantech.com.tw

Salt: www.salt.com.tw

Programming the Watchdog Timer

The PPC-V106 is equipped with a watchdog timer that resets the CPU or generates an interrupt if processing comes to a standstill for any reason. This feature ensures system reliability in industrial standalone or unmanned environments.

Appendix A Programming the Watchdog Timer

A.1 Programming the Watchdog Timer

To program the watchdog timer, you must write a program which writes I/O port address 440 (hex). The output data is a time interval value. The value range is from 01 (hex) to 3F (hex), and the related time interval is from 1 sec. to 63 sec.

Data Time Interval

01 1 sec.

02 2 sec.

03 3 sec.

04 4 sec.

i i

i i

i i

3F 63 sec.

After data entry, your program must refresh the watchdog timer by rewriting the I/O port 440 (hex) while simultaneously setting it. When you want to disable the watchdog timer, your program should read I/O port 440 (hex).

The following example shows how you might program the watchdog timer :

```
;-----  
; Enter the extended function mode , interruptible double-write |  
;-----  
MOV DX,2EH  
MOV AL,87H  
OUT DX,AL  
OUT DX,AL
```



```

;-----
; Configure logical device 8, configuration register CRF6 |
;-----
MOV DX,2EH
MOV AL,07H ; point to Logical Device Number Reg.
OUT DX,AL
MOV DX,2FH
MOV AL,08H ; select logical device 8
OUT DX,AL
;
MOV DX,2EH
MOV AL,30H ;Set watch dog activate or inactivate
OUT DX,AL
MOV DX,2FH
MOV AL,01H ; 01:activate 00:inactivate
OUT DX,AL
;
MOV DX,2EH
MOV AL,F5H ; Setting counter unit is second
OUT DX,AL
MOV DX,2FH
MOV AL,00H
OUT DX,AL
;
MOV DX,2EH
MOV AL,F6H
OUT DX,AL
MOV DX,2FH
MOV AL,05H ; Set 5 seconds
OUT DX,AL

```

```
;-----  
; Exit extended function mode |  
;-----  
MOV DX,2EH  
MOV AL,AAH
```

Pin Assignments


This appendix contains information on PPC-V106's pin assignments.

Appendix B Pin Assignments

B.1 Inverter Power Connector (CN10)

Table B.1: Inverter power connector (CN10)

Pin	Signal
1	+12V
2	GND
3	ENAVEE
4	VBR
5	+5 V

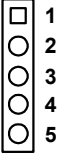

A vertical diagram of a 5-pin connector. The pins are numbered 1 to 5 from top to bottom. Pin 1 is a square, and pins 2, 3, 4, and 5 are circles.

B.2 Internal Speaker Connector (CN14)

 


Table B.2: Internal speaker connector (CN14)

Pin	Signal
1	Speaker out_L -
2	Speaker out_L +
3	Speaker out_R -
4	Speaker out_R +

B.3 Floppy Drive Connector (CN16) Reserved

Table B.3: Floppy drive connector (CN16)

Pin	Signal	Pin	Signal
1	VCC (+5 V)	14	STEP
2	INDEX	15	GND
3	VCC (+5 V)	16	WRITE ENABLE
4	DRIVE SELECT	17	GND
5	VCC (+5 V)	18	WRITE DATA
6	DISK CHANGE	19	GND
7	NC	20	TRACK 0
8	NC	21	GND
9	NC	22	WRITE PRO- TECT
10	MOTOR ON	23	GND
11	NC	24	READ DATA
12	DIRECTION	25	GND
13	DENSITY SELECT	26	SIDE 1 SELECT

The diagram shows a vertical 26-pin connector. Pin 1 is a square-shaped pin, and pin 2 is a circular pin. Pins 3, 4, 23, and 24 are also labeled with their respective pin numbers. The remaining pins (5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 25, 26) are unlabeled in the diagram but correspond to the signals listed in the table.

B.4 IDE Hard Disk Drive Connector (CN15)

Pin	Signal	Pin	Signal
1	IDE RESET #	2	GND
3	DATA 7	4	DATA 8
5	DATA 6	6	DATA 9
7	DATA 5	8	DATA 10
9	DATA 4	10	DATA 11
11	DATA 3	12	DATA 12
13	DATA 2	14	DATA 13
15	DATA 1	16	DATA 14
17	DATA 0	18	DATA 15
19	SIGNAL GND	20	N/C
21	HDD DREQ	22	GND
23	IO WRITE	24	GND
25	IO READ	26	GND
27	HD READY	28	CABLE SELECT
29	HDACK 0 #	30	GND
31	IRQ14	32	N/C
33	ADDR 1	34	N/C
35	ADDR 0	36	ADDR 2
37	HDD SELECT 0 #	38	HDD SELECT 1 #
39	IDE ACTIVE 0 #	40	GND
41	Vcc	42	VCC
43	GND	44	N/C


low active

B.7 Flat Panel Display Connector (CN2) (Reserved)

Pin	Signal	Pin	Signal
1	VDDSAFE *	2	VDDSAFE *
3	GND	4	GND
5	VDDSAFE *	6	VDDSAFE *
7	Vcon	8	GND
9	P0	10	P1
11	P2	12	P3
13	P4	14	P5
15	P6	16	P7
17	P8	18	P9
19	P10	20	P11
21	P12	22	P13
23	P14	24	P15
25	P16	26	P17
27	P18	28	P19
29	P20	30	P21
31	P22	32	P23
33	GND	34	GND
35	SHFCLK	36	FPVS
37	FPDE	38	FPHS
39	ENAVEE	40	ENAVEE


* VDDSAFE can choose +5V or +12V output via JP2

B.8 COM1

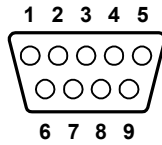


Pin	Signal
1	DCD
2	RxD
3	TxD
4	DTR
5	GND
6	DSR
7	RTS
8	CTS
9	RI

B.9 COM2

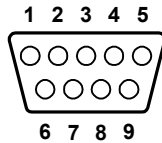

Pin	Signal		
	RS-232	RS-422	RS-485
1	DCD	TX-	DATA-
2	RX	TX+	DATA+
3	TX	RX+	---
4	DTR	RX-	---
5	GND	GND	---
6	DSR	---	---
7	RTS	---	---
8	CTS	---	---
9	RI	---	---

B.10 COM3

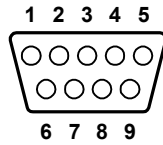

Pin	Signal
1	DCD
2	RxD
3	TxD
4	DTR
5	GND
6	DSR
7	RTS
8	CTS
9	RI

B.11 COM3 Connector (CN 26)

Pin	Signal
1	DCD
2	DSR
3	RXD
4	RTS
5	TXD
6	CTS
7	DTR
8	RI
9	GND
10	5V

B.12 COM 4 Connector (CN 23)

Pin	Signal
1	DCD
2	DSR
3	RXD
4	RTS
5	TXD
6	CTS
7	DTR
8	RI
9	GND
10	5V
11	GND
12	5V

B.13 USB Port


Pin	Signal
1	VCC
2	DATA-
3	DATA+
4	GND

B.14 Parallel Port Connector (CN11)

Table B.4: Parallel Port Connector (CN8)

Pin	Signal	Pin	Signal
1	STROBE*	2	D0
3	D1	4	D2
5	D3	6	D4
7	D5	8	D6
9	D7	10	ACK*
11	BUSY	12	PE
13	SLCT	14	AUTOFD*
15	ERR*	16	INIT*
17	SLCTINI*	18	GND
19	GND	20	GND
21	GND	22	GND
23	GND	24	GND
25	GND		

* low active

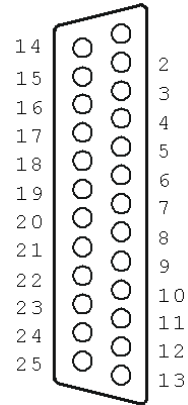

B.15 VGA Connector

Pin	Signal
1	RED
2	GREEN
3	BLUE
4	N/A
5	GND
6	GND
7	GND
8	GND
9	N/A
10	GND
11	N/A
12	SPDAT
13	HSYNC
14	VSYNC
15	SPCLK

