



Getac



E100

USER'S MANUAL

Rugged Mobile Computing Solutions

June 2011

TRADEMARKS

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. All brand and product names are trademarks or registered trademarks of their respective companies.

NOTE

The information in this manual is subject to change without notice. For the latest version of the manual, please visit the Getac website at www.getac.com.

Table of Contents

Chapter 1	Getting Started	1-1
	Getting the Tablet PC Running.....	1-2
	Unpacking	1-2
	Installing the Battery Pack and Connecting to AC Power.....	1-3
	Using the Hand Strap	1-6
	Turning On and Off the Tablet PC	1-7
	Taking a Look at the Tablet PC.....	1-8
	Front Components.....	1-8
	Rear Components	1-11
	Right-Side Components.....	1-12
	Left-Side Components	1-12
	Top Components	1-13
	Bottom Components	1-14
Chapter 2	Operating Your Tablet PC.....	2-1
	Using the Touchscreen.....	2-2
	Using Multi-touch Gestures (Optional)	2-3
	Using the Input Panel	2-6
	Using the Keypad.....	2-7
	Control Buttons	2-7
	Numeric Keypad with Alternative Functions.....	2-8
	Cursor-Control Keys with Alternative Functions	2-9
	Using the Network Features	2-10
	Using the LAN	2-10
	Using the Wireless LAN (Optional).....	2-10
	Using the Bluetooth Feature (Optional)	2-13
	Turning On/Off the Bluetooth Radio	2-13

Connecting to another Bluetooth Device.....	2-14
Using the 3G Feature (Optional).....	2-17
Installing the SIM Card	2-17
Connecting to 3G Network.....	2-19
Using the Camera (Optional)	2-23
Using the Fingerprint Scanner (Optional).....	2-24
Chapter 3 Managing Power	3-1
AC Adapter	3-2
Battery Pack.....	3-3
Charging the Battery Pack	3-3
Checking the Battery Level	3-4
Replacing the Battery Pack	3-5
Battery Low Signals and Actions	3-6
Power Management	3-7
Hibernation	3-8
Power-Saving Tips	3-9
Chapter 4 Expanding Your Tablet PC	4-1
Using Smart Cards.....	4-2
Using PC Cards.....	4-3
Connecting a USB Device	4-4
Connecting a Serial Device.....	4-5
Connecting an Audio Device.....	4-6
Using the Docking Station	4-7
Chapter 5 Using BIOS Setup and System Recovery.....	5-1
BIOS Setup	5-2
When and How to Use	5-2
Information Menu	5-3
Main Menu.....	5-4
Advanced Menu.....	5-5
Security Menu	5-7
Boot Menu	5-8
Exit Menu	5-9

	System Recovery.....	5-10
Chapter 6	Using Special Utilities	6-1
	Using the OSD Control Panel	6-2
	Quick Button Setup	6-6
	Using G-Manager	6-8
	Starting G-Manager.....	6-8
	System Tab	6-9
	Battery Tab.....	6-10
	ECO Tab	6-12
	ECO Information	6-13
	Light Sensor Tab	6-14
	Antenna Tab	6-15
	Ignition Tab.....	6-16
	Monitoring Tab.....	6-17
	GPS Status Tab	6-19
Chapter 7	Caring for the Tablet PC	7-1
	Protecting the Tablet PC	7-2
	Using the Cable Lock.....	7-2
	Using an Anti-Virus Strategy	7-3
	Using Action Center (for Windows 7)	7-3
	Taking Care of the Tablet PC	7-4
	Location Guidelines	7-4
	General Guidelines	7-4
	Cleaning Guidelines.....	7-5
	Battery Pack Guidelines.....	7-5
	Touchscreen Guidelines.....	7-6
	When Traveling.....	7-8
Chapter 8	Troubleshooting.....	8-1
	Preliminary Checklist.....	8-2
	Solving Common Problems	8-3
	Battery Problems	8-3
	Bluetooth Wireless Transmission Problems	8-3

Display Problems.....	8-4
Hardware Device Problems.....	8-4
Hard Disk Drive Problems.....	8-5
LAN Problems.....	8-5
PC Card Problems.....	8-5
Power Management Problems	8-6
Software Problems	8-6
Sound Problems	8-7
Startup Problems	8-7
Wireless LAN Problems.....	8-8
Other Problems.....	8-9
Resetting the Tablet PC	8-10

Appendix A Specifications A-1

Appendix B Regulatory Information..... B-1

On the Use of the System.....	B-2
Class B Regulations.....	B-2
Safety Notices	B-3
On the Use of the RF Device	B-6
USA and Canada Safety Requirements and Notices	B-6
European Union CE Marking and Compliance Notices....	B-9

Chapter 1

Getting Started

Congratulations on purchasing this rugged Tablet PC.

This chapter first tells you step by step how to get the Tablet PC up and running. Then, you will find a section briefly introducing the external components of the Tablet PC.

Getting the Tablet PC Running

Unpacking

After unpacking the shipping carton, you should find these standard items:

- Tablet PC
- Accessories:
 - AC adapter
 - AC power cord
 - Hand strap
 - Screen protector film (already attached to the screen)
 - Stylus

Inspect all the items. If any item is damaged or missing, notify your dealer immediately.


Keep the shipping carton and packing materials in case you need to ship or store the Tablet PC in the future.

Installing the Battery Pack and Connecting to AC Power


The Tablet PC operates either on the external AC power or internal battery power. It is suggested that you use AC power when starting up the Tablet PC for the very first time.

CAUTION: Use only the AC adapter included with your Tablet PC. Using other AC adapters may damage the Tablet PC.


1. Make sure that the Tablet PC is turned off.
2. Place the Tablet PC upside down.
3. Lift the latch handle of the battery cover and turn it counterclockwise to the unlock position. Then, detach the cover from the Tablet PC.

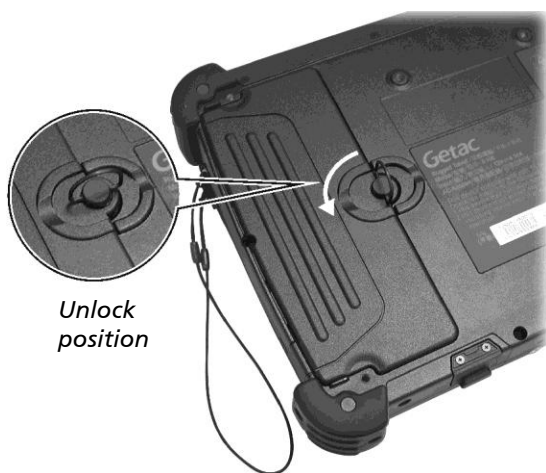


4. Fit the battery pack into place (❶). Tightening the two screws (❷) is optional. The lack of the screws will not affect the rugged and waterproof feature of the Tablet PC.

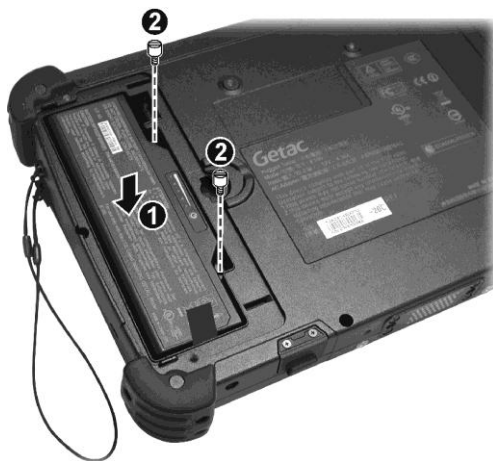

5. Replace the battery cover and turn the latch clockwise to the lock position.

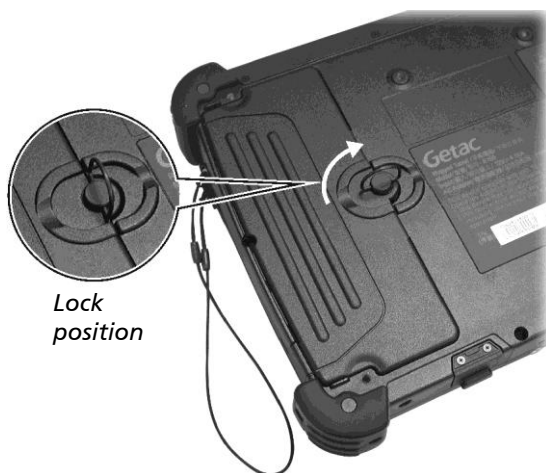

6. Plug the DC cord of the AC adapter to the power connector of the Tablet PC (❶). Plug the female end of the AC power cord to the AC adapter and the male end to an electrical outlet (❷).

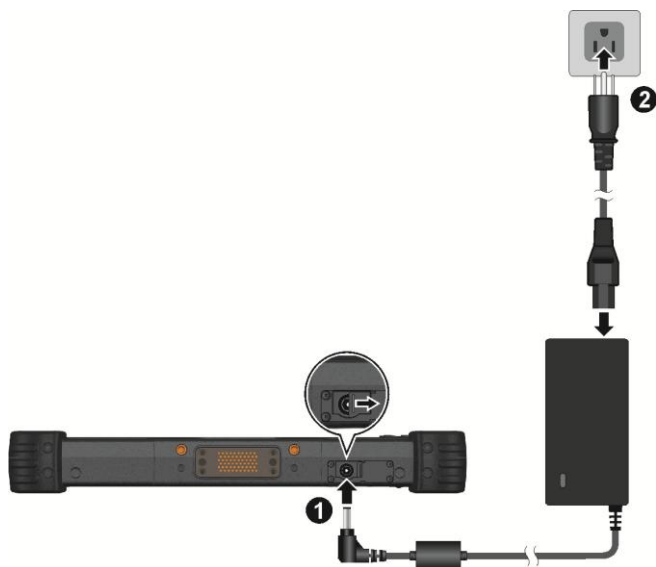

7. Power is being supplied from the electrical outlet to the AC adapter and onto your Tablet PC. Now, you are ready to turn on the Tablet PC.

CAUTION:

- When you disconnect the AC adapter, disconnect from the electrical outlet first and then from the Tablet PC. A reverse procedure may damage the AC adapter or the Tablet PC.
- When unplugging the connector, always hold the plug head. Never pull on the cord.

NOTE: When the AC adapter is connected, it also charges the battery pack. For information on using battery power, see Chapter 3.

Using the Hand Strap

Align the four hooks of the hand strap with the four corresponding holes on the Tablet PC and tighten the screws.




The hand strap allows you to firmly hold the Tablet PC by inserting your hand through the hand strap.



Turning On and Off the Tablet PC

Turning On

Press the power button (). The operating system such as Microsoft Windows should start.



Turning Off

When you finish a working session, you can stop the system by turning off the power or leaving it in Sleep or Hibernation mode:

To...	Do this...
Power off (Shutdown)	Use the Windows Start menu in the lower left and follow the shutdown procedure.
Sleep	Press the power button* or use the Windows Start menu to put the Tablet PC in Sleep mode.
Hibernate	Use the Windows Start menu to put the Tablet PC in Hibernation mode.

* "Sleep" is the default setting of the power button. You may change what the power button does in Windows Control Panel.


Press the power button to resume or turn on the system from any of these modes.

Taking a Look at the Tablet PC




NOTE: Depending on the model you purchased, the appearance of your Tablet PC may not be exactly the same as those shown in this manual.


CAUTION: When not using a connector, make sure that the connector cover is completely closed to ensure the waterproof integrity of the Tablet PC.

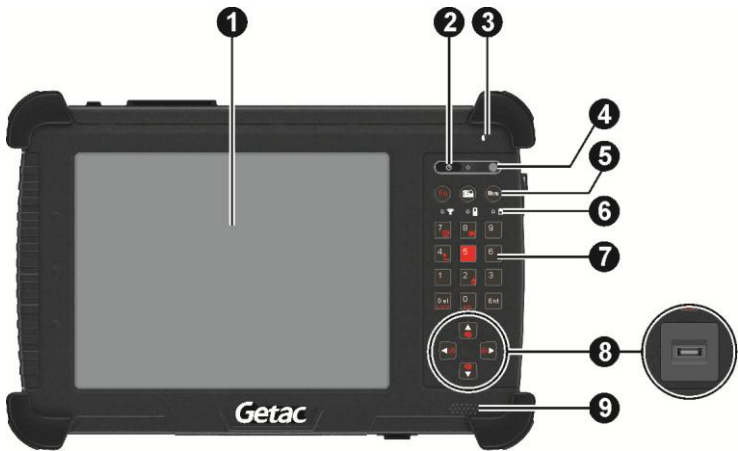Front Components




Ref	Component	Description	See Also
❶	Touchscreen	Displays and receives information for the Tablet PC.	P. 2-2
❷	Power Button	Turns the power ON and OFF (Sleep mode by default). The green LED beside the button glows when the power is on and blinks when the system is in Sleep mode.	P. 1-7

Ref	Component	Description	See Also
③	Microphone	Receives sound and voice to record voice.	
④	Light Sensor	Senses the ambient light for automatic adjustments of the display and keypad backlight. The features can be enabled through OSD Control Panel and G-Manager. NOTE: Do not cover the sensor when in use.	P. 6-2 P. 6-14
⑤	Control Buttons		
	Fn	Toggles the Fn keylock ON and OFF.	P. 2-7
		Toggles the keypad lock ON and OFF.	P. 2-7
	Menu	Toggles the "OSD Control Panel" ON and OFF.	P. 6-2
⑥	Indicators		
	RF (Radio Frequency) 	Lights green (for models without WWAN 3G) or amber (for models with WWAN 3G) when RF radio is on.	P. 6-2
	Battery Charge 	Lights green when the battery is fully charged.	P. 3-3
		Lights amber when the battery is being charged.	
		Blinks red (once per second) when the battery's capacity is below 10%.	
		Blinks red rapidly (once per 0.5 second) when there is a thermal protection problem with the battery. Ask for repair service in case this happens.	
		Blinks amber when the battery charging is in an abnormal state. Replace the battery in case this happens.	


Ref	Component	Description	See Also
	Hard Disk Drive 	Lights green when hard disk drive is being accessed.	
		Lights red when the optional heater is on during system operation.	
		Blinks red when the optional heater is in an abnormal state.	
7	Numeric Keypad	Provides number, Delete, and Enter keys. When Fn keylock is on, the keys provide alternative functions.	P. 2-7
8	Can be one of the below depending on your model:		
	Cursor-control Keys	Serves as the arrow keys. When Fn keylock is on, the keys provide alternative functions.	P. 2-8
	Fingerprint Scanner (optional)	Uses fingerprint verification to protect against unauthorized access.	P. 2-23
9	Speaker	Sends out sound and voice from your Tablet PC.	

Rear Components

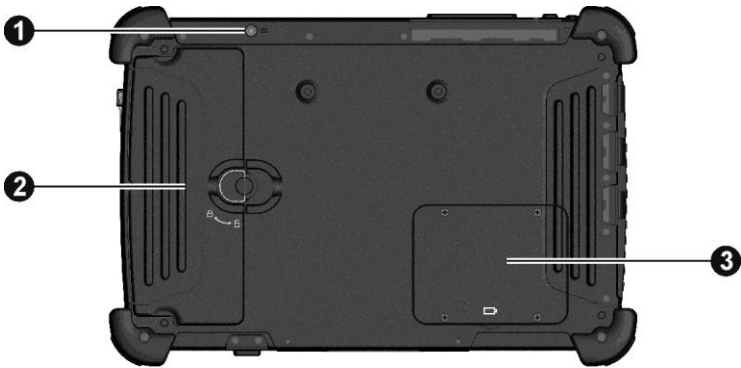


Ref	Component	Description	See Also
❶	Camera Lens (optional)	Allows you to use the camera function.	P. 2-23
❷	Battery Pack	Inside is the battery pack that supplies power to your Tablet PC when external power is not connected.	P. 3-3
		Contains the SIM card slot (optional).	P. 2-17
❸	Backup Battery (optional)	Provides temporary backup power when the main battery pack is removed. The battery will be recharged when AC power is connected. NOTE: This battery is not user-replaceable. It never functions as the power source as long as the main battery pack is installed.	P. 3-5

Right-Side Components

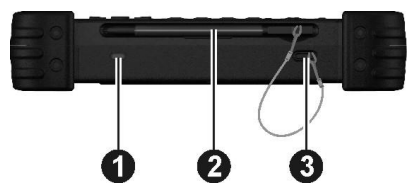


Ref	Component	Description	See Also
❶	Kensington Lock	Locks the Tablet PC to a stationary object for security.	P. 7-2
❷	Stylus	Serves as the input device by tapping on the touchscreen to make selections and enter information.	P. 2-2
❸	Tether Hole	Stylus tethered to this hole.	

Left-Side Components

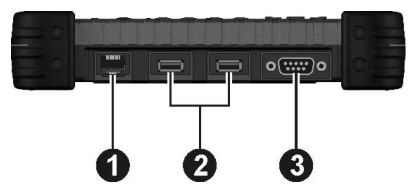


Ref	Component	Description	See Also
❶	RJ-45 Connector	Connects the LAN cable.	P. 2-10
❷	USB Ports	Each of the two ports connects a USB device, such as a USB flash disk, printer, digital camera, joystick, and more.	P. 4-2
❸	Serial Port	Connects a serial device.	P. 4-5

Top Components

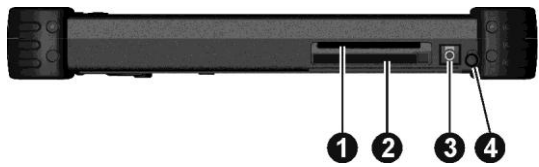

Ref	Component	Description	See Also
❶	Smart Card Reader	Accepts a Smart Card for additional security feature.	P. 4-2
❷	Can be one of the below depending on your model:		
	PC Card Slot	Accepts a PC card for additional functions.	P. 4-3
	Smart Card Reader (optional)	Accepts a Smart Card for additional security feature.	P. 4-2
	None (optional)	There is no card slot if your model comes with the backup battery option.	
❸	Headphone Out Connector	Connects a set of headphones or external speakers with amplifier	P. 4-6
❹	WWAN 3G Antenna (optional)	Should be pulled out for reception of mobile telecommunications signals.	P. 2-19

Bottom Components

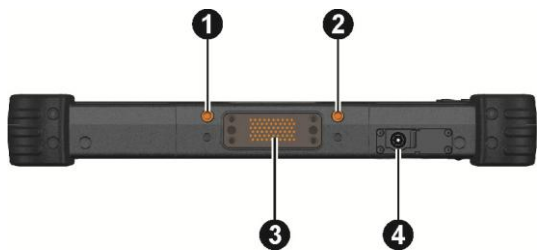

Ref	Component	Description	See Also
❶	3G Pass-through Connector (optional)	Connects to the external antenna for 3G transmission. NOTE: Must be connected via a docking station.	
❷	GPS Pass-through Connector (optional)	Connects to the external antenna for GPS receiver. NOTE: Must be connected via a docking station.	
❸	Docking Connector	Connects to the Docking Station (available as an option).	P. 4-5
❹	Power Connector	Connects the AC adapter.	P. 1-3

Chapter 2

Operating Your Tablet PC

This chapter provides information about the use of the Tablet PC.

If you are new to Tablet PCs, reading this chapter will help you learn the operating basics. If you are already a computer user, you may choose to read only the parts containing information unique to your Tablet PC.

CAUTION: The Tablet PC can get uncomfortably warm when you use it in high temperatures. As a safety precaution in such a circumstance, do not place the Tablet PC on your lap or touch it with your bare hands for extended periods of time. Prolonged body contact can cause discomfort and potentially a burn.

Using the Touchscreen

NOTE:

- The touchscreen function is not available when running the BIOS Setup program or when using the full screen in DOS mode.
- When there is a noticeable discrepancy in the placement of the stylus on the screen and the indicated position of the onscreen pointer, use the calibration utility by clicking the CalTouch shortcut on Windows desktop.

CAUTION: Do not use a sharp object such as a ballpoint pen or pencil on the touchscreen. Doing so may damage the touchscreen surface. Use your finger or the included stylus. A screen protector film has been attached to the screen before shipment. The film is a consumable, which will be worn out after a period of use (6 months in average). You can purchase a new one when replacement is required.

The screen of your Tablet PC is touch-sensitive. You can control the location of the cursor/pointer on the screen using your finger or the included stylus to communicate with the Tablet PC.




Here are some common terms that you should know when using the touchscreen:


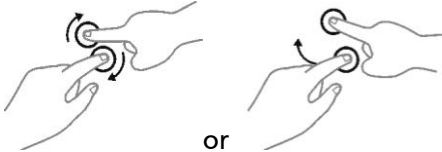
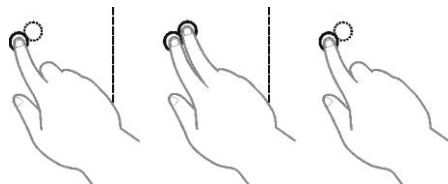
Term	Action
Click/Point	Tap gently on the touchscreen.
Double-click	Tap twice on the touchscreen rapidly.
Drag and drop	Press lightly on the touchscreen and move your finger until you reach your destination (drag). Finally, release your finger (drop) when you finish dragging your selection to the destination. The object will drop into the new location.

Using Multi-touch Gestures (Optional)

If your model comes with multi-touch-capable screen and Windows 7, you can interact with your Tablet PC by placing two fingers on the screen. The movement of the fingers across the screen creates “gestures,” which send commands to the computer.

Here are the multi-touch gestures that you can use:

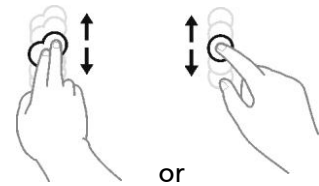Gestures	Actions ○ = finger down; ○ = finger up)	Descriptions
Pan (Scroll)	 Drag 1 or 2 fingers up or down.	Use panning to see another part of a page that has scroll bars.

Gestures	Actions ○ = finger down; ◉ = finger up)	Descriptions
Zoom (Pinch)	 Move two fingers apart/toward each other.	Use zooming to make an item (a photo for example) on the screen larger or smaller. The gesture works in applications that support mouse wheel zooming.
Rotate	 Move two fingers in opposing directions. -or- Use one finger to pivot around another.	Use rotating to move a picture or other item on the screen in a circular direction (clockwise or counter-clockwise). The gesture works in applications that support the specific gesture.
Press and Tap	 Press on target and tap using a second finger.	Use press and tap to access the shortcut menu.

Gestures	Actions ○ = finger down; ○ = finger up)	Descriptions
Two-finger Tap	<p>Tap two fingers at the same time (where the target is in the midpoint between the fingers).</p>	<p>The function is defined by applications that support the specific gesture.</p>
Flicks	<p>Make quick drag gestures in the desired direction.</p>	<p>Flick left or right to navigate back and forward in a browser and other applications. The gesture works in most applications that support back and forward.</p>


Using the Input Panel



Use the Input Panel to enter text and perform various keyboard functions. There are two types of Input Panels for you to use in Windows 7:

- **Touch Keyboard** allows you to enter text by tapping the keys with your stylus, like pressing the keys on a standard keyboard.

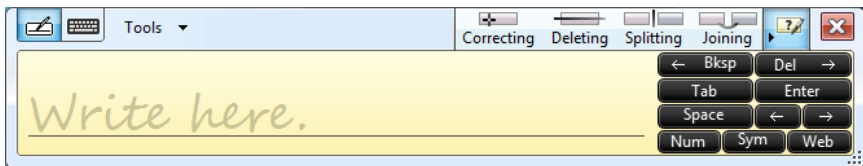

- **Writing Pad** allows you to write on the writing pad, like writing on a piece of paper. Your handwriting will be converted into typed text.



To open the Input Panel, tap the Input Panel tab, which appears by default on the left edge of the screen. To switch between the two types, tap  or  at the upper left corner of the Input Panel.

NOTE: For more information on using the Input Panel, see Windows' online help.

Using the Keypad




The keypad of your Tablet PC can be divided into three areas:

- Control buttons
- Numeric, Delete (**Del**), and Enter (**Ent**) keys
- Cursor-control keys

Control Buttons



Located on top of the keypad are three control buttons:


- **Fn** button toggles the **Fn** keylock ON and OFF. When ON (indicated by the icon  on the taskbar), you can use the alternative functions of the keypad keys (as described in the next two sections).
-  button toggles the keypad lock ON and OFF. Press the button to lock the keypad (indicated by the icon  on the taskbar) so that accidental pressing of the keypad does not result in unexpected operation. To unlock, press and hold the button for more than three second.
- **Menu** button toggles the OSD Control Panel ON and OFF. (See “Using the OSD Control Panel” in Chapter 6 for detailed information.)





NOTE: The status of **Fn** lock and keypad lock will persist through Sleep/Hibernation mode or system power off.

Numeric Keypad with Alternative Functions

Shown below is the 12-key numeric keypad with Delete and Enter keys.




When the **Fn** keylock is ON (indicated by the icon  on the taskbar), the keys with orange icons provide alternative functions as described below.


-  rotates the screen display by 90° with each press.
-  switches the keypad backlight ON and OFF.
-  switches the sunlight-readable mode ON and OFF. When ON, the display brightness is set to the highest level.
-  serves as the mouse right-click button.
- **C+A+D** serves as the **Ctrl+Alt+Del** key combination for resetting the system.
- **ESC** serves as the **Escape** key.





Cursor-Control Keys with Alternative Functions

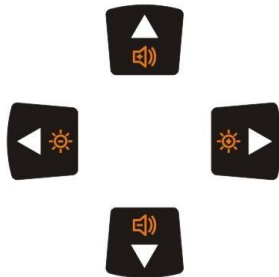NOTE: The cursor-control keys do not exist on models having the fingerprint scanner option.

Cursor-control keys control cursor movement. The word “cursor” refers to the indicator on the screen (except for pointer on screen) that lets you know exactly where on your screen anything you type will appear. It can take the form of a vertical or horizontal line, a block, or one of many other shapes.



When the **Fn** keylock is ON (indicated by the icon  on the taskbar), the keys with orange icons provide alternative functions as described below.


-  increase the sound volume.
-  decrease the sound volume.
-  increase the brightness of LCD display.
-  decrease the brightness of LCD display.


Using the Network Features

Using the LAN

NOTE: Your Tablet PC implements DSM (Deep Slumber Mode) for the LAN module to save battery power. Power is supplied to the LAN module only when the LAN cable is connected. This means the LAN module will not appear in Windows' Device Manager if the LAN cable is not connected and appear if the cable is connected. (The "LAN DSM" feature is enabled in the BIOS Setup by default.)

The internal 10/100/1000Base-T LAN (Local Area Network) module allows you to connect your Tablet PC to a network. It supports data transfer rate up to 1000 Mbps.

To connect the network cable to the LAN module, connect one end of the LAN cable to the RJ-45 connector () on the Tablet PC and the other end to the network hub.

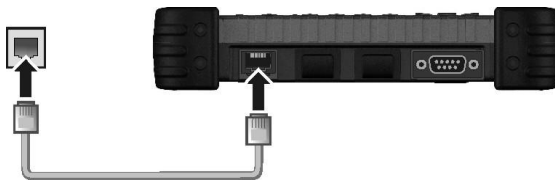

Using the Wireless LAN (Optional)

The WLAN features include:

- Peer-to-Peer (Ad-Hoc) and Access Point (Infrastructure) modes support
- WEP (Wired Equivalent Privacy) 64/128-bit data encryption
- IEEE 802.11a/g/n standard compliance


Technology	802.11a	802.11g	802.11n
Stated Maximum Throughput (Mbps)	11	54	100 Mbps or more
Data Rates (Mbps)	11, 5.5, 2, 1	54, 36, 18, 9	100 ~ 210
Band (GHz)	2.412 ~ 2.462	2.4	2.4 / 5
Modulation Technology	OFDM (Orthogonal Frequency Division Multiplexing)	OFDM (Orthogonal Frequency Division Multiplexing)	Spatial multiplexing, uses MIMO (multiple-input multiple-output)

Turning On/Off the WLAN Radio

NOTE: The FAA (Federal Aviation Agency) has deemed it unsafe to operate wireless devices in aircraft as this may interfere with flight safety. Remember to turn off wireless LAN when using your Tablet PC in the airplane.



1. Press the **Menu** button on your Tablet PC to open the OSD Control Panel.
2. Click the **RF** button to switch the wireless radio on/off. The word **ON** or **OFF** on the button indicates the current status.



3. Windows Mobility Center has wireless network turned on by default. The Wireless Network icon  on the taskbar should appear without a

red X. (In case you have previously turned it off in Windows Mobility Center, be sure to turn it on when using the function the next time.)

Connecting to a Wireless Network

1. Make sure that the WLAN function is enabled (as described above).
2. Tap the Wireless Network icon  on the taskbar. (An orange light in the icon  indicates connections are available.)
3. In the list of available wireless networks, select a network, and then click **Connect**.



4. Some networks require a network security key or passphrase. To connect to one of those networks, ask your network administrator or Internet service provider (ISP) for the security key or passphrase.




NOTE:

- Once you have connected to a wireless network, a profile is added in Windows. By default, Windows will automatically connect to the wireless network when it is in range.
- For more information on connecting to a wireless network, see Windows' online help.

Using the Bluetooth Feature (Optional)

The Bluetooth technology allows short-range (about 10 meters) wireless communications between devices without requiring a cable connection. Data can be transmitted through walls, pockets and briefcases as long as two devices are within range.

The status of the Bluetooth connection is indicated by the Bluetooth icon located in the taskbar.


Status	Icon
Off	 (blue with red logo)
On	 (blue with white logo).
Connected	 (blue with green logo)

You can use the Bluetooth Utility to configure Bluetooth connection settings and transfer files.


Turning On/Off the Bluetooth Radio


1. Press the **Menu** button on your Tablet PC to open the OSD Control Panel.
2. Click the RF button to switch the wireless radio on/off. The word **ON** or **OFF** on the button indicates the current status.



3. The Bluetooth function is enabled by default, as indicated by the Bluetooth icon  on the Windows taskbar. (In case you have previously disabled the function in the Bluetooth utility, be sure to enable it when using the function the next time.)

Connecting to another Bluetooth Device

1. Make sure that the Bluetooth function is enabled (as described above).
2. Make sure that the target Bluetooth device is turned on, discoverable and within close range. (See the documentation that came with the Bluetooth device.)
3. Start the Bluetooth utility by double-clicking the Bluetooth icon  on the taskbar and click **New Connection**.

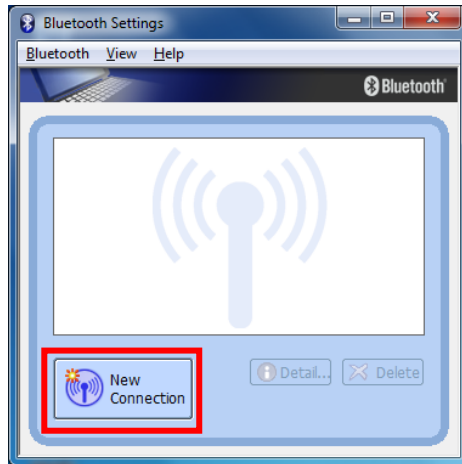

4. The **Add New Connection Wizard** window appears. Select **Express Mode (Recommended)**, and then click **Next**.



5. Select the device to connect to and click **Next**.



6. Depending on the type of Bluetooth device that you want to connect to, you will need to enter the pertinent information.

For detailed information on using the Bluetooth Utility, see the Bluetooth Utility Help.

Using the 3G Feature (Optional)

3G is the third generation of mobile phone standards and technology after 2G. Services include wide-area wireless voice telephony and broadband wireless data, all in a mobile environment.


Unlike IEEE 802.11 networks, 3G networks are “wide area cellular telephone networks” which evolved to incorporate high-speed internet access and video telephony. IEEE 802.11 networks are short range, high-bandwidth networks primarily developed for data.

NOTE: Your model only supports data transmission. Voice transmission is not supported.


Installing the SIM Card

To use the 3G feature to connect to the Internet, you need to subscribe to 3G service and acquire a SIM card from the service provider. To install the SIM card, follow these steps:

1. Make sure that the Tablet PC is not turned on or connected to AC power.
2. Lift the latch handle of the battery cover and turn it counterclockwise to the unlock position. Then, detach the cover from the Tablet PC.

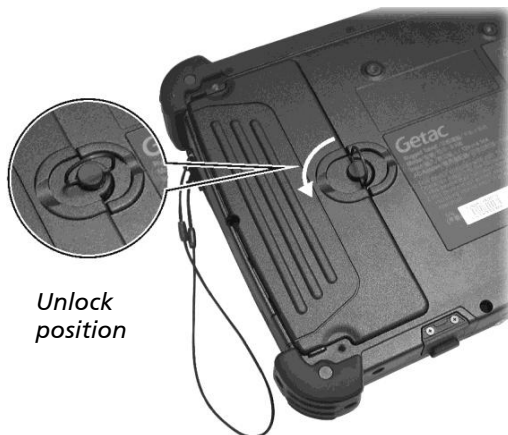

3. Remove the two screws if existing (❶). Pull on the ribbon strip to lift the battery pack off the Tablet PC (❷).

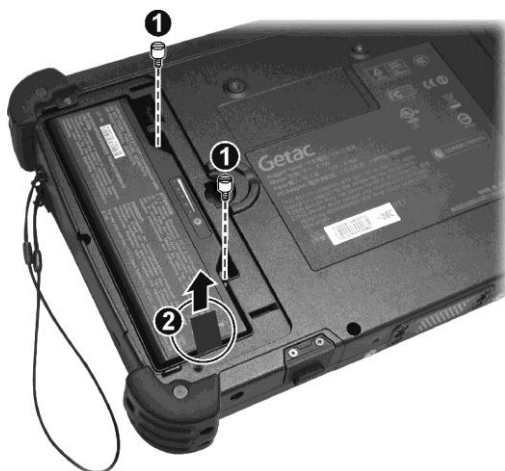

4. Locate the SIM card slot and push the SIM card into the slot. Make sure the beveled corner on the SIM card is facing towards the Tablet PC and that the golden contact area on the card is facing downwards.



To remove the SIM card, just push in (❶) the SIM card to pop-out (❷) and remove the card.



5. Replace the battery pack.
6. Replace the battery cover and turn the latch clockwise to the lock position.

Connecting to 3G Network

Turning On/Off the 3G Radio

1. Press the **Menu** button on your Tablet PC to open the OSD Control Panel.
2. Click the **RF** button to switch the wireless radio on/off. The word **ON** or **OFF** on the button indicates the current status.



3. Make sure that the 3G Utility (**OneClick Internet**) has 3G radio turned on.

Setting up a 3G Connection



To set up a 3G connection for the first time, follow these steps:


1. Make sure that the SIM card is inserted and the 3G function is enabled (as described above).
2. Pull out the 3G antenna.



3. On Windows desktop, double click the **OneClick Internet** shortcut on Windows desktop. The screen as below appears.




4. If necessary, enter the PIN of your SIM card.
5. If the radio is currently off, click  to turn on the radio.
6. Click **Settings**. You will be in the **Profile** page. Click  to set up a new profile.



Settings

Profile History Info General

Profiles: 

APN:

Username:

Password:

☐ Use automatic DNS-settings

DNS1:

DNS2:

☐ Use Proxy Server

Proxy:

Port:

Set Profile

7. Enter the required information. Contact your network operator for the correct information.

Using the 3G Application

Once a new profile has been created, it will appear in the dropdown menu Profiles. You can then select it by clicking **Set Profile** to use it.

You can manage the mobile Internet communication:

- Internet Connection and Email download
- SMS Manager

- Managing contacts from SIM and Outlook
- GPS Management (for models having the GPS module)

NOTE: For detailed information on using **OneClick Internet**, click **Help**.

Using the Camera (Optional)


You can use G-Camera to perform the following:

- Take pictures
- Record video
- Path tracking and capture (for models having the GPS module)
- GPS information and settings (for models having the GPS module))

To start G-camera, double click the **G-Camera** shortcut icon on the Windows desktop. The camera control panel appears.



Click the **Shutter** button  or press **Enter** to take photos.

For detailed descriptions of G-Camera, click the button .

Using the Fingerprint Scanner (Optional)

The fingerprint scanner provides a strong authentication mechanism based on fingerprint recognition. You can log on to your computer or sign in to a web site with your fingerprint instead of a password. You can also encrypt files and folders with your fingerprint.

NOTE: You can register a fingerprint only after creating a password for the Windows user account.

CAUTION: For the fingerprint file/folder encryption feature, the maximum file/folder size allowed is 2GB.

To register your fingerprint, click **Start** → **All Programs** → **Fingerprint Software** → **Fingerprint Registration**. Click the finger you want to register and follow the onscreen instructions to complete.



You can then use the Fingerprint Software to set up how the fingerprint authentication works.



For detailed information, click **Start → All Programs → Fingerprint Software → Help**.

Chapter 3

Managing Power

Your Tablet PC operates either on external AC power or on internal battery power.

This chapter tells you how you can effectively manage power. To maintain optimal battery performance, it is important that you use the battery in the proper way.

AC Adapter

CAUTION:

- The AC adapter is designed for use with your Tablet PC only. Connecting the AC adapter to another device can damage the adapter.
- The AC power cord supplied with your Tablet PC is for use in the country where you purchased your Tablet PC. If you plan to go overseas with the Tablet PC, consult your dealer for the appropriate power cord.
- When you disconnect the AC adapter, disconnect from the electrical outlet first and then from the Tablet PC. A reverse procedure may damage the AC adapter or Tablet PC.
- When unplugging the connector, always hold the plug head. Never pull on the cord.



The AC adapter serves as a converter from AC (Alternating Current) to DC (Direct Current) power because your Tablet PC runs on DC power, but an electrical outlet usually provides AC power. It also charges the battery pack when connected to AC power.

The adapter operates on any voltage in the range of 100~240 V AC.

Battery Pack

The battery pack is the internal power source for the Tablet PC. It is rechargeable using the AC adapter.


The operating time of a fully charged battery pack depends on how you are using the Tablet PC. When your applications often access peripherals, you will experience a shorter operating time.

NOTE: Care and maintenance information for the battery is provided in the “Battery Pack Guidelines” section in Chapter 7.

Charging the Battery Pack

NOTE:

- Charging will not start if the battery’s temperature is below 0 °C (32 °F) or above 40 °C (104 °F); the charging process will stop if the battery’s temperature gets above 60 °C (140 °F). To avoid damaging the battery under this situation, disconnect the AC adapter and wait for the battery to return to room temperature before charging again.
- During charging, do not disconnect the AC adapter before the battery has been fully charged; otherwise you will get a prematurely charged battery.

To charge the battery pack, connect the AC adapter to the Tablet PC and an electrical outlet. The Battery Charge Indicator () on the Tablet PC glows amber to indicate that charging is in progress. You are advised to keep the Tablet PC power off while the battery is being charged. When the battery is fully charged, the Battery Charge Indicator glows green.

It takes approximately 3 hours to fully charge the Li-Ion battery pack at a room temperature of 25 °C (77 °F) (may need a longer charging time at lower temperatures).

CAUTION: After the Tablet PC has been fully recharged, do not immediately disconnect and reconnect the AC adapter to charge it again. Doing so may damage the battery.

NOTE: The battery level may automatically lessen due to the self-discharge process (0.21% per day), even when the battery pack is fully charged (100%). This happens no matter if the battery pack is installed in the Tablet PC.

Checking the Battery Level


NOTE: Any battery level indication is an estimated result. The actual operating time can be different from the estimated time, depending on how you are using the Tablet PC.

By Operating System

You can check the approximate battery level using the battery meter function of the operating system. To read the battery level in Windows, click the battery icon on the taskbar.

By Gas Gauge

On the exterior side of the battery pack is a gas gauge for displaying the estimated battery charge. When the battery pack is not installed in the Tablet PC and you want to know the battery charge, you can press the switch with a pointed device to see the corresponding value of indicator segment that light green.

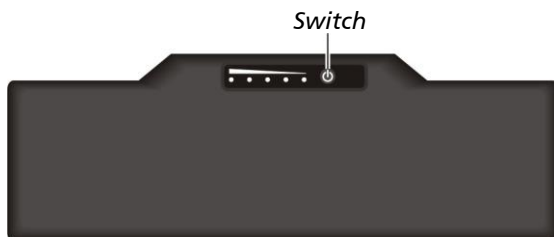

The value of the corresponding green segment indicates the relative percentage of the battery charge. The battery pack is fully discharged when you see no segment glowing green.

Replacing the Battery Pack


CAUTION:

- There is danger of explosion if the battery is incorrectly replaced. Replace the battery only with the Tablet PC manufacturer's battery packs. Discard used batteries according to the dealer's instructions.
- Do not attempt to disassemble the battery pack.


If you often rely on battery power for a long period of time while traveling, you may consider the purchase of an additional battery pack from your dealer and keep it with you in a fully charged state as a backup.

To replace the battery pack, follow these steps:

1. Make sure that the Tablet PC is not turned on or connected to AC power. (If your model comes with the backup battery option, you can keep the power on when replacing the battery pack. The backup battery can sustain power for up to 3 minutes, which should be long enough for you to replace the battery pack.)
2. Lift the latch handle of the battery cover and turn it counterclockwise to the unlock position. Then, detach the cover from the Tablet PC.

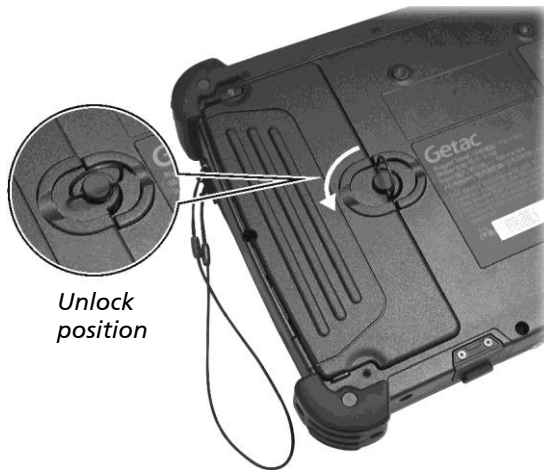


3. Remove the two screws if existing (❶). Pull on the ribbon strip to lift the battery pack off the computer (❷).

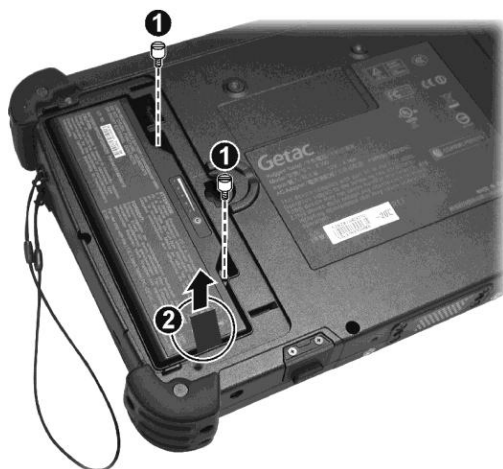

4. Fit another battery pack into place.
5. Replace the battery cover and turn the latch clockwise to the lock position.

Battery Low Signals and Actions

When the battery is low, Windows gives warning messages and the Battery Charge Indicator () blinks red to alert you.

NOTE: You can set up your threshold and signals of Battery Low under Windows.

Immediately save your data upon Battery Low. The remaining operating time depends on how you are using the Tablet PC.

Always respond to Battery Low by placing your Tablet PC on the Sleep or Hibernation mode, turning off the Tablet PC, or connecting the AC adapter. If you do not take any action, the Tablet PC will automatically hibernate and turn off.

Power Management

Your Tablet PC supports ACPI (Advanced Configuration and Power Interface) for power management. The power management feature allows you to reduce the power consumption for energy saving.

With an ACPI-compliant operating system such as Windows, power supply to different Tablet PC components is controlled on an as-needed basis. This allows maximum power conservation and performance at the same time.

In general, Windows' power management works in this way:

What...	When...
Power to the hard disk is turned off	When the hard disk has been idle for a set period.
Power to the display is turned off	When the display has been idle for a set period.
The Tablet PC enters the Sleep mode. The hard disk and display are turned off and the entire system consumes less power.	When the entire system has been idle for a set period.
	When you manually activate the mode.
The Tablet PC enters the Hibernation mode. (See the next subsection for more information.)	When the entire system has been idle for a set period.
	When you manually activate the mode.

For detailed information on power management, see Windows' Help.

Hibernation

Hibernation is a very useful feature. People frequently open many applications when they use computers. It takes some time to get all these applications open and running, and normally they all have to be closed before the computer can be turned off.

When you use the hibernation feature, you do not have to close the applications. The Tablet PC stores the state of your Tablet PC to a file on the hard disk and then shuts down. The next time you turn on your Tablet PC, you return to exactly where you left off.

Power-Saving Tips

Aside from enabling your Tablet PC's power saving mode (see previous section), you can do your part to maximize the battery's operating time by following these suggestions.

- Do not disable Power Management.
- Decrease the LCD brightness to the lowest comfortable level.
- Shorten the length of time before Windows turn off the display.
- Many USB devices use power just by being connected. If you use a USB mouse, you can save power by disconnecting the mouse and using the optional stylus. If you use a USB flash drive, unplug it when you are not using it.
- Remove the card (such as PC card and Smart Card) if not using it.
- Turn off the wireless radio if you are not using the wireless module (such as WLAN, Bluetooth, or 3G).
- Turn off the Tablet PC when you are not using it.

Chapter 4

Expanding Your Tablet PC

You can expand the capabilities of your Tablet PC by connecting other peripheral devices. When using a device, be sure to read the instructions accompanying the device together with the relevant section in this chapter.


Using Smart Cards

Depending on your model, your Tablet PC has one or two smart card readers.

With an embedded microcontroller, smart cards have the unique ability to store large amounts of data, carry out their own on-card functions (e.g., encryption and mutual authentication), and interact intelligently with a smart card reader.

To insert a smart card:

1. Locate the smart card reader.
2. Slide the smart card, with its label and embedded computer chip facing up into the slot.

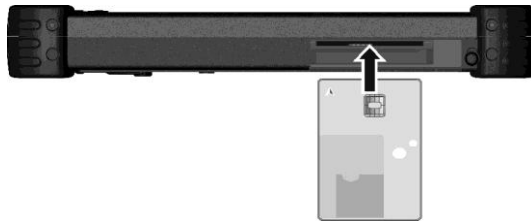

To remove a smart card:

1. Make sure that the software is not accessing the smart card.
2. Pull the card out of the slot.

Using PC Cards


The PC card slot supports type II card and CardBus specifications.

NOTE:

- Some PC cards require additional system resources. Before using such PC card, you may have to free other system resources for the PC card.
- Avoid removing or inserting PC cards during Sleep mode.


To insert a PC card:

1. Locate the PC card slot (the one with the eject button).
2. Slide the PC card, with its label facing up, into the slot until the eject button pops out.

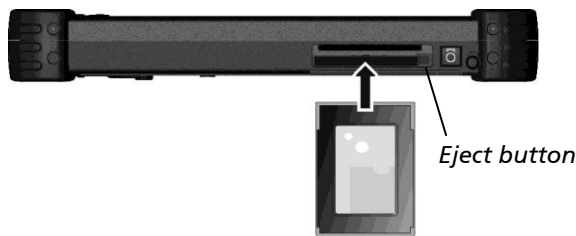

3. When a new card is seated, the Tablet PC will detect it and try to install the appropriate driver. Follow the on-screen instructions to complete the process.


To remove a PC card:


1. Double-click on the **Safely Remove Hardware**  icon found on the Windows taskbar and the **Safely Remove Hardware** window appears on screen.
2. Select (highlight) the PC card from the list to disable the card.
3. Push the eject button and the card will slide out slightly.
4. Pull the card out of the slot.

Connecting a USB Device

Your Tablet PC has two USB ports for connecting USB devices, such as a digital camera, scanner, printer, modem, and mouse.

The USB ports support transfer rates up to 12 MB/s for USB 1.1 devices and 480 MB/s for USB 2.0 devices.

To connect a USB device, simply plug the device cable to one of the USB ports ().

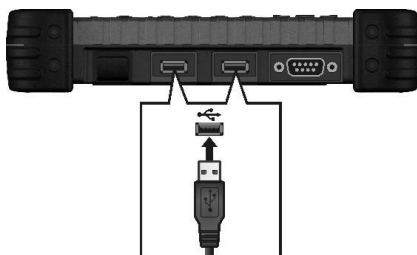


Connecting a Serial Device

Your computer has a serial port for connecting a serial device such as a serial mouse or serial communication device.

Follow this procedure to connect a serial device:


1. Make sure the computer is not turned on.
2. Plug the device cable to the serial port.

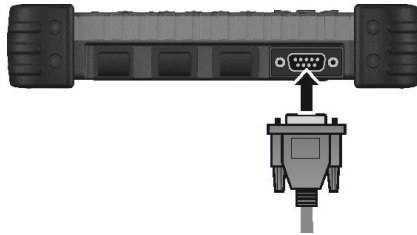

3. Turn on the computer.

Connecting an Audio Device

For higher audio quality, you can send sound through external audio devices such as speakers, headphones, or earphone set using the headphone out connector.

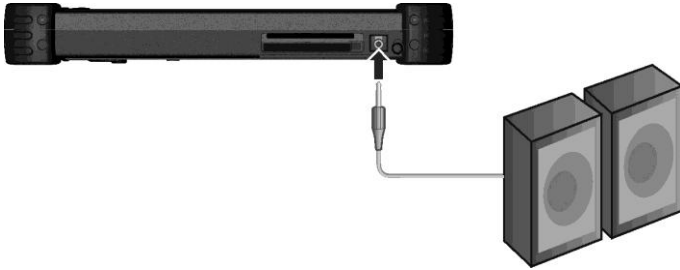

Using the Docking Station

Docking Station is available as an option. The device eliminates the hassles of having you connect and disconnect the various cables when carrying your Tablet PC around and allows a variety of peripherals to be connected.


1. Locate the docking connector.



2. Connect the Docking Station to the docking connector.

For more detailed information, refer to the operating Instructions of the Docking Station.

NOTE: Hot/warm docking and hot/warm undocking are possible with the docking connector but it is recommended that prior to undocking, press the **Menu** button and the OSD Control Panel appears. Click the **Docking** button.

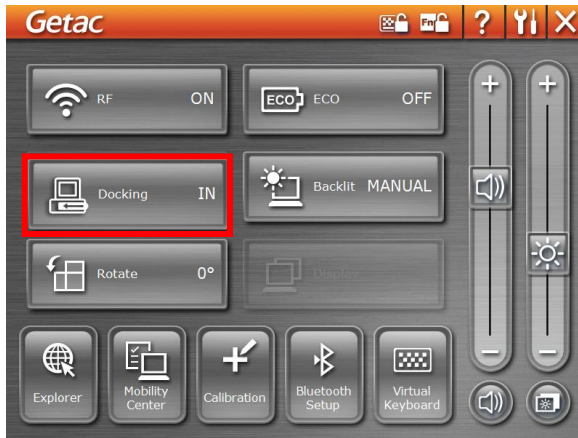

Chapter 5

Using BIOS Setup and System Recovery

BIOS Setup Utility is a program for configuring the BIOS (Basic Input/ Output System) settings of the Tablet PC. BIOS is a layer of software, called firmware, that translates instructions from other layers of software into instructions that the Tablet PC hardware can understand. The BIOS settings are needed by your Tablet PC to identify the types of installed devices and establish special features.

System Recovery reinstalls Windows to your system and configures it to the system's factory default settings.

This chapter tells you how to use the BIOS Setup and System Recovery.


BIOS Setup

When and How to Use

You need to run BIOS Setup Utility when:

- You see an error message on the screen requesting you to run BIOS Setup Utility.
- You want to restore the factory default BIOS settings.
- You want to modify some specific settings according to the hardware.
- You want to modify some specific settings to optimize the system performance.

To run BIOS Setup utility, press the **Ent** key when the prompt appears on the screen during system startup. The prompt shows up on the screen for only a few seconds. You must press the **Ent** key quickly. A small window appears, press **Ent** again to perform the first option (**Launch System Setup**). The BIOS Setup Utility main screen appears as shown next.

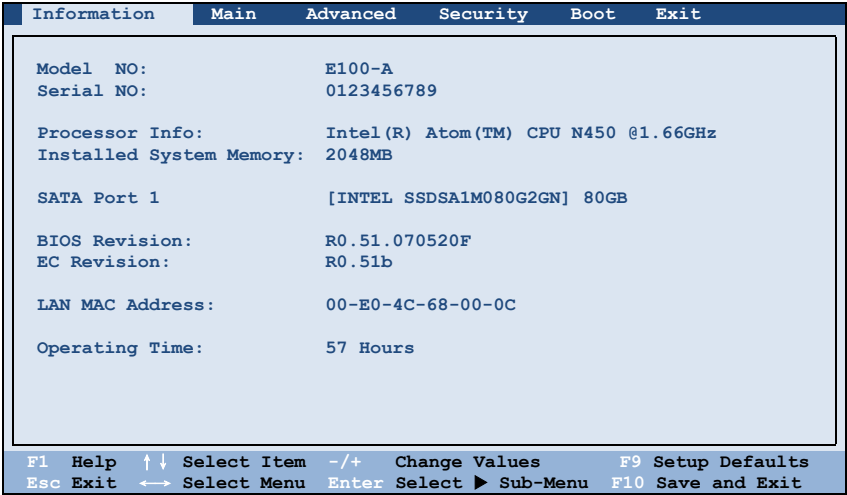


In general, you can use the arrow keys to move around and + / – keys to change the setup values. Keyboard information can be found at the bottom of the screen. The keypad of your Tablet PC does not provide all the keys for operating the utility. You will need to connect a USB keyboard before running BIOS Setup. (To use the USB keyboard, make sure that the item “Legacy USB Support” under the Main menu is set to *Enabled*.)

NOTE:

- The BIOS Setup Utility screens shown in this chapter are for your reference only. The actual items or settings on your Tablet PC may differ.
- The BIOS Setup Utility program may have been updated after the publication of this manual.
- The settings you select in your operating system might override similar settings in BIOS Setup Utility.

Information Menu

The Information menu contains the basic configuration information of the system. There are no user-definable items in this menu.

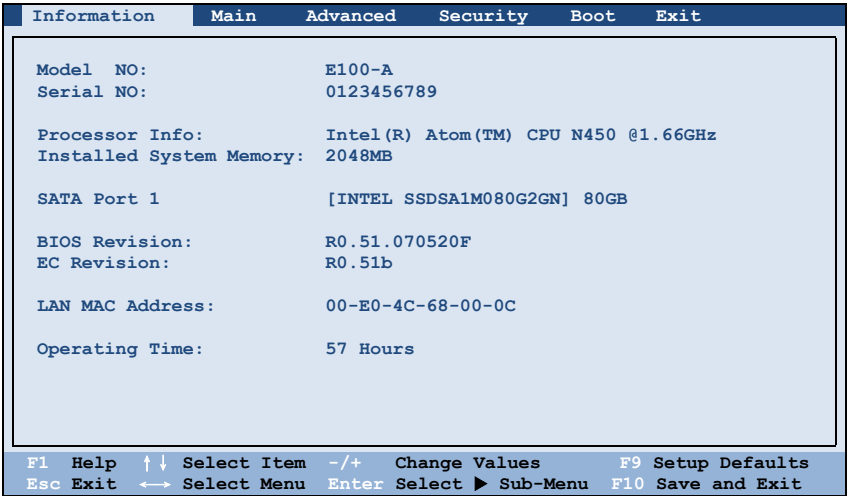

Main Menu

The Main menu contains the various system settings.

Information		Main	Advanced	Security	Boot	Exit
System Time:		[11:33:08]		Item Specific Help		
System Date:		[05/14/2010]		<Tab>, <Shift-Tab>, or		
Legacy USB Support:		[Enabled]		<Enter> selects field.		
SATA Controller Mode Option:		[Enhanced]				
SATA AHCI Enable		[Enabled]				
F1	Help	↑↓	Select Item	-/+	Change Values	F9 Setup Defaults
Esc	Exit	←→	Select Menu	Enter	Select ► Sub-Menu	F10 Save and Exit

System Time sets the system time.

System Date sets the system date.

Legacy USB Support enables or disables the system’s support for Legacy USB device in DOS mode.

SATA Controller Mode Option sets to *Enhanced* for Native IDE mode or sets to *Compatible* for Legacy mode. SATA/PATA drives will be auto-detected and SATA drives will be placed in the mode specified.

SATA AHCI Enable sets if SATA AHCI is enabled. (This item appears only if the previous item is set to *Enhanced*.)

Advanced Menu

The Advanced menu contains the advanced settings.

Information	Main	Advanced	Security	Boot	Exit
<div>IGD - Memory Size: [128MB]</div> <div>DVMT Graphics Memory: 120MB</div> <div>Power Button Delay: [Disabled]</div> <div>AC Initiation: [Disabled]</div> <div>Emergency Button: [Enabled]</div> <div>Emergency Button Delay: [Disabled]</div> <div>High temperature Protection: [Enabled]</div> <div>LAN DSM (Deep Slumber Mode): [Enabled]</div> <div>Smart Card Power management: [Disabled]</div> <div>Charging Backup battery: [Disabled]</div> <div>RTC wakeup from S4 mode(with AC-in): [Disabled]</div>				<div>Item Specific Help</div> <div>Select the amount of Main Memory that the Internal Graphics Device will use.</div>	
<div>F1 Help ↑↓ Select Item -/+ Change Values F9 Setup Defaults</div> <div>Esc Exit ↔ Select Menu Enter Select ► Sub-Menu F10 Save and Exit</div>					

IGD – Memory Size sets the amount of total graphics memory (pre-allocated + fixed + DVMT) for use by the internal graphics device.

DVMT Graphics Memory shows the size of DVMT graphics memory.

Power Button Delay sets the amount of time (2, 4, 6, or 8 seconds) to press and hold the power button for it to function.

AC Initiation sets if connecting AC power will automatically start or resume your Tablet PC.

Emergency Button enables or disables the emergency button (5 on the numeric keypad). This is only for customized applications that support the button.

Emergency Button Delay sets the amount of time to press and hold the emergency button for it to function.

HDD Preheat keeps the hard disk drive's temperature above 3°C (37°F) during system shutdown period. When set to *Enabled*, the optional heater will automatically turn on whenever the hard disk drive's temperature drops below 3°C (37°F). (The availability of this item depends on your model.)

High Temperature Protection enables or disables the hard disk protection against high temperatures. When set to *Enabled*, a warning message will appear on the screen when the hard disk temperature goes above the safe range. You will not be able to use the system before the hard disk cools down and the message disappears.

LAN DSM enables or disables the Deep Slumber Mode feature of the LAN module. When set to *Enabled*, power is supplied to the LAN module only when the LAN cable is connected.

SmartCard power management allows you to save power for the Smart Card reader. When set to *Auto*, power is supplied only to the reader only when a Smart Card is inserted. When set to *Enabled*, power is supplied all the time.

Charging Backup Battery allows the main battery to charge the backup battery (option). When set to *Enabled*, the backup battery will be charged by the main battery when the AC adapter is not connected and the main battery has more than 70% capacity left. When set to *Disabled*, the backup battery will be charged by the AC adapter only. (The availability of this item depends on your model.)

RTC wake up from S4 mode (with AC-in) enables or disables the RTC (Real Time Clock) wakeup from S4 (Hibernation) feature when AC power is connected. Set this item to *Enabled* if you use Windows task scheduler to have the computer automatically perform tasks at specific times.

Security Menu

The Security menu contains the security settings, which safeguard your system against unauthorized use.

Information		Main	Advanced	Security	Boot	Exit
<div>Supervisor Password Is: Clear</div> <div>Set Supervisor Password [Enter]</div> <div>Current TPM State: Disabled & Deactivated</div> <div>Change TPM State [No Change]</div>					<div>Item Specific Help</div> <div>Supervisor Password controls access to the Setup utility.</div>	
F1 Help	↑↓ Select Item	-/+ Change Values	F9 Setup Defaults			
Esc Exit	←→ Select Menu	Enter Select	► Sub-Menu	F10 Save and Exit		

Supervisor Password Is shows whether you have set the supervisor password or not for the system.

Set Supervisor Password sets the supervisor password. When typing the password, first make sure that Num Lock is off, and then type the password in the entry fields and press **Enter**. Confirm your password by typing it again and pressing **Enter**. When set, the supervisor password is required for entering BIOS Setup.

Current TPM State shows the current TPM state. TPM (Trusted Platform Module) is a component on your computer’s mainboard that is specifically designed to enhance platform security by providing a protected space for key operations and other security critical tasks.

Change TPM State allows you to select among *No Change, Enable & Activate, Deactivate & Disable*, and *Clear*.

Boot Menu


The Boot menu sets the sequence of the devices to be searched for the operating system.

Information	Main	Advanced	Security	Boot	Exit
<div>Boot priority order: 1: USB KEY: 2: SATA HDD: INTEL SSDSA1M080G2GN-(S1) 3: SATA HDD: 4: USB FDC: 5: USB CDROM: 6: USB HDD: 7: PCI BEV: Realtek Boot Agent 8: Excluded from boot order: : Other USB: : PCI:</div>				<div>Item Specific Help Keys used to view or configure devices: Up and Down arrows select a device. <+> and <-> moves the device up or down. <x> exclude or include the device to boot. <Shift + l> enables or disables a device. <l - 4> Loads default boot sequence.</div>	
<div>F1 Help ↑↓ Select Item -/+ Change Values F9 Setup Defaults Esc Exit ←→ Select Menu Enter Select ► Sub-Menu F10 Save and Exit</div>					

The bootable devices will be automatically detected during POST and shown here, allowing you to set the sequence that the BIOS uses to look for a device from which to load the OS. See the information on the right side of the menu for keyboard usage.

Exit Menu

The Exit menu displays ways of exiting BIOS Setup Utility. After finishing with your settings, you must save and exit so that the changes can take effect.

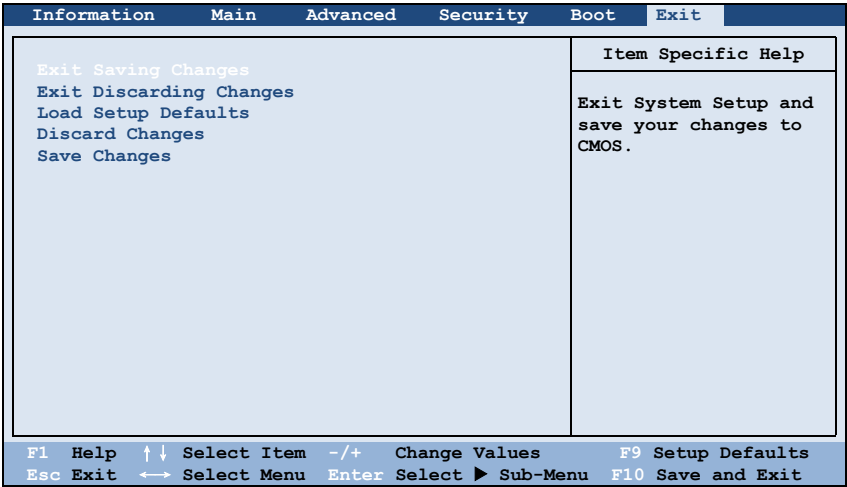

Exit Saving Changes saves the changes you have made and exits BIOS Setup Utility.

Exit Discarding Changes exits BIOS Setup Utility without saving the changes you have made.

Load Setup Defaults loads the factory default values for all the items.

Discard Changes restores the previous values for all the items.

Saves Changes saves the changes you have made.

System Recovery

Use System Recovery when:

- The Windows operating system does not start at all.
- You want to restore the system to the factory state.

WARNING:


- Using this feature will reinstall Windows to your system and configure it to the system's factory default settings. All data on the hard disk drive will be lost.
- Make sure that power is not interrupted during the recovery process. An unsuccessful recovery may result in Windows startup problems.

To run System Recovery:

1. It is recommended that you connect the AC adapter to ensure power supply throughout the process.
2. During system startup when the following screen appears, press **Ctrl + Alt + F2** keys for four seconds or press **Ent** and select **HDI Recovery** when a small window appears on the screen.



3. A message appears asking if you want to continue. Type **1** to continue.
4. A warning message appears asking if you accept the terms as shown on the screen. Type **1** to continue.
5. Type **1** again when the next message appears asking for confirmation.
6. The recovery process starts. The screen as below appears.

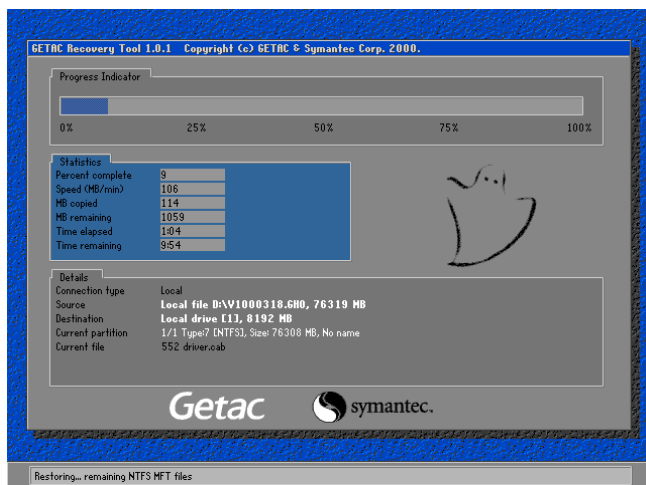

7. Wait till the process completes. A message will appear asking you to press any key to continue. Press any key for the system to restart.
8. The Windows setup wizard starts. Follow the onscreen prompts to continue.
9. When the system restarts, the installer screen as below appears. The installer will perform system hardware detection and driver installation.



10. When completed, the system restarts and displays Windows desktop.

Chapter 6

Using Special Utilities

Special utilities are provided for enhanced capabilities and management. This chapter describes how to use these utilities.

Using the OSD Control Panel

The OSD (On Screen Display) Control Panel provides a user-friendly interface for you to quickly activate or operate certain functions on your Tablet PC with a simple tap of the screen.










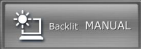

To open the OSD Control Panel, press the **Menu** button on your Tablet PC.
















The following screen appears.



The following table shows the various functions on the OSD Control Panel.


Icon	Function
 / 	Shows the current ON/OFF status of keypad lock.
 / 	Shows the current ON/OFF status of Fn keylock.
	Opens the Help file explaining the OSD Control Panel.
	Opens the Quick Button Setup menu (refer to the next section for details).
	Closes the OSD Control Panel.
	<p>Serves as the master ON/OFF control of the RF radio. The word on the button indicates the current status.</p> <p>When set to OFF, all wireless modules (WLAN/Bluetooth/3G) cannot be used. When set to ON, individual settings of the module work.</p> <p>The on/off status will persist through Sleep/Hibernation mode but it will always be on upon restarting.</p>
	<p>Switches the ECO mode to the next choice (MAX, QUICK, WORK, or OFF). The word on the button indicates the current status. (For information on ECO modes, see “ECO Tab” later in this chapter.)</p> <p>This button works only when using battery power. The ECO mode will return to the default OFF setting whenever AC power is connected, backlight status is changed by using the button , the computer resumes from Sleep/Hibernation mode, or the computer is restarted.</p>
	<p>The status would display IN when you connect your Tablet PC to the Docking Station.</p> <p>To turn off power to the Docking Station without disconnecting from your Tablet PC, click the Docking button. Before removing your Tablet PC from the Docking Station, make sure to click the Docking button to show OUT.</p>


Icon	Function
	<p>Switches the LCD backlight to the next choice (MAX, AUTO, or MANUAL.) The word on the button indicates the current status.</p> <p>When set to MAX, the backlight is adjusted to the highest brightness level. When set to AUTO, the brightness will be automatically adjusted according to the current ambient light.</p> <p>The backlight will return to the default MANUAL setting whenever the computer resumes from Sleep/Hibernation mode or the computer is restarted.</p>
	<p>Rotates the orientation from default landscape to 90° portrait, 180° landscape, or 270° portrait.</p> <p>The status will persist through Sleep/Hibernation mode or system power off.</p>
	<p>Switches the display output to the next choice: VGA (external monitor), BOTH (LCD and external monitor), or LCD.</p> <p>This button works only when an external display is connected.</p>
	<p>Starts Microsoft Internet Explorer by default.</p> <p>You can assign a different function to this button (refer to the next section for details).</p>
	<p>Starts Windows Mobility Center by default.</p> <p>You can assign a different function to this button (refer to the next section for details).</p>
	<p>Starts the touchscreen calibration tool by default.</p> <p>You can assign a different function to this button (refer to the next section for details).</p>
	<p>Starts the Bluetooth Setup utility by default.</p> <p>You can assign a different function to this button (refer to the next section for details).</p>


Icon	Function
	<p>Opens the Input Panel by default.</p> <p>You can assign a different function to this button (refer to the next section for details).</p>
	<p>Allows you to adjust the sound volume by dragging the knob along the bar.</p>
	<p>Switches the system sound output OFF (mute) and ON.</p>
	<p>Allows you to adjust the LCD brightness level by dragging the knob along the bar.</p>
	<p>System enters “black-out” mode by turning off the LCD display, LED indicators, touchscreen, and sound.</p> <p>Press the power button () to wake up the system from “black-out” mode.</p>


Quick Button Setup

By default, the five quick buttons on the OSD Control Panel have pre-assigned functions. You can re-define the buttons:


1. Click the Quick Button Setup button () on the OSD control panel and the **Quick Button Setup** window appears.
2. At the bottom of the screen are the five quick buttons. Click the button you want to change.

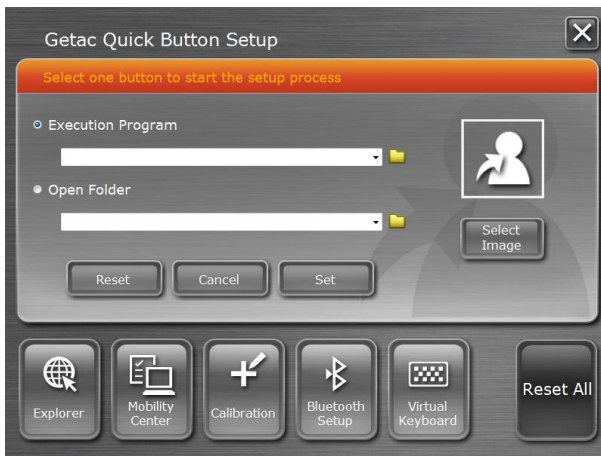

3. Depending on the type of task to be associated with the button, click the Open button  of the **Executed Program** or **Open Folder** type.
4. A dialog box appears. Select the desired program or folder and click **Open** or **Select**. After your selection, the entry field will display the program or folder information.

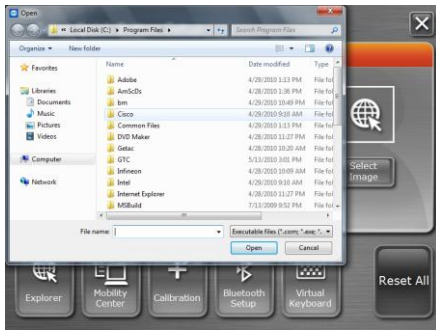

or

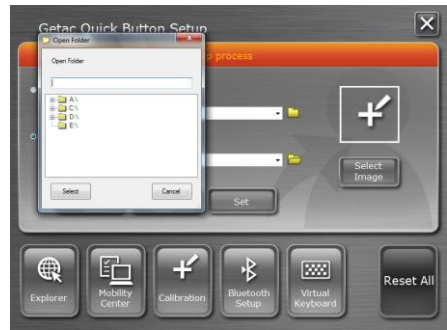

5. You can change the image appearing on the button by clicking the **Select Image** button. After selecting the image file, the original image on the button will be replaced.
6. Click **Set** to complete the changes.

NOTE: You can restore the quick buttons to the default settings by clicking **Reset All**.


Using G-Manager

G-Manager is a unified user interface utility that allows you to manage and configure the following:

- System
- Battery
- ECO (economic mode)
- Light Sensor
- Ignition
- Monitoring
- Antenna
- GPS Status

Starting G-Manager

You can start up G-Manager by any of the following methods:


- Click **Start** → **All Programs** → **Getac Utility** → **G-Manager**, or
- Click and hold the  icon located on the taskbar until a ring appears. From the small menu that pops up, click **G-Manager**.

The G-Manager window appears, containing 8 tabs as described later.

NOTE: Depending on your model, the actual items appearing on the screen may differ from those shown in this manual.

System Tab


The **System** tab provides system information.

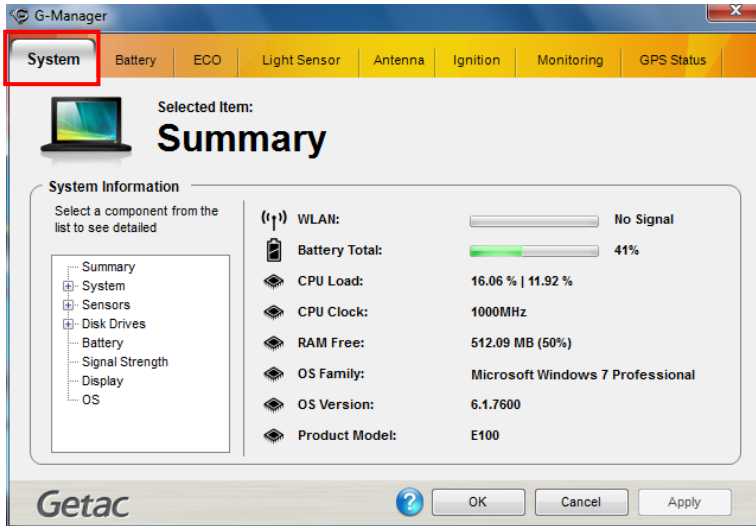

To view specific information, select the component from the list on the left side of the screen. The information of the selected component will be displayed on the right side of the screen.

Battery Tab

The **Battery** tab allows you to check the battery status and configure the battery.

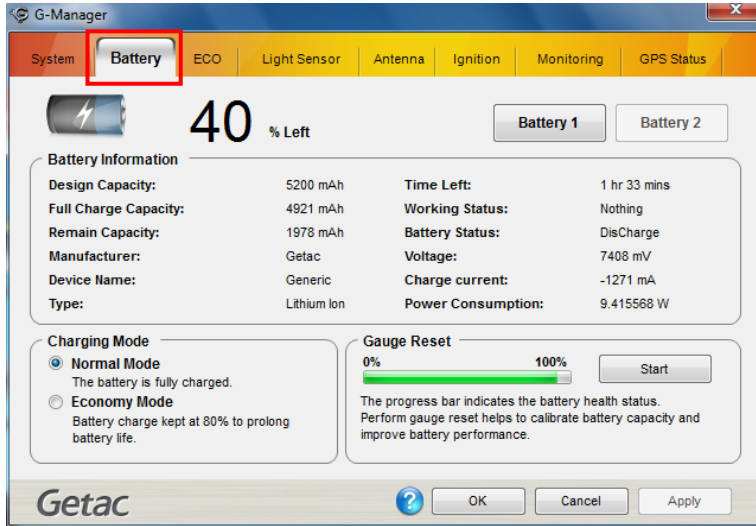

At most two batteries may be supported. Click **Battery 1** or **Battery 2** to view the information of each battery (if your model has a second battery).

NOTE:

- When the percentage **% Left** is less than 10% then the value will be displayed in red.
- When an abnormal battery condition is detected **Battery Status** value will be displayed in red.

Battery Information

The upper portion of the screen displays the current status of the selected battery.

Charging Mode

The lower left portion of the screen allows you to select the charging mode.

- **Normal Mode** – The battery will be fully charged. When remaining charge reaches below 95%, then charging will start until it is fully charged.
- **Economy Mode** – This mode helps prolong battery life by charging up to 80% of its total capacity only. It is highly recommended if you are using AC power most of the time.


Gauge Reset

The lower right portion of the screen contains the battery health bar and provides the battery calibration function.


The health bar shows the batter's health by percentage. A low percentage indicates poor health and therefore the need to perform a gauge reset to calibrate the battery's capacity and improve the battery's performance. The gauge reset process includes discharging and then fully recharging the battery in two cycles. It can take several hours.

To perform a gauge reset:

1. Connect the AC adapter.
2. Click **Start**, located next to the health bar
3. In the pop-up dialog box, click **Yes** to start the process. The window as below appears displaying the progress bar.

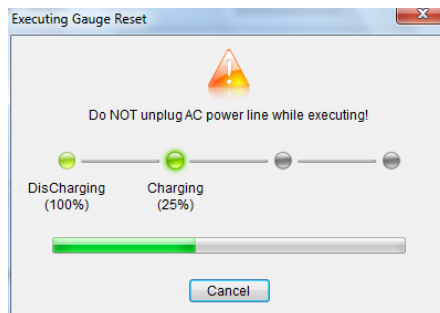


4. Wait till the process is completed. Click **Exit** when finished.

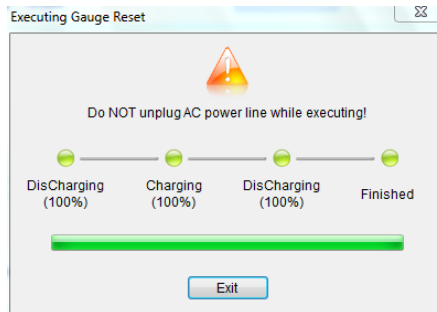

ECO Tab

The **ECO** tab allows you to configure ECO modes (or called power profiles).

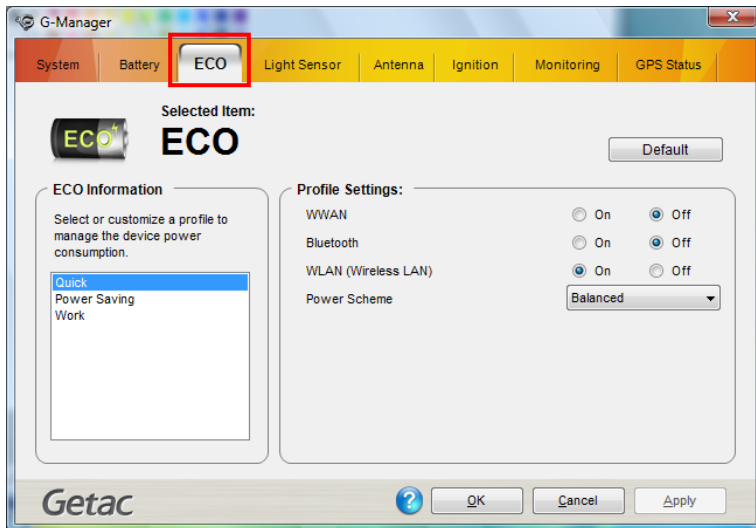

To put the system into an ECO mode, use the **ECO** button (one of the buttons in the OSD Control Panel). (See "Using the OSD Control Panel" earlier in this chapter for information.)

ECO Information

The left portion of the screen lists the available power profiles (**Quick**, **Power Saving**, and **Work**). Each profile is a combination of power settings that results in different power consumptions. To change the settings of a profile, select (highlight) the profile name in the list.

Profile Settings


The right portion of the screen displays the settings of the current selected profile. You can set up the following items:

- **WWAN (3G)**, **Bluetooth**, and **WLAN** – can be on or off.
- **Power Scheme** – can be **Balanced**, **High Performance** or **Power Saver**.
The settings here correspond to the settings in Windows. (See Windows Help for the description to each of the power scheme.)

After changing the settings, click **Apply** or **OK** to save the changes. To restore the settings to the default values, click **Default**.

Light Sensor Tab

The **Light Sensor** tab allows you configure how the light sensor works.

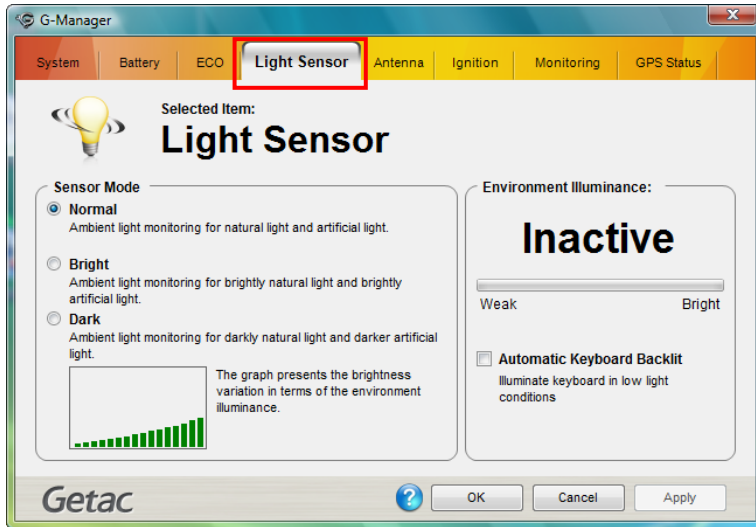

Sensor Mode

The left portion of the screen lists the sensor modes:

- **Normal** – Light sensor sensitivity is set at normal environment lighting condition.
- **Bright** – Light sensor sensitivity is set at bright environment lighting condition (e.g. outdoors).
- **Dark** – Light sensor sensitivity is set at dark environment lighting condition (e.g. indoors, storage warehouse, etc.).


Click to select a mode. Click **Apply** or **OK** to save the changes.

Environment Illuminance

To have the keypad backlight automatically turn on in poor lighting environment, click the checkbox **Automatic Keyboard Backlit**. Click **Apply** or **OK** to save the changes.

Antenna Tab

The **Antenna** tab allows you to set if your system will automatically use the external GPS or 3G antenna when connected to the Docking Station.

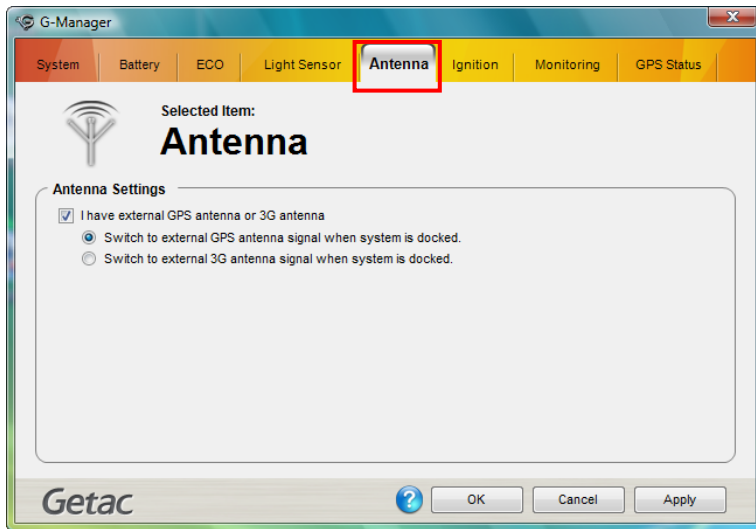

Select the checkbox(es) accordingly. Click **Apply** or **OK** to save the changes.

Ignition Tab

The **Ignition** tab allows you to configure how your system works with the vehicle ignition.



Ignition Control


When your system is connected to the Vehicle Dock (available as an option), you can have your system derive power from the vehicle and have the on/off of the vehicle ignition turn on/off your system. To enable the feature, select the checkbox **Ignition Power On**. Click **Apply** or **OK** to save the changes.

Delay Time

When the **Ignition Power On** feature is enabled, the system will automatically shut down after the vehicle ignition is turned off or the battery is low. You can set the amount of time (20 seconds, 30 seconds, 45 seconds, 1 minute, or 2 minute) the system waits before shutting down. Click **Apply** or **OK** to save the changes.

Monitoring Tab

The **Monitoring** tab allows you to configure the monitoring function of G-Manager.

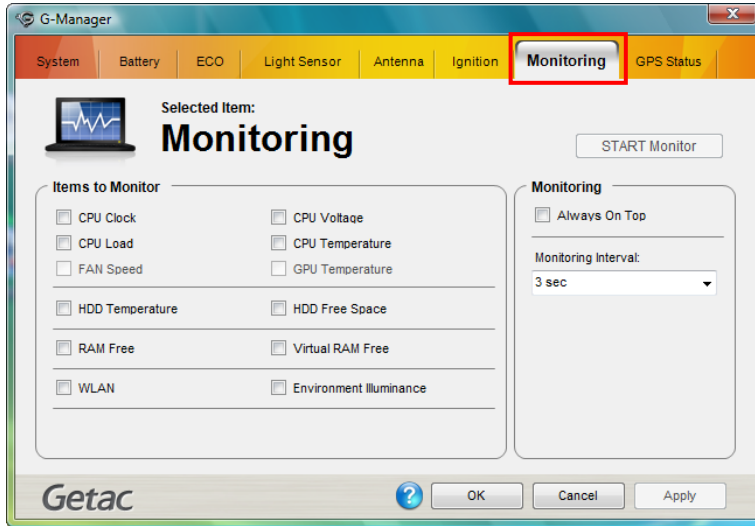

Items to Monitor

The left portion of the screen lists the items. Click the checkbox before an item to include it as a monitored component. Click **Apply** or **OK** to save the changes.

NOTE: Different models have different supported monitoring items; non-supported items cannot be selected (grayed out items).

Monitoring Options

The right portion of the screen allows you to set how the monitored items are displayed and how often the monitoring is updated.


- **Always On Top** – allows the monitoring window to remain on top of your display.

- **Monitoring Interval** – sets the frequency of updates on the monitoring window (1/3/5/10/30 seconds or 1/5/30 minutes).

Click **Apply** or **OK** to save the changes.

Starting and Stopping the Monitoring


To start monitoring, click **START Monitor**. The monitoring window similar to the one below appears displaying requested information at specified intervals.

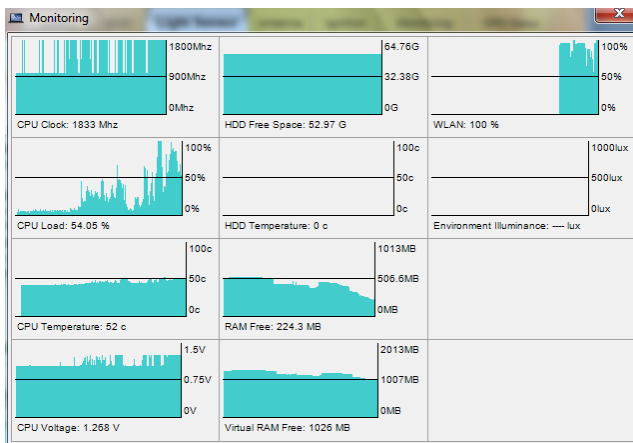

To stop monitoring, click the Close button at the upper right corner of the monitoring window or click **Stop Monitor** on the **Monitoring** tab page of G-Manager.

GPS Status Tab

The **GPS Status** tab shows the GPS status for models having the GPS module.

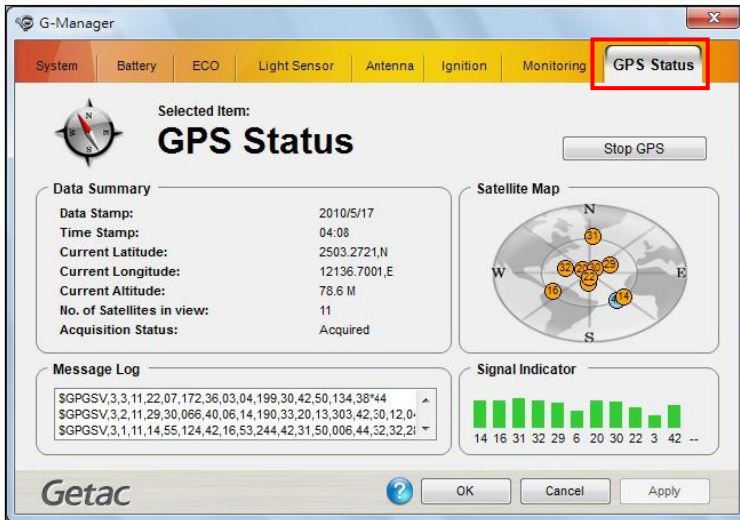

To start GPS positioning, click **Start GPS**. The screen displays:

- Ongoing raw data strings in the **Message Log** section
- Overhead satellite positions in the **Satellite Map** section
- Signal strength of the satellites in the **Signal Indicator** section

When GPS positioning is completed, the **Data Summary** section shows the GPS information of the current location.

To stop GPS positioning, click **Stop GPS**.

Chapter 7

Caring for the Tablet PC

Taking good care of your Tablet PC will ensure a trouble-free operation and reduce the risk of damage to your Tablet PC.

This chapter gives you guidelines covering areas such as protecting, storing, cleaning, and traveling.

Protecting the Tablet PC

To safeguard the integrity of your Tablet PC data as well as the Tablet PC itself, you can protect the Tablet PC in several ways as described in this section.

Using the Cable Lock

You can use a Kensington-type cable lock to protect your Tablet PC against theft. The cable lock is available in computer stores.

To use the lock, loop the lock cable around a stationary object such as a table. Insert the lock to the Kensington lock hole and turn the key to secure the lock. Store the key in a safe place.



Using an Anti-Virus Strategy

You can install a virus-detecting program to monitor potential viruses that could damage your files.

Using Action Center (for Windows 7)

Action Center alerts you to take action on the following security essentials:

- Windows Firewall
- Windows Update
- Malware Protection (anti-virus, anti-spyware)
- Others (Internet security, user account control)

For detailed information, see Windows' online Help.

Taking Care of the Tablet PC

Location Guidelines

- For optimal performance, use the Tablet PC where the recommended temperature is between 10 °C (50 °F) and 35 °C (95 °F) – actual operating temperature depending on product specifications.
- Avoid placing the Tablet PC in a location subject to high humidity, extreme temperatures, mechanical vibration, direct sunlight, or heavy dust.
- Do not cover or block any ventilation openings on the Tablet PC. For example, do not place the Tablet PC on a bed, sofa, rug, or other similar surface. Otherwise, overheating may occur that results in damage to the Tablet PC.
- Keep the Tablet PC at least 13 cm (5 inches) away from electrical appliances that can generate a strong magnetic field such as a TV, refrigerator, motor, or a large audio speaker.
- Avoid moving the Tablet PC abruptly from a cold to a warm place. A temperature difference of more than 10 °C (18 °F) may cause condensation inside the unit, which may damage the storage media.
- Do not place the Tablet PC on an unsteady surface.

General Guidelines

- Do not place heavy objects on top of the Tablet PC as this may damage the display.
- The screen surface is easily scratched. Do not use paper towels to clean the display but use the included soft cloth. Avoid touching it with your fingers, pen, or pencil.
- To maximize the life of the backlight in the display, allow the backlight to automatically turn off as a result of power management. Avoid using

a screen saver or other software that prevents the power management from working.

Cleaning Guidelines

- Never clean the Tablet PC with its power on.
- Use a soft cloth moistened with water or a non-alkaline detergent to wipe the exterior of the Tablet PC.
- Gently wipe the display with a soft, lint-free cloth. Do not use alcohol or detergent on the display.
- If water or liquid is split onto the computer, wipe it dry and clean when possible. Though your computer is water-proof, do not leave the computer wet when you can dry it.

Battery Pack Guidelines

- Recharge the battery pack when it is nearly discharged. When recharging, make sure that the battery pack is fully charged. Doing so may avoid harm to the battery pack.
- The battery pack is a consumable product and the following conditions will shorten its life:
 - when frequently charging the battery pack (it is recommended that you set the **Charging Mode** on the G-Manager utility's **Battery** tab to **Economy Mode** – see “Charging Mode” in Chapter 6 for details).
 - when using, charging, or storing the battery in high temperature condition
- To avoid hastening the deterioration of the battery pack thereby prolonging its useful life, minimize the number of times you charge it so as not to frequently increase its internal temperature.
- Charge the battery pack between 5°C ~ 45°C (41°F ~ 113°F) temperature range.
A higher environment temperature will cause the battery pack's temperature to rise. Avoid charging the battery pack inside a closed vehicle and in hot weather condition.

Also, charging will not start if the battery pack is not within the allowed temperature range.

- It is recommended that you do not charge the battery pack more than once a day.
- It is recommended that you charge the battery pack with the Tablet PC's power off.
- To maintain the battery pack's operating efficiency, store it in a cool dark place removed from the Tablet PC and with 30 % ~ 40 % charge remaining.
- Important guidelines when using the battery pack.

When installing or removing the battery pack take note of the following:

- avoid installing or removing the battery pack when the Tablet PC is in Sleep mode. Abruptly removing the battery pack may cause loss of data or the Tablet PC may become unstable.
- avoid touching the battery pack terminals or damage may occur, thereby causing improper operation to it or the Tablet PC.

The Tablet PC's input voltage and surrounding temperature will directly affect the battery pack's charge and discharge time:

- charging time will be prolonged when the Tablet PC is turned on. To shorten the charging time, it is recommended that you place the Tablet PC in Sleep or hibernation mode.
- a low temperature will prolong the charging time as well as hasten the discharge time.

Touchscreen Guidelines

- Use the finger or the included stylus on the display. Using a sharp or metallic object other than your finger or stylus may cause scratches and damage the display, thereby causing errors.
- A screen protector film has been attached to the screen before shipment. The film is a consumable, which will be worn out after a period of use (6 months in average). You can purchase a new one when replacement is required.

- Avoid using excessive force that may cause damage to the display.
- Use a soft cloth to remove dirt on the display. The touchscreen surface has a special protective coating that prevents dirt from sticking to it. Not using a soft cloth may cause damage to the special protective coating on the touchscreen surface.
To remove hard to remove dirt, blow some steam on the particular area and gently wipe away using a soft cloth.
- Turn off the Tablet PC power when cleaning the display. Cleaning the display with the power on may cause improper operation.
- Use the touchscreen within the intended area only. The display area and touchscreen operating area is the same.
- Do not use excessive force on the display. Avoid placing objects on top of the display as this may cause the glass to break thereby damaging the display.
- Using the touchscreen during low temperature (less than 5 °C) may cause a slower response time, this is normal. A normal response time may be restored upon returning to room temperature.
- When there is noticeable discrepancy in the operation of the touchscreen function (wrong location on intended operation or improper display resolution), calibrate the touchscreen using the calibration utility called CalTouch.

When Traveling

- Before traveling with your Tablet PC, make a backup of your hard disk data into flash disks or other storage devices. As an added precaution, bring along an extra copy of your important data.
- Make sure that the battery pack is fully charged.
- Make sure that the Tablet PC is turned off.
- Disconnect the AC adapter from the Tablet PC and take it with you. Use the AC adapter as the power source and as a battery-charger.
- Hand-carry the Tablet PC. Do not check it in as luggage.
- If you need to leave the Tablet PC in the car, put it in the trunk of the car to avoid exposing the Tablet PC to excessive heat.
- When going through airport security, it is recommended that you send the Tablet PC and flash disks through the X-ray machine (the device you set your bags on). Avoid the magnetic detector (the device you walk through) or the magnetic wand (the handheld device used by security personnel).
- If you plan to travel abroad with your Tablet PC, consult your dealer for the appropriate AC power cord for use in your country of destination.

Chapter 8

Troubleshooting

Tablet PC problems can be caused by hardware, software, or both. When you encounter any problem, it might be a typical problem that can easily be solved.

This chapter tells you what actions to take when solving common Tablet PC problems.

Preliminary Checklist

Here are helpful hints to follow before you take further actions when you encounter any problem:

- Try to isolate which part of the Tablet PC is causing the problem.
- Make sure that you turn on all peripheral devices before turning on the Tablet PC.
- If an external device has a problem, make sure that the cable connections are correct and secure.
- Make sure that the configuration information is properly set in the BIOS Setup program.
- Make sure that all the device drivers are correctly installed.
- Make notes of your observations. Are there any messages on the screen? Do any indicators light? Do you hear any beeps? Detailed descriptions are useful to the service personnel when you need to consult one for assistance.

If any problem persists after you follow the instructions in this chapter, contact an authorized dealer for help.

Solving Common Problems

Battery Problems

The battery does not charge (Battery Charge indicator does not light amber).

- Make sure that the AC adapter is properly connected.
- Make sure that the battery is not too hot or cold. Allow time for the battery pack to return to room temperature.
- Make sure that the battery pack is installed correctly.
- Make sure that the battery terminals are clean.

The operating time of a fully charged battery becomes shorter.

- If you often partially recharge and discharge, the battery might not be charged to its full potential. Initialize the battery to solve the problem. (Use the battery calibration tool as described in “Gauge Reset” in Chapter 6.)

The battery operating time indicated by the battery meter does not match the actual operating time.

- The actual operating time can be different from the estimated time, depending on how you are using the Tablet PC. If the actual operating time is much less than the estimated time, initialize the battery. (Use the battery calibration tool as described in “Gauge Reset” in Chapter 6.)

Bluetooth Wireless Transmission Problems

I cannot connect to another device with Bluetooth wireless technology.

- Make sure that both devices have activated Bluetooth feature.

- Make sure that the distance between the two devices are not over 10 meters or that there are no walls or other obstructions between the devices.
- Make sure that the other device is not in “Hidden” mode.
- Make sure that both devices are compatible.

Display Problems

Nothing appears on the screen.

- During operation, the screen may automatically turn off as a result of power management. Press any key to see if the screen comes back.
- The brightness level might be too low. Increase the brightness.

The characters on the screen are dim.

- Adjust the brightness and/or contrast.

Bad dots appear on the display at all times.

- A small number of missing, discolored, or bright dots on the screen are an intrinsic characteristic of TFT LCD technology. It is not regarded as a LCD defect.

Hardware Device Problems

The Tablet PC does not recognize a newly installed device.

- The device may not be correctly configured in the BIOS Setup program. Run the BIOS Setup program to identify the new type.
- Make sure if any device driver needs to be installed. (Refer to the documentation that came with the device.)
- Make sure if the device needs any jumper or switch settings. (Refer to the documentation that came with the device.)
- Check the cables or power cords for correct connections.

- For an external device that has its own power switch, make sure that the power is turned on.

Hard Disk Drive Problems

The hard disk drive error message appears on the screen.

- The hard disk drive has defects. Ask your dealer for help.

The hard disk drive operations seem slow.

- The data files stored on the hard disk drive may be fragmented. Use a tool such as Window's **Disk Defragmenter** to defragment the files.

The hard disk drive / heater indicator blinks red.

- The optional hard disk drive heater is in an abnormal state. Ask for repair service in case this happens.

LAN Problems

I cannot access the network.

- Make sure that the LAN cable is properly connected to the RJ-45 connector and the network hub.
- Make sure that the network configuration is appropriate.
- Make sure that the user name or password is correct.

PC Card Problems

The PC card does not work.

- Make sure that the PC card is correctly seated.
- If the card requires an IRQ (Interrupt ReQuest), make sure that there is one available.

The PC card stops communicating properly.

- The application may have been reset when the Tablet PC is turned off or in Sleep mode. Exit and restart the application.

Power Management Problems

The Tablet PC does not enter Sleep or Hibernation mode automatically.

- If you have a connection to another computer, the Tablet PC does not enter Sleep or Hibernation mode if the connection is actively in use.
- Make sure that the Sleep or Hibernation time-out is enabled.

The Tablet PC does not enter Sleep or Hibernation mode immediately.

- If the Tablet PC is performing an operation, it normally waits for the operation to finish.

The Tablet PC does not resume from Sleep or Hibernation mode.

- The Tablet PC automatically enters Sleep or Hibernation mode when the battery pack is empty. Do any one of the following:
 - Connect the AC adapter to the Tablet PC.
 - Replace the empty battery pack with a fully charged one.

Software Problems

An application program does not work correctly.

- Make sure that the software is correctly installed.
- If an error message appears on the screen, consult the software program's documentation for further information.
- If you are sure the operation has stop, reset the Tablet PC. (See "Resetting the Tablet PC" later in this chapter.)

Sound Problems

No sound is produced.

- Make sure that the volume control is not set too low. Increase the volume.
- Make sure that the sound is not muted.
- Make sure that the Tablet PC is not in Sleep mode.
- If using an external speaker, make sure that the speaker is properly connected.

Distorted sound is produced.

- Make sure that the volume control is not set too high or too low. In most cases, a high setting can cause the audio electronics to distort the sound.

The external audio device does not work.

- Make sure that your Tablet PC is equipped with the driver needed.
- Click the speaker symbol on the taskbar and check the Windows volume control.
- Check the volume control of your Tablet PC.

Startup Problems

When you turn on the Tablet PC, it does not respond and the Power Indicator does not light green.

- If you are using an external AC power, make sure that the AC adapter is correctly and securely connected. If so, make sure that the electrical outlet works properly.
- If you are using the battery power, make sure that the battery is not discharged.

When you turn on the Tablet PC, it stops after POST.

- Reset your Tablet PC. (See “Resetting the Tablet PC” later in this chapter.)

Wireless LAN Problems

I cannot use the wireless LAN feature.

- Make sure that the wireless LAN feature is turned on.

Transmission quality is poor.

- Your Tablet PC may be in an out-of-range situation. Move your Tablet PC closer to the Access Point or another wireless LAN device it is associated with.
- Check if there is high interference around the environment and solve the problem as described next.

Radio interference exists.

- Move your Tablet PC away from the device causing the radio interference such as microwave oven and large metal objects.
- Plug your Tablet PC into an outlet on a different branch circuit from that used by the affecting device.
- Consult your dealer or an experienced radio technician for help.

I cannot connect to another wireless LAN device.

- Make sure that the wireless LAN feature is turned on.
- Make sure that the SSID setting is the same for every wireless LAN device in the network.
- Your Tablet PC is not recognizing changes. Restart the Tablet PC.
- Make sure that the IP address or subnet mask setting is correct.

I cannot communicate with the computer in the network when Infrastructure mode is configured.

- Make sure that the Access Point your Tablet PC is associated with is powered on and all the LEDs are working properly.
- If the operating radio channel is in poor quality, change the Access Point and all the wireless station(s) within the BSSID to another radio channel.
- Your Tablet PC may be in an out-of-range situation. Move your Tablet PC closer to the Access Point it is associated with.
- Make sure that your Tablet PC is configured with the same security option (encryption) to the Access Point.
- Use the Web Manager/Telnet of the Access Point to check whether it is connected to the network.
- Reconfigure and reset the Access Point.

I cannot access the network.

- Make sure that the network configuration is appropriate.
- Make sure that the user name or password is correct.
- You have moved out of range of the network.
- Turn off power management.

Other Problems

The date/time is incorrect.

- Correct the date and time via the operating system or BIOS Setup program.
- After you have performed everything as described above and still have the incorrect date and time every time you turn on the Tablet PC, the RTC (Real-Time Clock) battery is at the end of its life. Call an authorized dealer to replace the RTC battery.

Resetting the Tablet PC

You may have to reset (reboot) your Tablet PC on some occasions when an error occurs and the program you are using hangs up.

If the Tablet PC operation seems to hang up, first wait. It is possible that the Tablet PC is processing data. Periodically check the hard disk drive in-use indicator, if it flashes irregularly, the program may be accessing data and preventing you from using the keypad. If you are sure the operation has stopped and you cannot use the “restart” function of the operating system, reset the Tablet PC.

Reset the Tablet PC by any one of these methods:

- Press the **Fn** button, then press **C+A+D** button on the keypad.
- If the above action does not work, press and hold the power button for more than 5 seconds to force the system to turn off. Then turn on the power again.

CAUTION: Resetting will cause any unsaved data to be lost.

Appendix A

Specifications

NOTE: Specifications are subject to change without any prior notice.

Parts		Specifications
CPU		Intel® Pine View N450, 512 KB L2 cache, FSB 667 MHz, 1.66 GHz speed, with integrated graphics (Dx9)
Chipset		Intel® Tiger Point NM10 Express
BIOS		Phoenix, 1MB Flash EEPROM
RAM		Up to 2 GB DDR2-667 SO-DIMM DRAM
Video	Controller	Integrated in Pine View
	Display Panel	8.4-inch wide TFT LCD, SVGA transmissive display, integrated touchscreen, light sensor for auto backlight adjustment, up to 800 Nits brightness (sunlight readable option)
Audio	Features	High Definition audio, volume control via keypad and software
	Speaker	Integrated stereo speakers
	Microphone	Integrated microphone
	Port	Headphone out
Hard disk drive		SATA SSD (solid state disk), 80GB
I/O ports		USB (2.0) × 2, RJ-45, headphone out, RS232, PCMCIA, Smart Card, Docking
LAN		10/100/1000 Mbps Ethernet
Wireless LAN (option)		IEEE 802.11a/g/n
Bluetooth (option)		Bluetooth 2.1 + EDR (Enhanced Data Rate) module
GPS (option)		GPS receiver module (with antenna pass-through)
WWAN (option)		EV-DO/GPRS/HSDPA module (with antenna pass-through)
Camera (option)		CMOS, 2M pixel
Security		Kensington lock TPM 1.2 Fingerprint scanner (option)
Power	AC adapter	Universal 50 W; input: 100~240 V, 50/60 Hz; output: 12V
	Battery	Lithium-ion cylindrical battery, 4 cells, 2600mAh for normal temperature / 2100mAh for low temperature

Parts		Specifications
Dimension (LxWxD)		280×184×32 mm (11×7.2×1.3 inch)
Weight		1.4 kg (3.09 lb)
Environ- ment	Temperature	Operating: -20 °C (-4 °F) to 60 °C (140 °F) Storage: -40 °C (-40 °F) to 75 °C (167 °F) Thermal shock: -20 °C (-4 °F) to 60 °C (140 °F)
	Humidity	Relative: 0 % to 95 % non-condensing
	Compliance	MIL-STD-810G and IP65
Regulations		CE, FCC, TUV, UL

Appendix B

Regulatory Information

This appendix provides regulatory statements and safety notices on your Tablet PC.

NOTE: Marking labels located on the exterior of your Tablet PC indicate the regulations that your model complies with. Please check the marking labels and refer to the corresponding statements in this appendix. Some notices apply to specific models only.

On the Use of the System

Class B Regulations

USA

Federal Communications Commission Radio Frequency Interference Statement

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Please note:

The use of a non-shielded interface cable with this equipment is prohibited.

Canada

Canadian Department of Communications

Radio Interference Regulations Class B Compliance Notice

This Class B digital apparatus meets all requirements of the Canada Interference-Causing equipment regulations.

Cet appareil numérique de Classe B respecte toutes les exigences du Règlement Canadien sur le matériel brouilleur.

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la classe B prescrites dans le Règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.

Safety Notices

About the Battery

Caution Texts Concerning Lithium Batteries

DANISH

ADVARSEL! Lithiumbatteri – Eksplosionsfare ved fejlagtig håndtering. Udskiftning må kun ske med batteri af samme fabrikat og type. Levér det brugte batteri tilbage til leverandøren.

NORWEGIAN

ADVARSEL: Eksplosjonsfare ved feilaktig skifte av batteri. Benytt samme batteritype eller en tilsvarende type anbefalt av apparatfabrikanten. Brukte batterier kasseres i henhold til fabrikantens instruksjoner.

SWEDISH

WARNING: Explosionsfara vid felaktigt batteribyte. Använd samma batterityp eller en ekvivalent typ som rekommenderas av apparattillverkaren. Kassera använt batteri enligt fabrikantens instruktion.

FINNISH

VAROITUS: Paristo voi räjähtää, jos se on virheellisesti asennettu. Vaihda paristo ainoastaan valmistajan suositteluun tyyppiin. Hävitä käytetty paristo valmistajan ohjeiden mukaisesti.

ENGLISH

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the equipment manufacturer. Discard used batteries according to manufacturer's instructions.

DEUTSCH

VORSICHT: Explosionsgefahr bei unsachgemäßem Austausch der Batterie. Ersatz nur durch denselben oder einen vom Hersteller empfohlenen gleich-wertigen Typ. Entsorgung gebrauchter Batterien nach Angaben des Herstellers.

FRENCH

ATTENTION: Il y a danger d'explosion s'il y a un remplacement incorrect de la batterie. Remplacer uniquement avec une batterie du même type ou d'un type équivalent recommandé par le constructeur. Mettre au rebut les batteries usagées conformément aux instructions du fabricant.

Attention (for USA Users)

The product that you have purchased contains a rechargeable battery. The battery is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this battery into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal.

About the AC Adapter

- Use only the AC adapter supplied with your Tablet PC. Use of another type of AC adapter will result in malfunction and/or danger.
- Do not use the adapter in a high moisture environment. Never touch the adapter when your hands or feet are wet.
- Allow adequate ventilation around the adapter when using it to operate the device or charge the battery. Do not cover the AC adapter with

paper or other objects that will reduce cooling. Do not use the AC adapter while it is inside a carrying case.

- Connect the adapter to a proper power source. The voltage requirements are found on the product case and/or packaging.
- Do not use the adapter if the cord becomes damaged.
- Do not attempt to service the unit. There are no serviceable parts inside. Replace the unit if it is damaged or exposed to excess moisture.

On the Use of the RF Device

NOTE: The information in this section applies to models with the wireless LAN module.

USA and Canada Safety Requirements and Notices

IMPORTANT NOTE: To comply with FCC RF exposure compliance requirements, the antenna used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

Radio Frequency Interference Requirements and SAR

The FCC with its action in ET Docket 93-62 has adopted a safety standard for human exposure to Radio Frequency (RF) electromagnetic energy emitted by FCC certified equipment. The wireless LAN module meets the Human Exposure limits found in OET Bulletin 65, 2001, and ANSI/IEEE C95.1, 1992. Proper operation of this radio according to the instructions found in this manual will result in exposure substantially below the FCC's recommended limits. The following safety precautions should be observed:

- Do not touch or move antenna while the unit is transmitting or receiving.
- Do not hold any component containing the radio such that the antenna is very close or touching any exposed parts of the body, especially the face or eyes, while transmitting.
- Do not operate the radio or attempt to transmit data unless the antenna is connected; if not, the radio may be damaged.

Use in specific environments:

- The use of wireless devices in hazardous locations is limited by the constraints posed by the safety directors of such environments.

- The use of wireless devices on airplanes is governed by the Federal Aviation Administration (FAA).
- The use of wireless devices in hospitals is restricted to the limits set forth by each hospital.

Antenna use:

- In order to comply with FCC RF exposure limits, low gain integrated antennas should be located at a minimum distance of 20 cm (8 inches) or more from the body of all persons.
- High-gain, wall-mount, or mast-mount antennas are designed to be professionally installed and should be located at a minimum distance of 30 cm (12 inches) or more from the body of all persons. Please contact your professional installer, VAR, or antenna manufacturer for proper installation requirements.

Explosive Device Proximity Warning

WARNING: Do not operate a portable transmitter (such as a wireless network device) near unshielded blasting caps or in an explosive environment unless the device has been modified to be qualified for such use.

Antenna Warning

WARNING: To comply with the FCC and ANSI C95.1 RF exposure limits, it is recommended that the antenna for this device be installed so as to provide a separation distance of at least 20 cm (8 inches) from all persons and that the antenna must not be co-located or operating in conjunction with any other antenna or radio transmitter. It is recommended that the user limit exposure time if the antenna is positioned closer than 20 cm (8 inches).

Use on Aircraft Caution

CAUTION: Regulations of the FCC and FAA prohibit airborne operation of radio-frequency wireless devices because their signals could interfere with critical aircraft instruments.

EMC Requirements

This device uses, generates and radiates radio frequency energy. The radio frequency energy produced by this device is well below the maximum exposure allowed by the Federal Communications Commission (FCC).

This device complies with the limits for a Class B digital device pursuant to Part 15 subpart C of the FCC Rules and Regulations. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

The FCC limits are designed to provide reasonable protection against harmful interference when the equipment is installed and used in accordance with the instruction manual and operated in a commercial environment. However, there is no guarantee that interference will not occur in a particular commercial installation, or if operated in a residential area.

If harmful interference with radio or television reception occurs when the device is turned on, the user must correct the situation at the user's own expense. The user is encouraged to try one or more of the following corrective measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: The Part 15 radio device operates on a non-interference basis with other devices operating at this frequency. Any changes or modification to said product not expressly approved by the manufacturer could void the user's authority to operate this device.

Canada Radio Frequency Interference Requirements

To prevent radio interference to the licensed service, this device is intended to be operated indoors and away from windows to provide maximum shielding. Equipment (or its transmit antenna) that is installed outdoors is subject to licensing.

Pour empêcher que cet appareil cause du brouillage au service faisant l'objet d'une licence, il doit être utilisé à l'intérieur et devrait être placé loin des fenêtres afin de fournir un écran de blindage maximal. Si le matériel (ou son antenne d'émission) est installé à l'extérieur, il doit faire l'objet d'une licence.

European Union CE Marking and Compliance Notices

Statements of Compliance

English

This product follows the provisions of the European Directive 1999/5/EC.

Danish

Dette produkt er i overensstemmelse med det europæiske direktiv 1999/5/EC.

Dutch

Dit product is in navolging van de bepalingen van Europees Directief 1999/5/EC.

Finnish

Tämä tuote noudattaa EU-direktiivin 1999/5/EC määräyksiä.

French

Ce produit est conforme aux exigences de la Directive Européenne 1999/5/EC.

German

Dieses Produkt entspricht den Bestimmungen der Europäischen Richtlinie 1999/5/EC.

Greek

Το προϊόν αυτό πληροί τις προβλέψεις της Ευρωπαϊκής Οδηγίας 1999/5/EC.

Icelandic

Þessi vara stendst reglugerð Evrópska Efnahags Bandalagsins númer 1999/5/EC.

Italian

Questo prodotto è conforme alla Direttiva Europea 1999/5/EC.

Norwegian

Dette produktet er i henhold til bestemmelsene i det europeiske direktivet 1999/5/EC.

Portuguese

Este produto cumpre com as normas da Diretiva Europeia 1999/5/EC.

Spanish

Este producto cumple con las normas del Directivo Europeo 1999/5/EC.

Swedish

Denna produkt har tillverkats i enlighet med EG-direktiv 1999/5/EC.

Local Restrictions of 802.11a/g/n Radio Usage

CAUTION: Due to the fact that the frequencies used by 802.11a/g/n wireless LAN devices may not yet be harmonized in all countries, 802.11a/g/n products are designed for use only in specific countries or regions, and is not allowed to be operated in countries or regions other than those of designated use. As a user of these products, you are responsible for ensuring that the products are used only in the countries or regions for which they were intended and for verifying that they are configured with the correct selection of frequency and channel for the country or region of use. Any deviation from permissible settings and restrictions in the country or region of use could be an infringement of local law and may be punished as such.

The European variant is intended for use throughout the European Economic Area. However, authorization for use is further restricted in particular countries or regions within countries, as follows:

General

European standards dictate maximum radiated transmit power of 100 mW Effective Isotropic Radiated Power (EIRP) and the frequency range 2400 – 2483.5 MHz.

Belgium and the Netherlands

In Belgium and the Netherlands, the product may not be used outdoors.

France

Departments in Which the Wireless LAN Module Can Be Used (Indoors Only)

The wireless LAN module can currently be used indoors only in the following 38 departments of mainland France. Please turn off your wireless LAN radio when operating the device in areas/places other than the 38 departments listed:

01	Ain Orientales	36	Indre	66	Pyrénées
02	Aisne	37	Indre et Loire	67	Bas Rhin
03	Allier	41	Loir et Cher	68	Haut Rhin
05	Hautes Alpes	42	Loire	70	Haute Saône
08	Ardennes	45	Loiret	71	Saône et Loire
09	Ariège	50	Manche	75	Paris
11	Aude	55	Meuse	82	Tarn et Garonne
12	Aveyron	58	Nièvre	84	Vaucluse
16	Charente	59	Nord	88	Vosges
24	Dordogne	60	Oise	89	Yonne
25	Doubs	61	Orne	90	Territoire de Belfort
26	Drôme	63	Puy du Dôme	94	Val de Marne
32	Gers	64	Pyrénées Atlantique		

Departments in Which the Wireless LAN Module’s Maximum EIRP Not Shown in the Previous Table

Frequency Ranges (MHz)	Indoors	Outdoors
2400 – 2446.5	10 mW	Not permitted
2446.5 – 2483.5	100 mW	100 mW on private property with Ministry of Defense approval

Turning Off the Wireless LAN Radio

NOTE: Turning the wireless LAN radio off is not the same as disabling the wireless LAN card. It is not necessary to disable the card to meet the regulatory requirements.

While operating the Tablet PC in those French departments that do not allow use of the wireless LAN equipment, the user of the equipment must turn off the wireless LAN radio in order to comply with local regulations.