

ASMB-820I Intel® Xeon® E5-2400 series LGA 1356 Socket ATX Server Board with 4 PCIe & 2 PCI Expansion Slots

Startup Manual

Packing List

Before you begin installing your card, please make sure that the following items have been shipped:

- 1 ASMB-820I Startup Manual
- 1 Driver CD (user's manual is included)
- 2 Serial ATA HDD data cables
- 2 Serial ATA HDD power cables
- 1 I/O port bracket
- 1 Warranty card

If any of these items are missing or damaged, please contact your distributor or sales representative immediately.

Note: Acrobat Reader is required to view any PDF file. Acrobat Reader can be downloaded at: www.adobe.com/Products/acrobat/readstep2.html (Acrobat is a trademark of Adobe)

Specifications

Standard SBC Functions

- **CPU:** LGA1356 Intel® Xeon® E5-2400 series
- **BIOS:** AMI 64 Mb SPI BIOS
- **Chipset:** Intel® C602J
- **System memory:** 6* DDR3 REG/ECC/Non-ECC 1066/1333/1600 unbuffered DIMM, Max. 96 GB
- Note:** Due to the inherent limitations of PC architecture, the system may not fully detect 96 GB RAM when 96 GB RAM is installed.
- **SATA Interface:** 4 SATA2 3 Gb/s ports, 2 SATA3 6Gb/s, supports Intel Matrix Storage (for Windows only) software RAID 0, 1, 10 & 5.
- **Serial ports:** Two serial ports, only support RS-232
- **Keyboard/mouse connector:** Supports standard PS/2 keyboard and mouse
- **Watchdog timer:** 255 level timer intervals
- **USB 2.0:** Supports up to eleven USB 2.0 ports (2* Type-A)

VGA Interface

- **Chipset:** Aspeed AST2300
- **Display Memory:** 64 MB
- **Resolution:** Supports VGA up to resolution 1920 x 1200 @ 60 Hz refresh rate

Ethernet interface

- **Interface:** 10/100/1000 Mbps
- **Controller:** LAN1: Intel 82579LM; LAN2: Intel 82574L; LAN3: Realtek 8201EL (10/100Mbps for IPMI, ASMB-820I sku only)

Mechanical and Environmental

- **Dimensions (L x W):** 304 x 244 mm (12" x 9.6")
- **Power supply voltage:** +3.3 V, +5 V, ±12 V, +5 Vsb
- **Power consumption (Main board only, excluded IO device):** Max. load: +3.3 V @ 24.75 A, +5 V @ 16.77 A, +12 V @ 13.06 A, +12 V(8P) @ 22 A, +5 Vsb @ 2 A
- **Operating temperature:** 0 ~ 60° C (depending on CPU)
- **Weight:** 1 kg (weight of board)

For more information on this and other Advantech products, please visit our website at:

<http://www.advantech.com>

<http://www.advantech.com/eplatform>

For technical support and service, please visit our support website at:

<http://www.advantech.com/support>

This manual is for the ASMB-820I series Rev. A1

Part No. 2006820110
Print in China

1st Edition,
Feb. 2012

Software Installation

The CD disc contains a driver installer program that will lead you through the installation of various device drivers needed to take full advantage of your motherboard.


The computer is supplied with a battery-powered realtime clock circuit. There is a danger of explosion if battery is incorrectly replaced. Replace only with same or equivalent type recommended by the manufacturer. Discard used batteries according to manufacturer's instructions.

Declaration of Conformity

This device complies with the requirements in Part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Board Layout

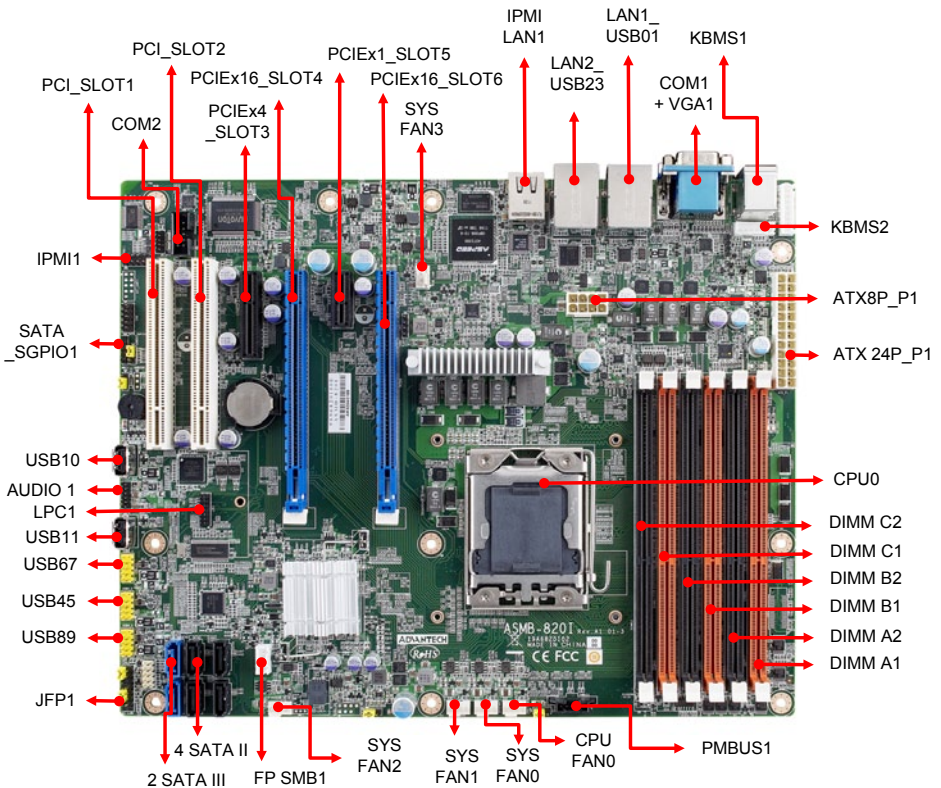

Board Layout: Jumper and Connector Locations