



■ Features :

- 2/8 stage charging
- Universal AC input / Full range
- Built-in active PFC function PF>0.95
- Protection: Reverse polarity / Short circuit / Over voltage / Over temperature
- Charger for lead-acid batteries
- 3 color LED loading indicator
- Built-in remote ON-OFF control
- Built-in temperature compensation function
- Built-in fan speed control (depends on charging current)
- 3 years warranty




SPECIFICATION

MODEL		PB-600-12		PB-600-24		PB-600-48	
OUTPUT	BOOST CHARGE VOLTAGE	14.4V		28.8V		57.6V	
	FLOAT CHARGE VOLTAGE	13.8V		27.6V		55.2V	
	RECOMMENDED BATTERY CAPACITY(AMP HOURS)(Note 3)	135 ~ 400AH		70 ~ 210AH		35 ~ 105AH	
	BATTERY TYPE	Open & Sealed Lead Acid					
	OUTPUT CURRENT	40A		21A		10.5A	
INPUT	VOLTAGE RANGE	90 ~ 264VAC		127 ~ 370VDC			
	FREQUENCY RANGE	47 ~ 63Hz					
	EFFICIENCY (Typ.)	86%		87%		89%	
	POWER FACTOR (Typ.)	0.95/230VAC		0.98/115VAC at full load			
	AC CURRENT (Typ.)	6.8A/115VAC		3.4A/230VAC			
	INRUSH CURRENT (Typ.)	25A/115VAC		50A/230VAC			
	LEAKAGE CURRENT	<3.5mA / 240VAC					
PROTECTION	OVER VOLTAGE	16 ~ 18V		32 ~ 35V		64.5 ~ 69.5V	
	OVER TEMPERATURE	Protection type : Shut down o/p voltage, re-power on to recover Protection type : Shut down o/p voltage, recovers automatically after temperature goes down					
FUNCTION	REMOTE CONTROL	Open: Normal work Short: Stop Charging					
	LEAKAGE CURRENT FROM BATTERY (Typ.)	1mA					
	FAST CHARGE	2 / 8 stage selectable					
	CHARGING OK	Relay contact (RY15)					
	OUTPUT OK	Relay contact (RY13)					
	TEMPERATURE SENSE	By NTC					
	ENVIRONMENT	WORKING TEMP.	-20 ~ +60℃ (refer to output load derating curve)				
WORKING HUMIDITY		20 ~ 90% RH non-condensing					
STORAGE TEMP., HUMIDITY		-40 ~ +85℃, 10 ~ 95% RH					
TEMP. COEFFICIENT		±0.05%/℃ (0 ~ 50℃)					
VIBRATION		10 ~ 500Hz, 2G 10min./1cycle, 60min. each along X, Y, Z axes					
SAFETY & EMC (Note 2)	SAFETY STANDARDS	UL1012, TUV EN60335-1, EN60335-2-29 (except for 48V) approved					
	WITHSTAND VOLTAGE	I/P-O/P:3KVAC I/P-FG:1.5KVAC O/P-FG:0.5KVAC					
	ISOLATION RESISTANCE	I/P-O/P, I/P-FG, O/P-FG:100M Ohms / 500VDC / 25℃ / 70% RH					
	EMI CONDUCTION & RADIATION	Compliance to EN55022 (CISPR22)					
	HARMONIC CURRENT	Compliance to EN61000-3-2,-3					
	EMS IMMUNITY	Compliance to EN61000-4-2,3,4,5,6,8,11; ENV50204, EN55024; light industry level, criteria A					
OTHERS	MTBF	135.6Khrs min. MIL-HDBK-217F (25℃)					
	DIMENSION	230*158*67mm(L*W*H)					
	PACKING	2.2Kg; 6pcs/14.2Kg/1.76CUFT					
NOTE	1. All parameters NOT specially mentioned are measured at 230VAC input, rated load and 25℃ of ambient temperature. 2. The power supply is considered a component which will be installed into a final equipment. The final equipment must be re-confirmed that it still meets EMC directives. 3. This is Mean Well's suggested range. Please consult your battery manufacturer for their suggestions about maximum charging current limitation.						


Mechanical Specification

Case No.805C Unit:mm

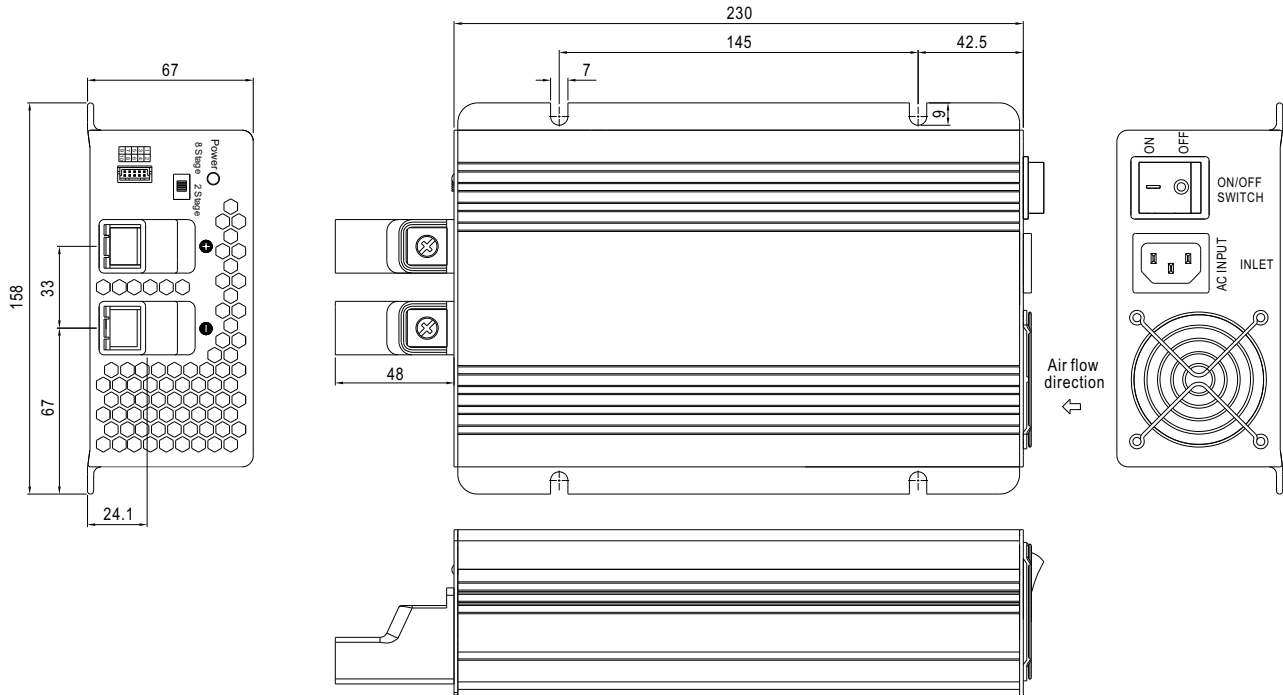

Charging Curve

2 Stage

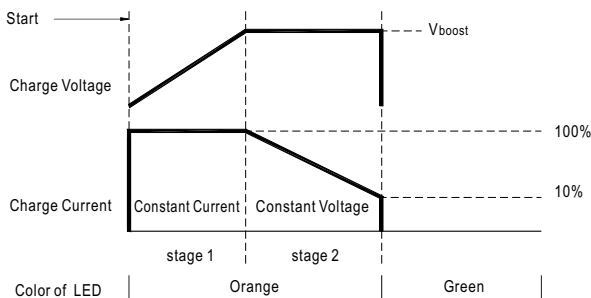

Control Pin No. Assignment(CN100) : HRS DF11-10DP-2DS or equivalent

Pin No.	Assignment	Pin No.	Assignment	Mating Housing	Terminal
1,2	RY13	8	NTC(5K Ω)	HRS DF11-10DS or equivalent	HRS DF11-10SC or equivalent
3,4	NC	9	RC-		
5,6	RY15	10	RC+		
7	GND				


RY13 : Battery bank OK

RY15 : Charging OK


NTC / GND : Temperature sense

RC+ / RC- : Remote ON/OFF


8 Stage

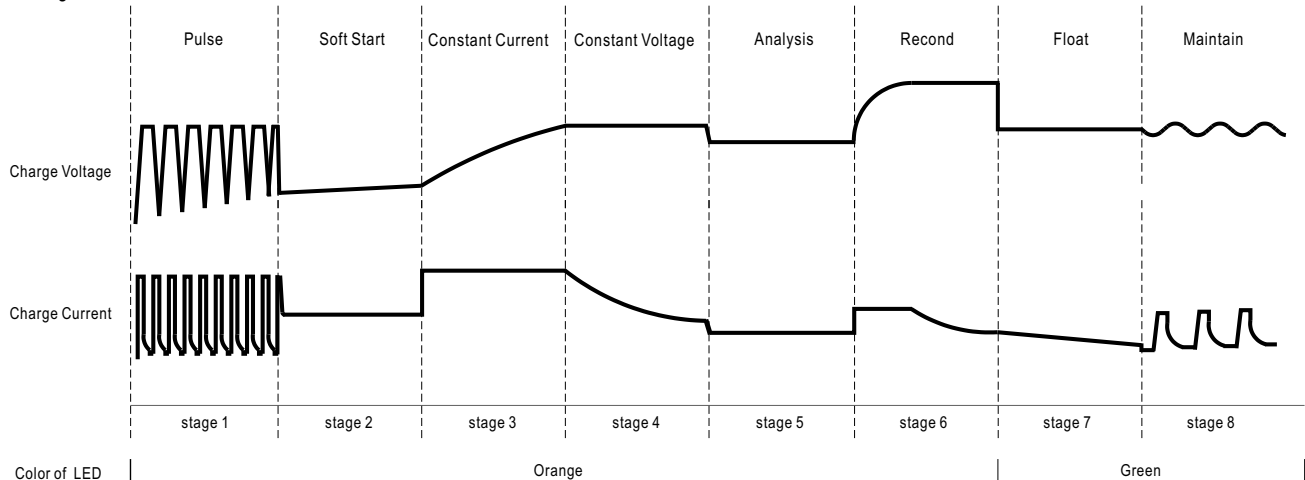


Block Diagram

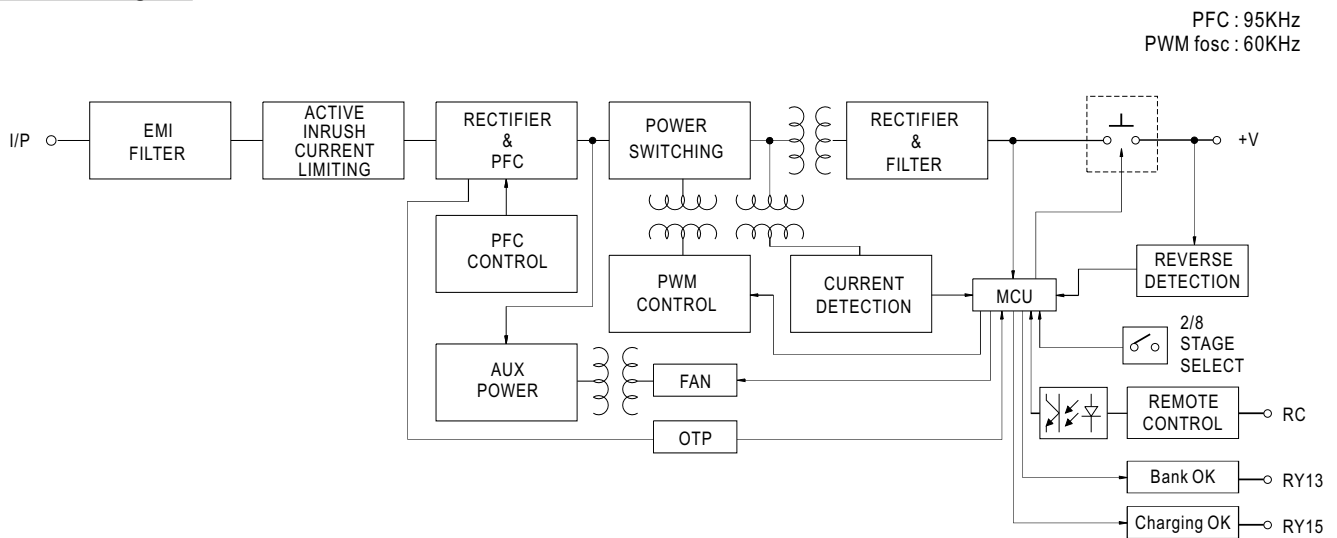

Derating Curve

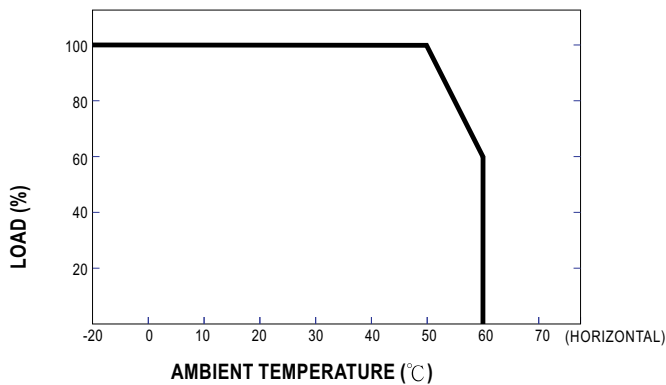

Static Characteristics

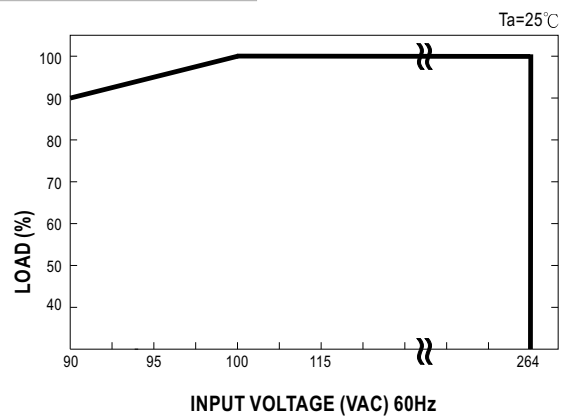

Function Description of CN100

Pin No.	Function	Description
1,2	RY13	Relay contact rating(max.) : 30V/1A resistive. ; "Short" when the battery is full, "Open" when the battery is still charging
5,6	RY15	Relay contact rating(max.) : 30V/1A resistive. ; "Short" when the unit is working properly, "Open" when the unit stop charging
7,8	GND / RTH	Temperature sensor comes along with the charger can be connected to the unit to allow temperature compensation of the charging voltage
9,10	RC- / RC+	Turn the output on and off by electrical or dry contact between pin 10 (RC+) and pin 9(RC-) Open : Normal work , Short : Stop charging

The Function of LEDs



Battery	Color of LED
Fail	Red
Charging	Orange
Battery Full	Green

Function Manual

1.Remote Control

The charger can be turned ON/OFF by using the "Remote Control" function.



Between RC+(pin10) and RC-(pin9)	Charging
SW Open	ON
SW Short	OFF

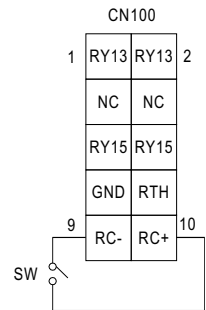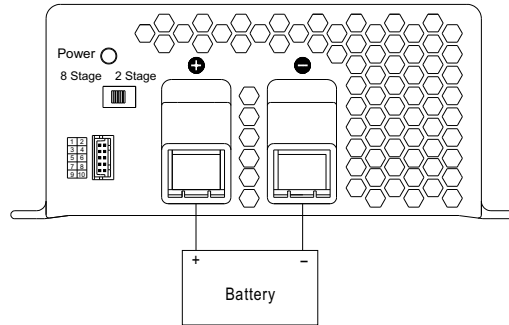

2. 2 or 8 stage charging select



The charger features user selectable 2 or 8 stage charging. The charging profile is selected by moving the slide switch on the back panel.

Switch	Charging mode
Turn right	2 stage charging
Turn left	8 stage charging

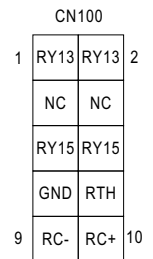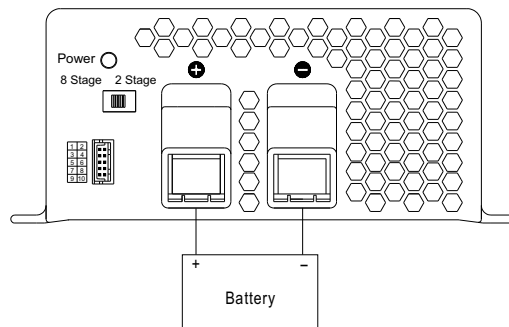

3.Charger OK Relay(RY15)



Charger	Between pin5 and pin6(RY15)
Normal work	ON (Short)
Failure or the protection function is activating	OFF (Open)

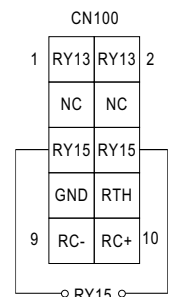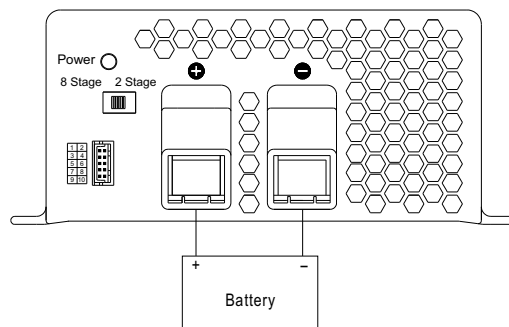

4. Output OK (RY13)



1. Bank OK (RY13)

Bank	Between pin1 and pin2(RY13)	Color of LED
Battery Full	ON (Short)	Green
Charging	OFF (Open)	Orange

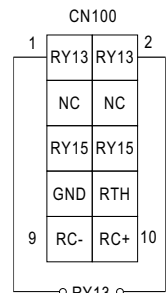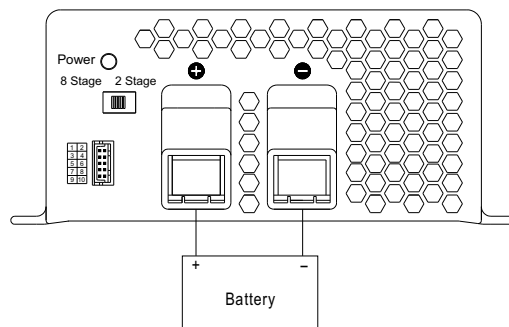

5. Temperature compensation

Temperature sensor comes along with the charger can be connected to the unit to allow temperature compensation of the charging voltage.
If the sensor is not used, the charger still works normally.

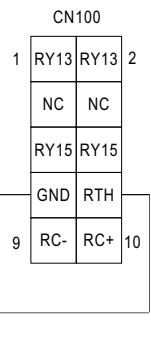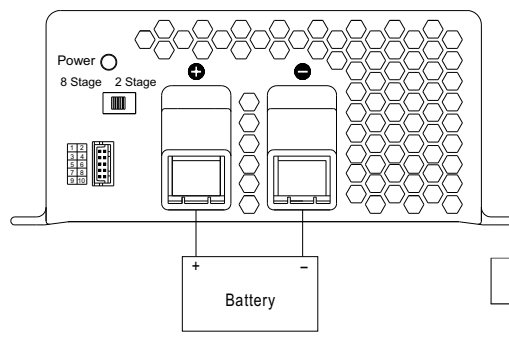

The temperature sensor can either be attached to the battery or placed in its surrounding environment.