


## PCI/PC-104 Kit Installation Guide


1<sup>st</sup> Ed. / December 2007

Below are the instructions for attaching Advantech's PCI/PC-104 kit to any standard PCI/PC-104 card for installation to TPC series products.

1. Place the PCI card into the slot.

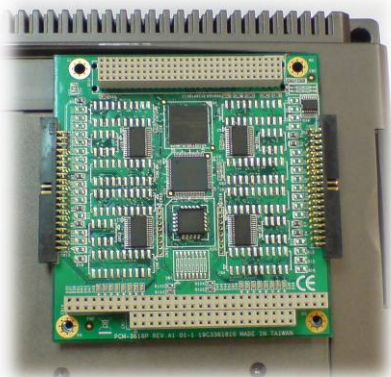

2. Take out the plastic cover.

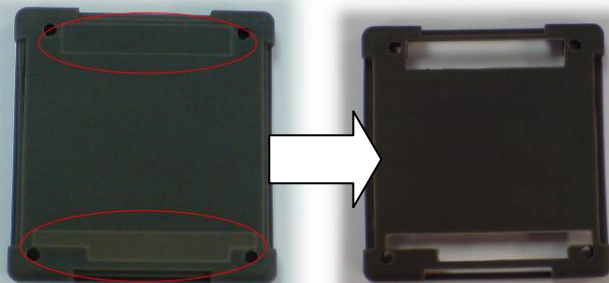

- Put the plastic casing on the card.



- The stands on the base need to be visible through the plastic.
- After locking the stands, installation is complete.

