


# PPC-L156 Expansion Kit Installation Guide

## Assembly Instructions

1. Remove the PCI Card Cover.
2. Secure the Metal Frame to the Rear Cover with four M4 screws, and three M3 screws.
3. Insert the PCI Riser Card into the PPC-L156, then secure it to the Metal Frame with two M3 screws.
4. Insert a PCI card into the PCI Riser Card, then secure it with M3 screws.
5. Secure the Metal Cover to the Metal Frame with six M3 screws.

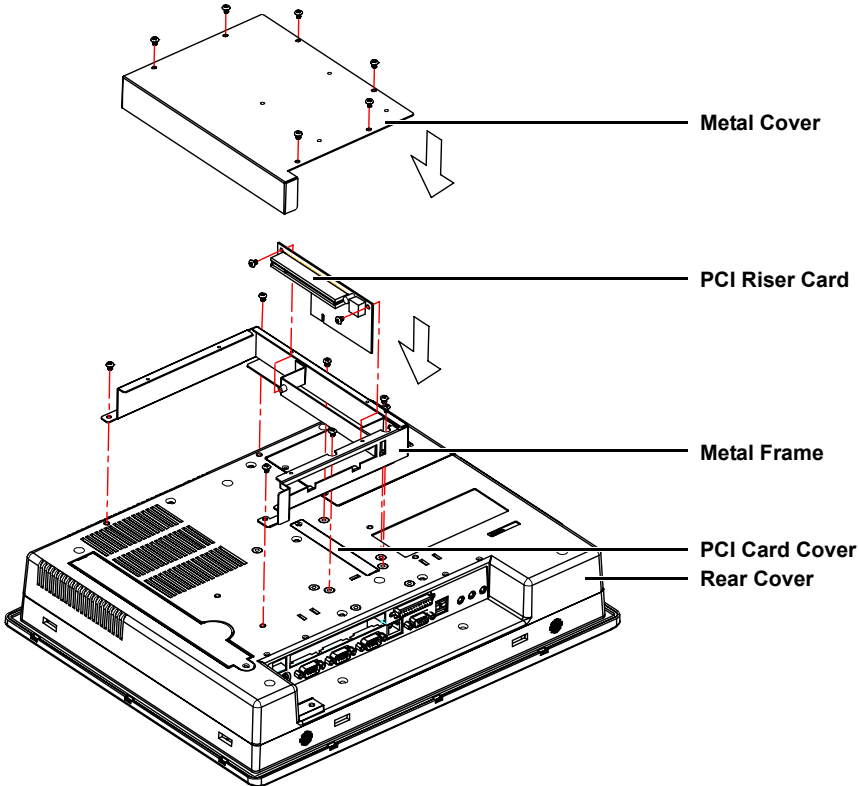

## Packing List

Contact Advantech if any of the following parts are missing.

- Metal Cover
- Metal Frame
- PCI Riser Card
- M4 X 4 Screw Pack
- M3 X 12 Screw Pack

## Notes

For more information on this and other Advantech products, please visit our websites at:

<http://www.advantech.com>

For technical support and service:

<http://www.advantech.com/support/>

This installation guide is for PPC-L156 expansion kit.

Part No. 2008L15610

1st Edition

July-2006