

UNO Resolution Adjustment Note

Introduction

This document introduces how to adjust UNO's resolution normally.


Resolution Adjustment Procedure

1. Please connect the UNO and PC by ActiveSync and copy the "Adjust Resolution" application from below path: (Further information about ActiveSync; please refer to "ActiveSync User Guide")


<\\Windows CE\CE .NET 4.1\Application\GX1display.cpl>

You may copy "GX1display.cpl" from the CD-ROM of PC to UNO by ActiveSync; suggest you may copy GX1display.cpl to "Harddisk" folder in UNO.

2. Select "**Start**" → "**Programs**" → "**Windows Explorer**"; select "**View**" → "**Option**" and choose "**Show all files**".
3. Execute "GX1display.cpl"; and the dialog window will be showed below. Click the down arrow of the right of the resolution field and you can adjust resolution arbitrarily.

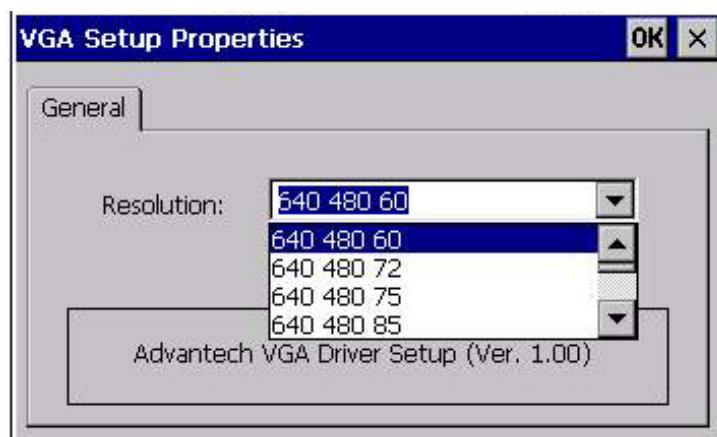

- Click the **Apply** button, and it will pop up a dialog window. If you confirm your resolution setting, press **Yes** button. Otherwise, press **No** button to abort the resolution setting.

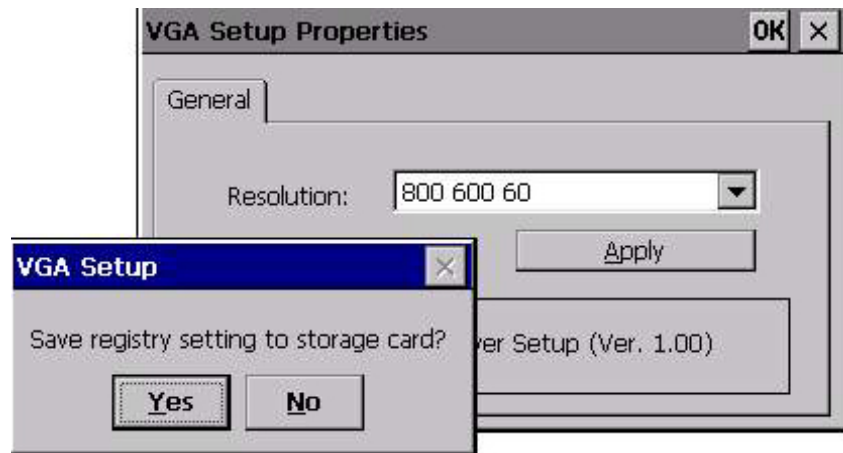

- If you press Yes button in the dialog window, then it will pop up a message window as below. Press OK button to finish resolution adjustment procedure.



- Restart UNO, then it will apply new resolution that you set.